

Default Configuration
Series 816L (PN 31348)

<u>Run Parameters</u>		<u>Configurations</u>		<u>Terminals</u>	
Unit	°F	P1	cA.tc	Terminals	1A&1B
AL2	1800	P2	nnnn	Out1	Not Assigned
AL2.H	1	P3	-328		
oFS	0	P4	2502	Terminals	2A&2B
FiLt	1.6	P11	none	Out2	Not Assigned
UcAL	IdLE	P12	none		
		P14	AL2.i	Terminals	4B&4A
		P21	none	Out4	Alr2
		P24	Hi		(High Limit)
		P25	Man		
		P26	no		
		P27	none		
		P35	LAt		
		P37	AL2		
		P51	none		
		P61	1		
		P62	19.20		
		P63	none		
		P64	none		
		P73	Ac.AL		
		P74	AL2		
		P76	2		
		P77	4		
		rEc.S	none		
		rec.L	none		
		PHAS	none		