



Super**Systems**
incorporated

SUPERDATA COMPACT LOAD ENTRY FOR SSI TOUCH SCREENS USER GUIDE

Super Systems Inc.
7205 Edington Drive
Cincinnati, OH 45249
513-772-0060
Fax: 513-772-9466
www.supersystems.com

SuperDATA Compact Load Entry User Guide

Super Systems Inc.

USA Office
Corporate Headquarters
7205 Edington Drive
Cincinnati, OH 45249
Phone: (513) 772-0060
<http://www.supersystems.com>

Super Systems Europe

Units 3 & 4, 17 Reddicap Trading Estate,
Sutton Coldfield, West Midlands
B75 7BU
UNITED KINGDOM
Phone: +44 (0) 121 329 2627
<http://www.supersystemseurope.com>

Super Systems México

Sistemas Superiores Integrales S de RL de CV
Calle 3 Int.: 11.
Zona Ind. Benito Juarez
Querétaro, Qro. Méx.
C.P.: 76120
Phone: +52 (442) 210 2459
<http://www.supersystems.com.mx>

Super Systems China

No. 335 XianXia Road
Room 308
Shanghai, CHINA
200336
Phone: +86 21 5206 5701/2
<http://www.supersystems.com>

SuperDATA Compact Load Entry User Guide

Contents

Introduction..... 4
Prerequisites..... 4
Operation..... 4
 Configuring a Network Connection and Furnace..... 5
 Logging In..... 6
 Creating a Load 7
 Using the Add Button (for Manual Entry, Automatic Entry Using Load Queue, or Bar Codes for Single Orders) 8
 Using the Multi Button (for Bar Codes for Multiple Orders) 9
 Selecting a Recipe 10
 Starting the Recipe..... 11
Revision History 12

Introduction

Compact Load Entry (CLE) runs as an option in conjunction with SSi's Standard Load Entry software and 9000 Series controllers. With CLE, users can enter and charge loads, preview recipes, and scan bar codes created by Standard Load Entry's Print Traveller feature, all from the SSi touch screen. In order to do this, CLE communicates with the Standard Load Entry server via an Ethernet connection.

IMPORTANT!

Many of the functions of CLE, such as logging in with a user name and password, are based on Standard Load Entry configurations. Refer to the Standard Load Entry Operations Manual for details on how to configure these options.

Prerequisites

 
CLE runs on SSi touch screens. For optimal operation, compatible 9000 Series software must be loaded on the same touch screen as CLE. CLE must be in communication with the Standard Load Entry server (using the Configure option described in this manual); an Ethernet connection is required for this.


Operation

CLE facilitates load creation, load charging to a furnace, recipe previewing, and scanning of bar codes created by Standard Load Entry's Print Traveller feature. CLE is designed so that operators can handle these functions directly from the SSi touch screen.

The main CLE screen will look similar to the screen showed at right. Options include:

- **Login** (allows the user to log in with a user name and password set up on the Standard Load Entry server)
- **Create Load** (allows the user to create loads and associate recipes with the loads; *requires operator or higher access*)
- **Configure** (allows the user to set up the network connection to the Standard Load Entry server, as well as the furnace for which the load will be programmed) and
- **Return** (exits CLE and returns to the 9000 Series menu).

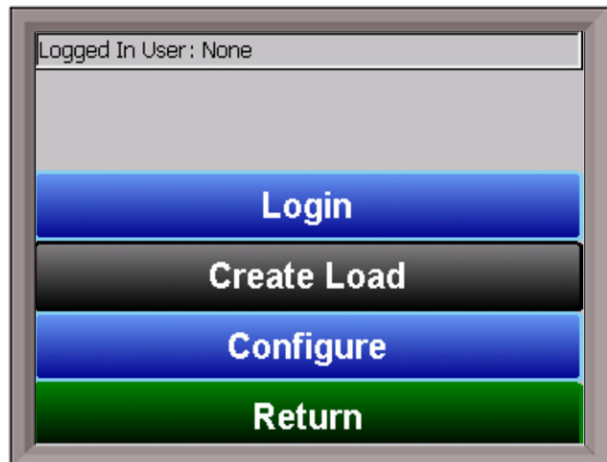

NOTE about Keyboard Button: Note that in many screens, a keyboard button () will be present. Tap this button to open the on-screen keyboard.

SuperDATA Compact Load Entry User Guide

Using CLE is fairly straightforward. For optimal operation, it is recommended that the steps described in the table below be followed.

Step	Refer to Section
A. <i>(If setting up network connection and furnace for the first time)</i> With CLE running, configure the network connection to the Standard Load Entry server, as well as the furnace setup.	Configuring a Network Connection and Furnace, page 5
1. Log in with an appropriate user name and password that provide the needed access level. (User names and passwords are configured in Standard Load Entry.)	Logging In, page 6
2. Create a load.	Creating a Load, page 7
3. Select a recipe.	Selecting a Recipe, page 10
4. Confirm the load and start the recipe.	Starting the Recipe, page 11


Configuring a Network Connection and Furnace

Before load information can be entered, a server connection and furnace name must be set up in CLE. To do this, tap on the **Configure** button.

A screen similar to this one will appear. In the **Server URL** field, enter the IP address of the Standard Load Entry server. (This must be the Load Entry server and not a workstation.) If you need assistance identifying the IP address of the server, consult with your network administrator.

In the **Furnace Name** field, enter the name of the furnace (as it is configured in Standard Load Entry) for which you will be setting up a load.

Tap **OK** when finished.

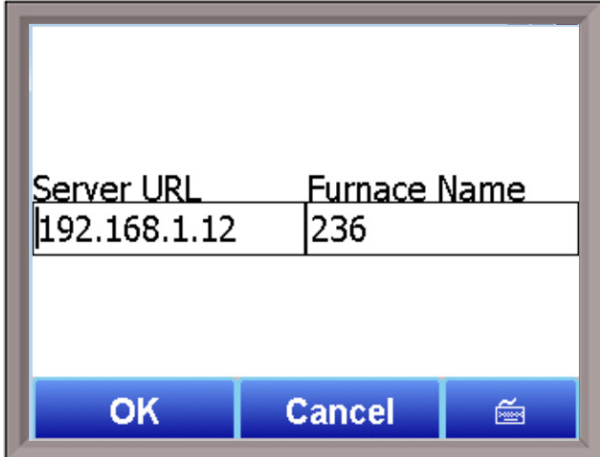


The screenshot shows a configuration dialog box with two input fields. The first field is labeled "Server URL" and contains the IP address "192.168.1.12". The second field is labeled "Furnace Name" and contains the number "236". At the bottom of the dialog, there are three buttons: "OK", "Cancel", and a small icon representing a document or settings.

SuperDATA Compact Load Entry User Guide

Logging In


The next step is to log in on the CLE screen. The user name and password you use will be a user name and password configured on the Standard Load Entry server.

Tap the **Login** button. A screen similar to this one will appear.

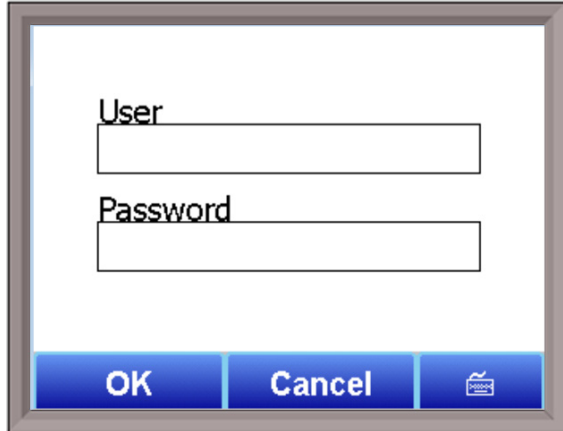

A screenshot of a login dialog box. It features two text input fields: the top one is labeled "User" and the bottom one is labeled "Password". Below the fields is a blue bar containing three buttons: "OK", "Cancel", and a keyboard icon.


Tap the keyboard button and enter the user name and password. Operator or higher access is required. Tap **OK** when finished.

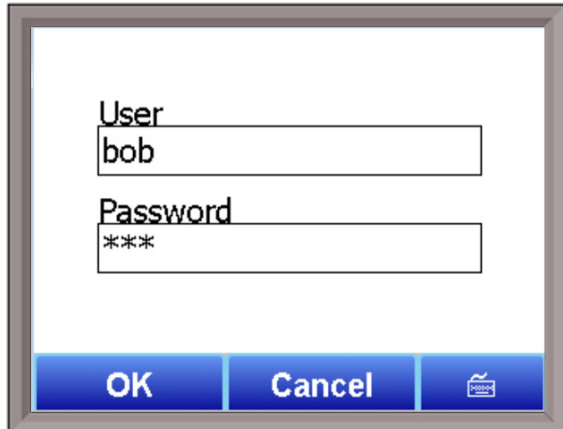

A screenshot of the login dialog box with the "User" field containing the text "bob" and the "Password" field containing "***". The "OK", "Cancel", and keyboard icon buttons are visible at the bottom.

If the user name and password are accepted, the current user will be displayed on the main CLE screen, as shown at right. Notice that the **Create Load** button is colored blue, meaning that it can now be used.

If there was a problem with the user name and/or password, an error message will be shown and the login will need to be entered again.

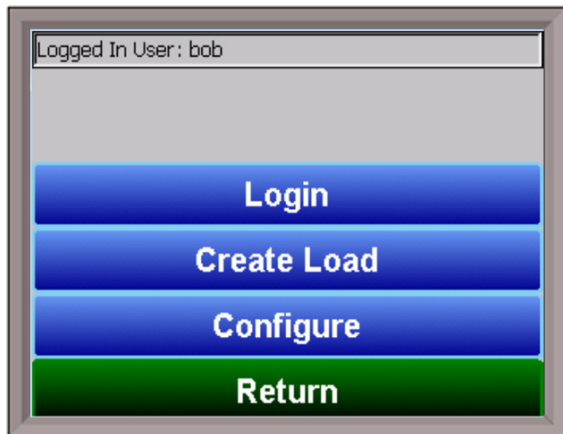

A screenshot of the main CLE screen. At the top, a grey bar displays "Logged In User: bob". Below this is a vertical stack of four buttons: "Login" (blue), "Create Load" (blue), "Configure" (blue), and "Return" (green).

 
Creating a Load

Now that you are logged in with the appropriate access, you are ready to create a load.

Tap the **Create Load** button. A screen similar to the one shown at right will appear.



Tap the **Entries** button. The Entries screen will appear.

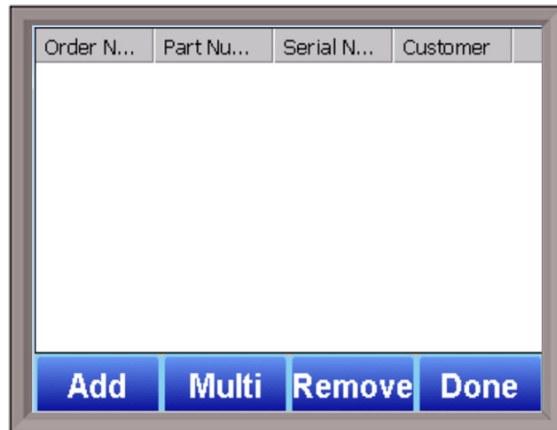

At this point, you will be able to enter entries for the load. There are three different methods available, depending on how Standard Load Entry is set up and what tools you have available.


1. **Manual Entry.** Using this method, you manually enter parameters for each order in the load.
2. **Automatic Entry Using Load Queue.** Using this method, you can enter an order number, and CLE will automatically enter the parameters for that order. For this method to be used, Load Queue mode must be enabled on the Standard Load Entry server.
3. **Bar Code Scanning (Load Traveller).** This method allows you to scan bar codes created by Print Traveller in Standard Load Entry. One bar code can be created for a *single order* or for *multiple orders*.

Manual entry, automatic entry using Load Queue, and scanning of a bar code for a *single order* are performed using the **Add** option. Scanning of a bar code for *multiple orders* is done using the **Multi** option. More details are provided below.


SuperDATA Compact Load Entry User Guide

Using the Add Button (for Manual Entry, Automatic Entry Using Load Queue, or Bar Codes for Single Orders)

Tap the **Add** button. The Add Order screen will appear.

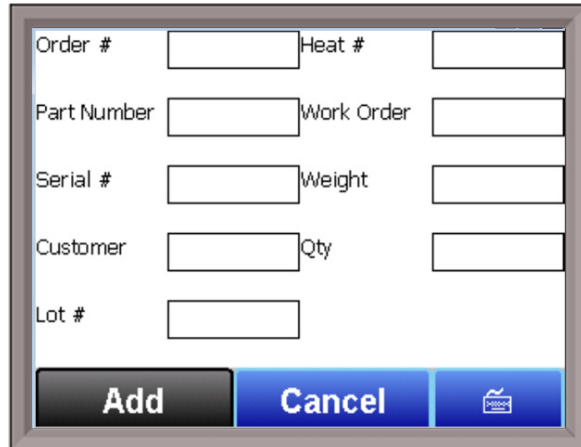

Order #	<input type="text"/>	Heat #	<input type="text"/>
Part Number	<input type="text"/>	Work Order	<input type="text"/>
Serial #	<input type="text"/>	Weight	<input type="text"/>
Customer	<input type="text"/>	Qty	<input type="text"/>
Lot #	<input type="text"/>		

Add **Cancel** 

If adding order information manually: Tap the keyboard button, and enter the order parameters on the screen. Press the **Add** button when finished.

If using automatic entry with Load Queue: Enter the order number. The order parameters will automatically be populated. Keep in mind, again, that Load Queue must be enabled on the Standard Load Entry server.

If scanning a bar code for a single order: With the cursor in the **Order #** field, scan the bar code on the Load Traveller sheet you created with Standard Load Entry. The order details will automatically be populated.


NOTE: Bar codes for single orders appear directly above the order on the sheet.



SuperDATA Compact Load Entry User Guide

The result of any of these methods will be that the Add Order screen will be populated with order information.

Tap **Add** when finished.

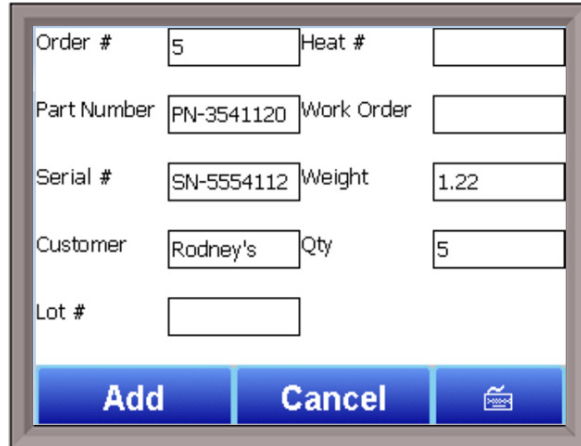


Order #	5	Heat #	
Part Number	PN-3541120	Work Order	
Serial #	SN-5554112	Weight	1.22
Customer	Rodney's	Qty	5
Lot #			

Buttons: Add, Cancel, [Printer Icon]

Using the Multi Button (for Bar Codes for Multiple Orders)

Standard Load Entry also has the ability to create a Load Traveller sheet for multiple orders. This sheet will contain a bar code at the top; when that bar code is scanned, parameters for multiple orders can be entered into a single load.

To enter load information using a bar code for multiple orders, first tab the **Multi** button. A message will appear asking you to scan the bar code.

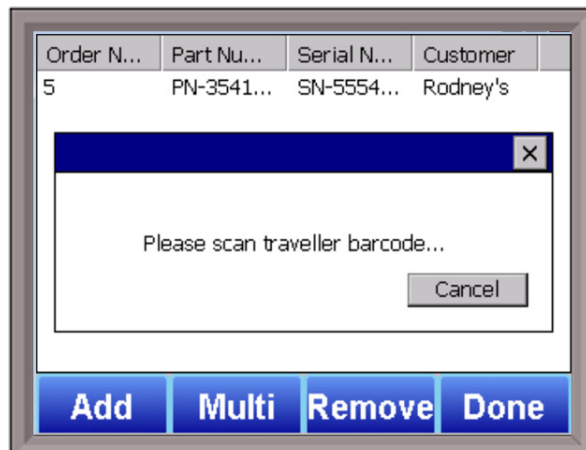


Order N...	Part Nu...	Serial N...	Customer
5	PN-3541...	SN-5554...	Rodney's

Dialog Box: Please scan traveller barcode... [Cancel]

Buttons: Add, Multi, Remove, Done

Scan the bar code at the top of the Load Traveller sheet you created with Standard Load Entry. Multiple orders will automatically be added to the order list.

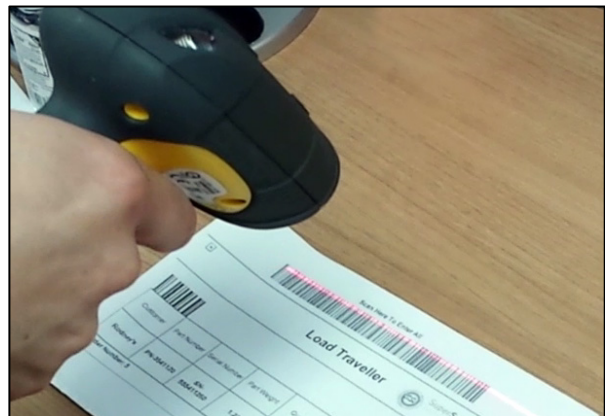


SuperDATA Compact Load Entry User Guide

Selecting a Recipe

Once the load has been created, you can select a recipe for that load. This will be a recipe that has been created in Standard Load Entry.

NOTE: Edits to the recipe must be performed in Standard Load Entry. Recipes cannot be edited in Compact Load Entry.

 If the Entries screen is still open, tap **Done**.


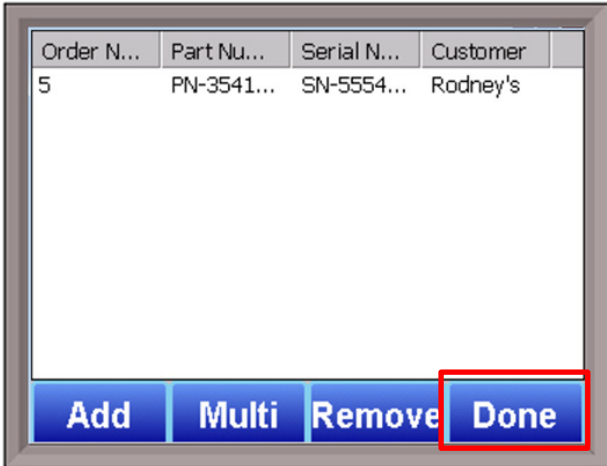


Tap **Select Recipe**.



SuperDATA Compact Load Entry User Guide

  Select the Process and recipe. Tap **Select Recipe** when finished. A preview of the recipe will be shown automatically. Tap **Done** when finished previewing.

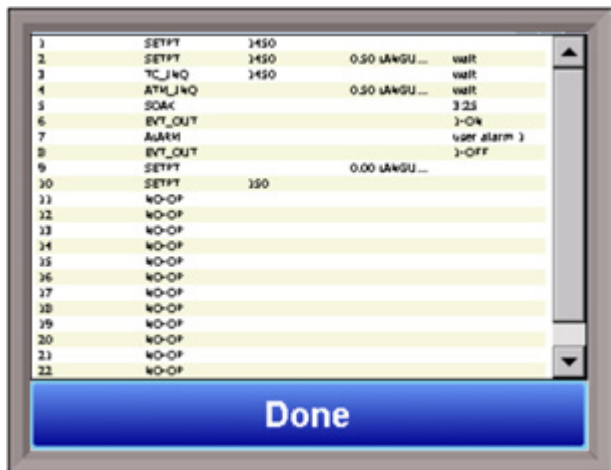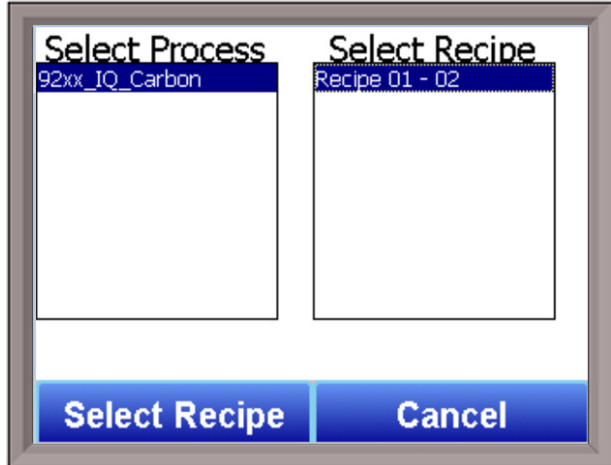


Starting the Recipe

If you want to preview the recipe again, tap **Preview Recipe**.

When the load data is loaded properly, and the recipe is confirmed, you are ready to start the recipe. Tap **Confirm Load and Start Recipe**.

 At this time, the selected recipe will be run on the load you set up.

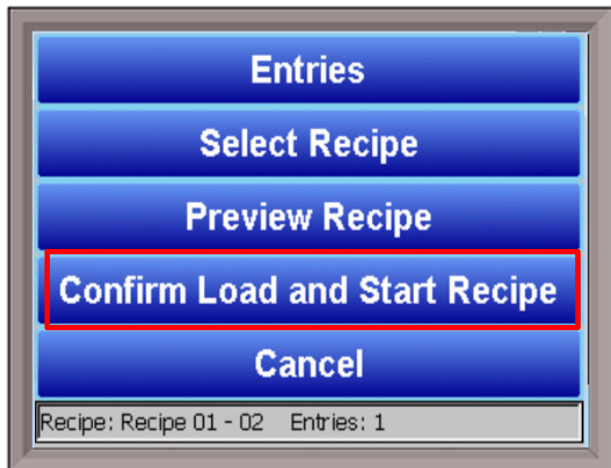

SuperDATA Compact Load Entry User Guide

Revision History

Rev.	Description	Date	MCO #
-	First Release	9/11/2014	2153