



SuperSystems
incorporated

Series 3L Limit Alarm

OPERATIONS MANUAL



P/N 31334

Super Systems Inc.

7205 Edington Drive

Cincinnati, OH 45249

Ph : 513-772-0060

Fax: 513-772-9466

www.supersystems.com

Super Systems Inc.

USA Office

Corporate Headquarters:

7205 Edington Drive

Shipping Address:

7245 Edington Drive

Cincinnati, OH 45249

Phone: (513) 772-0060

<http://www.supersystems.com>**Super Systems Europe**

Unit E, Tyburn Trading Estate,

Ashold Farm Road, Birmingham

B24 9QG

UNITED KINGDOM

Phone: +44 (0) 121 306 5180

<http://www.supersystemseurope.com>**Super Systems México**

Sistemas Superiores Integrales S de RL de CV

Acceso IV No. 31 Int. H Parque Industrial

Benito Juarez

C.P. 76120 Queretaro, Qro.

Phone: +52 442 210 2459

<http://www.supersystems.com.mx>**Super Systems China**

No. 369 XianXia Road

Room 703

Shanghai, CHINA

200336

Phone: +86 21 5206 5701/2

<http://www.supersystems.cn>**Super Systems India Pvt. Ltd.**

A-26 Mezzanine Floor, FIEE Complex,

Okhla Indl. Area, Phase - 2

New Delhi, India 110 020

Phone: +91 11 41050097

<http://www.supersystemsindia.com>

Series 3L Process Indicators and Alarm Units

Contents

1.	Installation and Basic Operation	5
1.1	Unpacking Your Indicator	5
1.2	Dimensions Front Views	5
1.3	Dimensions – Side Views	5
1.4	Step 1: Installation.....	6
1.4.1	Panel Mounting the Indicator	6
1.4.2	Panel Cut-out Sizes	6
1.4.3	Recommended Minimum Spacing of Indicators.....	6
1.4.4	To Remove the Indicator from its Sleeve.....	6
1.5	Step 2: Wiring.....	7
1.6	Terminal Layout Series 3L Indicators	7
1.7	Wire Sizes.....	8
1.8	Sensor Input (Measuring Input).....	8
1.9	Outputs.....	8
1.9.1	Output 1 & Output 3	8
1.9.2	AA Relay Form C (FM Approved).....	8
1.9.3	Transmitter Supply	8
1.9.4	Digital Inputs A and B.....	9
1.10	Indicator Power Supply.....	9
1.11	Digital Communications (Optional).....	9
2.	Safety and EMC Information	10
2.1	Installation Safety Requirements	10
3.	Switch On	12
3.1	New Indicator	12
3.1.1	To Re-Enter Quick Code Mode	14
3.2	Pre-Configured Indicator or Subsequent Starts	14
3.3	Front panel layout.....	14
3.3.1	Alarm Indication	15
3.3.2	Out of Range Indication	15
3.3.3	Sensor Break Indication	15
3.4	Operator Parameters in Level 1.....	15
4.	Operator Level 2	16
4.1	To Enter Level 2.....	16
4.1.1	To Return to Level 1.....	16
4.2	Level 2 Parameters.....	16
4.3	FM and Alarm Units	18
4.4	Recipes.....	18
5.	Access to Further Parameters	19
5.1	Level 3	19
5.2	Configuration Level	19
5.2.1	To Select Access Level 3 or Configuration Level.....	20
5.3	Parameter lists.....	21
5.3.1	To Choose Parameter List Headers	21
5.3.2	To Locate a Parameter	21
5.3.3	How Parameters are Displayed.....	21
5.3.4	To Change a Parameter Value.....	21
5.3.5	To Return to the HOME Display	21
5.3.6	Time Out.....	21
5.4	Navigation Diagram	22
5.5	Access Parameters.....	23
6.	Process Input.....	24
6.1	Process Input Parameters	24
6.1.1	Input Types and Ranges	25
6.1.2	Units	25
6.1.3	PV Offset	26
6.1.4	PV Input Scaling	26
7.	Input/Output Channels.....	27
7.1	Output Channel 1 (OP-1) – Series 3L Indicators	27

7.1.1	Sense	28
7.1.2	Source	28
7.1.3	Power Fail.....	28
7.1.4	Example: To Configure OP-1 Relay to Operate on Alarms 1 and 2:-	28
7.2	Output Channel 3 (OP-3) – Series 3L Indicators	29
7.2.1	Sense	30
7.2.2	Source	30
7.2.3	Power Fail.....	30
7.2.4	Example: To Configure OP-3 Relay to Operate on Alarms 1 and 2:-	30
7.3	AA Relay Channel (AA) (Output 4 FM Relay).....	31
8.	Digital Inputs.....	32
8.1	Digital Input Parameters.....	32
9.	Alarms	33
9.1	Types of Alarm	33
9.1.1	Alarm Relay Output.....	34
9.1.2	Alarm Indication	34
9.1.3	To Acknowledge An Alarm	34
9.2	Behavior of Alarms After a Power Cycle	35
9.2.1	Example 1.....	35
9.2.2	Example 2.....	35
9.2.3	Example 3.....	35
9.3	Alarm Parameters	36
9.3.1	Example: To Configure Alarm 1	37
9.4	Diagnostic Alarms	38
10.	Recipe.....	39
11.	Digital Communications	40
11.1	Digital Communications Wiring.....	40
11.1.1	EIA 485.....	40
11.2	Digital Communications Parameters	41
11.2.1	Broadcast Communications	42
11.2.2	Broadcast Master Communications.....	42
11.2.3	Wiring Connections	42
11.3	Example: To Set Up Instrument Address	43
11.4	DATA ENCODING.....	43
11.5	Parameter Modbus Addresses	44
12.	Calibration.....	48
12.1	To Check Input Calibration	48
12.1.1	Precautions.....	48
12.1.2	To Check mV Input Calibration.....	48
12.1.3	To Check Thermocouple Input Calibration	48
12.1.4	To Check RTD Input Calibration.....	49
12.2	Offsets	49
12.2.1	Five Point Offset	49
12.3	Input Calibration	50
12.3.1	To Calibrate mV Range.....	50
12.3.2	To Calibrate Thermocouple Ranges.....	50
12.3.3	To Calibrate RTD Ranges.....	51
12.4	Calibration Parameters.....	52
13.	TECHNICAL SPECIFICATION.....	53
14.	Parameter Index	57
15.	Revision History	59

1. Installation and Basic Operation

Thank you for choosing this Series 3L Process Indicator.

This unit comes in a single 1/4DIN size with three relay outputs.

Relay outputs can be configured for alarm and events. 2-wire Modbus digital communications are available in this unit.


The indicator may have been ordered to a hardware code only or pre-configured using an optional 'Quick Start' code. The label fitted to the side of the sleeve shows the ordering code of the indicator. If the Quick Code shows ***** the indicator will need to be configured when it is first switched on.

1.1 Unpacking Your Indicator


The following items are included in the box:

- Indicator mounted in its sleeve
- Two panel retaining clips
- AN IP65 sealing gasket mounted on the sleeve
- Component packet containing a snubber for each relay output and a 2.49Ω resistor for current inputs (see section 2)

1.2 Dimensions Front Views

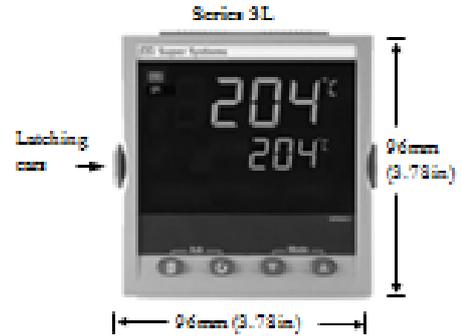

1.3 Dimensions – Side Views

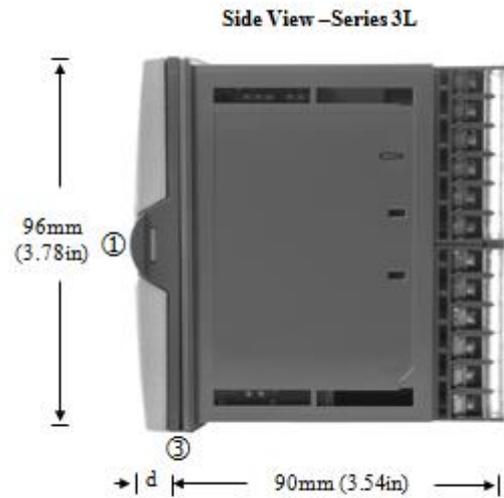

1.4 Step 1: Installation

This indicator is intended for permanent installation, for indoor use only, and enclosed in an electrical panel

Select a location which is subject to minimum vibrations, the ambient temperature is within 0 and 55°C (32 - 131°F) and humidity 5 to 95% RH non condensing.

The indicator can be mounted on a panel up to 15mm thick


To ensure IP65 and NEMA 4 front sealing against dust and water, mount on a non-textured surface.

Please read the safety information in section 2 before proceeding.

1.4.1 Panel Mounting the Indicator


1. Prepare a cut-out in the mounting panel to the size shown. If a number of instruments are to be mounted in the same panel, observe the minimum spacing shown.
2. Fit the IP65 sealing gasket behind the front bezel of the indicator.
3. Insert the indicator through the cut-out.
4. Spring the panel retaining clips into place. Secure the indicator in position by holding it level and pushing both retaining clips forward.
5. Peel off the protective cover from the display

1.4.2 Panel Cut-out Sizes

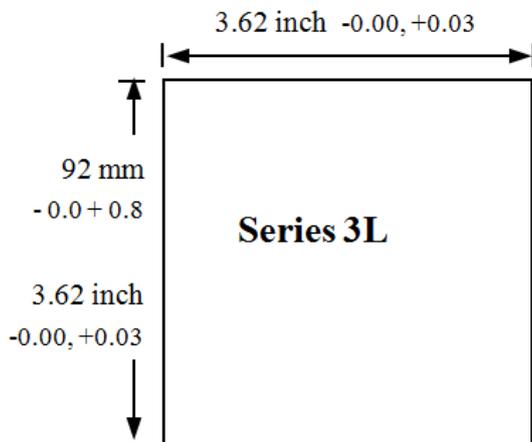

1.4.3 Recommended Minimum Spacing of Indicators

Applies to all Model sizes

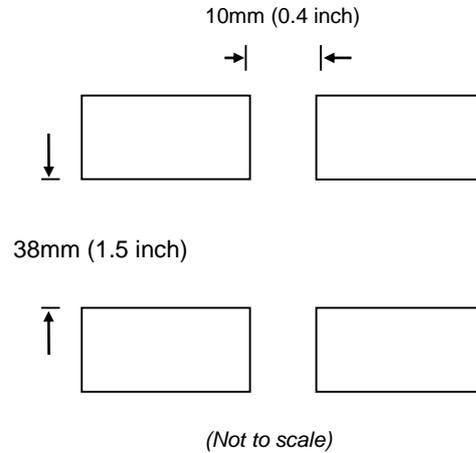

1.4.4 To Remove the Indicator from its Sleeve

The indicator can be unplugged from its sleeve by easing the latching ears outwards and pulling it forward out of the sleeve. When plugging it back into its sleeve, ensure that the latching ears click back into place to maintain the IP65 sealing.

1.5 Step 2: Wiring


Key to Symbols used in the wiring diagrams

	Relay Output		Contact Input
---	--------------	---	---------------

1.6 Terminal Layout Series 3L Indicators



Ensure that you have the correct supply for your indicator. Check order code of the indicator supplied

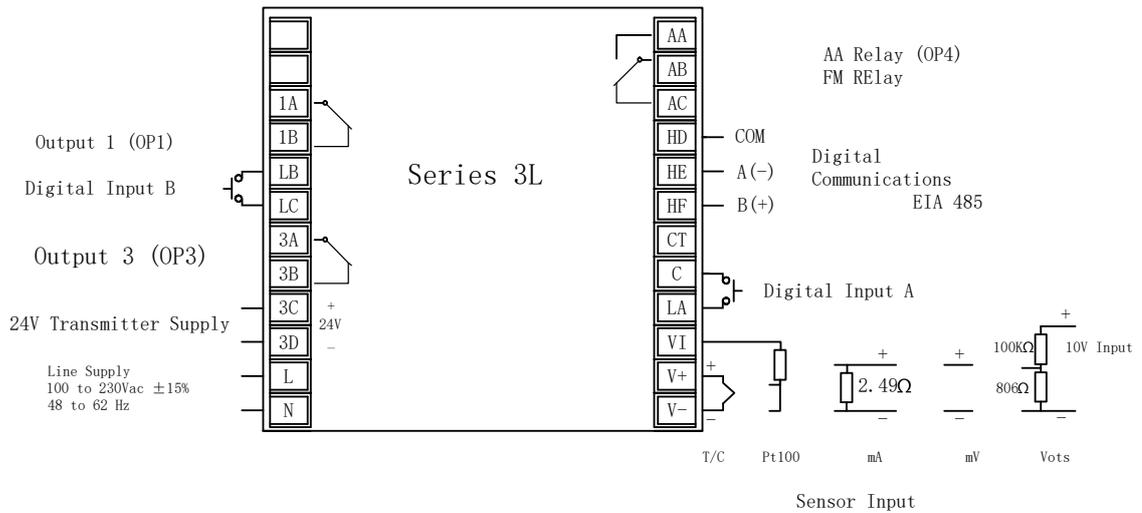


1.7 Wire Sizes

The screw terminals accept wire sizes from 0.5 to 1.5 mm (16 to 22AWG). Hinged covers prevent hands or metal making accidental contact with live wires. The rear terminal screws should be tightened to 0.4Nm (3.5 in-lbs).

1.8 Sensor Input (Measuring Input)

- Do not run input wires with power cables
- When shielded cable is used, it should be grounded at one point only
- Any external components (such as zener barriers) connected between sensor and input terminals may cause errors in measurement due to excessive and/or un-balanced line resistance, or leakage currents.
- Not isolated from the logic outputs & digital inputs


Thermocouple Input



Positive
Negative

- Use the correct compensating cable, preferably shielded.
- It is not recommended to connect two or more instruments to one thermocouple.


RTD Input



PRT
PRT
Lead compensation

- The resistance of the three wires must be the same. The line resistance may cause errors if it exceeds 22Ω.


Linear mA, or mV Inputs



Positive
Negative

- For a mA input, connect the 2.49Ω burden resistor supplied between the V+ and V- terminals as shown. For mV, omit this resistor.

Linear Voltage Inputs



An external potential divider is required for the Series 3L


Sensor break alarm does not operate if this adaptor is fitted.

1.9 Outputs

The indicators are supplied as standard with two changeover relay outputs as follows:

1.9.1 Output 1 & Output 3

Relay (Form A)



- Isolated output 300Vac CATII
- Contact rating:: 2A 264Vac resistive
- Output functions: Alarm/Event

* General Notes about Relays and Inductive Loads

High voltage transients may occur when switching inductive loads such as some contactors or solenoid valves. Through the internal contacts, these transients may introduce disturbances which could affect the performance of the instrument.

For this type of load it is recommended that a 'snubber' be connected across the normally open contact of the relay switching the load. The snubber recommended consists of a series connected resistor/capacitor (typically 15nF/100Ω). A snubber will also prolong the life of the relay contacts.


A snubber should also be connected across the output terminal of a triac output to prevent false triggering under line transient conditions.

WARNING

When the relay contact is open, or it is connected to a high impedance load, it passes a current (typically 0.6mA at 110Vac and 1.2mA at 230Vac). You must ensure that this current will not hold on low power electrical loads. If the load is of this type, the snubber should not be connected.

1.9.2 AA Relay Form C (FM Approved)

- Isolated output 300Vac CATII
- Software configurable: 0-20mA or 4-20mA plus 0-5V, 0-10V, 1-5V and 2-10V.
- Max load resistance: 500Ω
- Calibration accuracy: ±(<0.25% of reading + <50µA



1.9.3 Transmitter Supply

A fixed 24Vdc supply is available to power an external transducer

- Isolated output 300Vac CATII



1.9.4 Digital Inputs A and B

Dig In A




Dig In B



- Not isolated from the sensor input
- Switching: 12Vdc at 40mA max
- Contact open > 500Ω. Contact closed < 200Ω
- Input functions: Please refer to the list in the quick codes.

1.10 Indicator Power Supply

1. Before connecting the indicator to the power line, make sure that the line voltage corresponds to the description on the identification label.
2. Use copper conductors only.
3. The power supply input is not fuse protected. This should be provided externally.
4. For 24V, the polarity is not important.




- High voltage supply: 100 to 230Vac, ±15%, 48 to 62 Hz
- Recommended external fuse ratings are as follows:
For 100 - 230Vac, fuse type: T rated 2A 250V.

1.11 Digital Communications (Optional)

Digital communications uses the Modbus protocol. The interface is EIA485 (2-wire).

- Isolated 300Vac CATII.

EIA 485 Connections

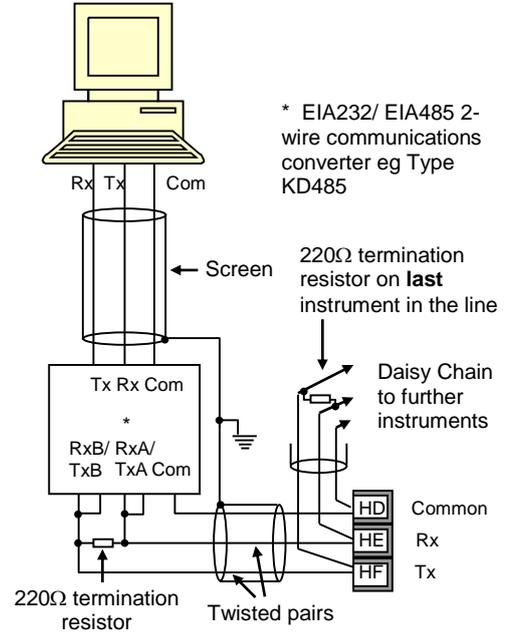

2. Safety and EMC Information

This indicator is intended for industrial temperature and process applications when it will meet the requirements of the European Directives on Safety and EMC. Use in other applications, or failure to observe the installation instructions of this handbook, may impair safety or EMC. The installer must ensure the safety and EMC of any particular installation.

Safety

This indicator complies with the European Low Voltage Directive 2006/95/EC, by the application of the safety standard EN 61010.

Electromagnetic compatibility

This indicator conforms with the essential protection requirements of the EMC Directive 2004/108/EC by the application of a Technical Construction File. This instrument satisfies the general requirements of the industrial environment defined in EN 61326. For more information on product compliance, refer to the Technical Construction File.

GENERAL

The information contained in this manual is subject to change without notice. While every effort has been made to ensure the accuracy of the information, your supplier shall not be held liable for errors contained herein.

Unpacking and storage

The packaging should contain an instrument mounted in its sleeve, two mounting brackets for panel installation and an Installation & Operating guide. Certain ranges are supplied with an input adapter.

If on receipt, the packaging or the instrument is damaged, do not install the product but contact your supplier. If the instrument is to be stored before use, protect from humidity and dust in an ambient temperature range of -10°C to $+70^{\circ}\text{C}$.

Service and repair

This indicator has no user serviceable parts. Contact your supplier for repair.

Caution: Charged capacitors

Before removing an instrument from its sleeve, disconnect the supply and wait at least two minutes to allow capacitors to discharge. It may be convenient to partially withdraw the instrument from the sleeve, then pause before completing the removal. In any case, avoid touching the exposed electronics of an instrument when withdrawing it from the sleeve. Failure to observe these precautions may cause damage to components of the instrument or some discomfort to the user.

Electrostatic discharge precautions

When the indicator is removed from its sleeve, some of the exposed electronic components are vulnerable to damage by electrostatic discharge from someone handling the indicator. To avoid this, before handling the unplugged indicator, discharge yourself to a ground.

Cleaning

Do not use water or water based products to clean labels, or they will become illegible. Isopropyl alcohol may be used to clean labels. A mild soap solution may be used to clean other exterior surfaces of the product.

2.1 Installation Safety Requirements

Safety Symbols

Various symbols may be used on the indicator. They have the following meaning:



Caution (refer to accompanying documents)



Equipment protected throughout by DOUBLE INSULATION



Helpful hints

Personnel

Installation must only be carried out by suitably qualified personnel in accordance with the instructions in this handbook.

Enclosure of Live Parts

To prevent hands or metal tools from touching parts that may be electrically live, the indicator must be enclosed in an enclosure.

Caution: Live sensors

The indicator is designed to operate if the temperature sensor is connected directly to an electrical heating element. However, you must ensure that service personnel do not touch connections to these inputs while they are live. With a live sensor, all cables, connectors and switches for connecting the sensor must be mains rated for use in 230Vac $\pm 15\%$ CATII.

Wiring

It is important to connect the indicator in accordance with the wiring data given in this guide. Take particular care not to connect AC supplies to the low voltage sensor input or other low level inputs and outputs. Only use copper conductors for connections (except thermocouple inputs) and ensure that the wiring of installations comply with all local wiring regulations. For example, in the USA, use NEC Class 1 wiring methods. In the UK, use the latest version of the IEE wiring regulations (BS7671).

Power Isolation

The installation must include a power isolating switch or circuit breaker. This device should be in close proximity to the indicator, within easy reach of the operator and marked as the disconnecting device for the instrument.

Overcurrent protection

The power supply to the system should be fused appropriately to protect the cabling to the units.

Voltage rating

The maximum continuous voltage applied between any of the following terminals must not exceed 230Vac:

- relay output to logic, dc or sensor connections;
- any connection to ground.

The indicator must not be wired to a three phase supply with an unearthed star connection. Under fault conditions, such a supply could rise above 240Vac with respect to ground, and the product would not be safe.

Conductive pollution

Electrically conductive pollution must be excluded from the cabinet in which the indicator is mounted. For example, carbon dust is a form of electrically conductive pollution. To secure a suitable atmosphere in conditions of conductive pollution, fit an air filter to the air intake of the cabinet. Where condensation is likely—for example, at low temperatures—include a thermostatically controlled heater in the cabinet.

This product has been designed to conform to BSEN61010 installation category II, pollution degree 2. These are defined as follows:

Installation Category II (CAT II)

For equipment on nominal 230V supply, the maximum rated impulse voltage is 2500V.

Pollution Degree 2

Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation shall be expected.

Grounding of the temperature sensor shield

In some installations, it is common practice to replace the temperature sensor while the indicator is still powered up. Under these conditions, as additional protection against electric shock, we recommend that the shield of the temperature sensor be grounded. Do not rely on grounding through the framework of the machine.

Over-temperature protection

When designing any control system, it is essential to consider what will happen if any part of the system should fail. In temperature control applications, the primary danger is that the heating will remain constantly on. Apart from spoiling the product, this could damage any process machinery being controlled, or even cause a fire.

Reasons why the heating might remain constantly on include:

- the temperature sensor becoming detached from the process
- thermocouple wiring becoming short circuit
- the controller failing with its heating output constantly on
- an external valve or contactor sticking in the heating condition
- the controller setpoint being set too high.

Where damage or injury is possible, we recommend fitting a separate over-temperature protection unit, with an independent temperature sensor, which will isolate the heating circuit.

This indicator can be used in addition to a controller as an over-temperature device. It is recommended that the relay used to indicate the alarm condition should be set to high alarm configured with sensor break and inverse 'l n u' operation so that it relaxes to the alarm condition when power is removed.

Installation requirements for EMC

To ensure compliance with the European EMC directive certain installation precautions are necessary as follows:

- When using relay outputs it may be necessary to fit a filter suitable for suppressing the emissions. The filter requirements will depend on the type of load.
- If the unit is used in table top equipment which is plugged into a standard power socket, then it is likely that compliance to the commercial and light industrial emissions standard is required. In this case to meet the conducted emissions requirement, a suitable mains filter should be installed.

Routing of wires

To minimize the pick-up of electrical noise, the low voltage DC connections and the sensor input wiring should be routed away from high-current power cables. Where it is impractical to do this, use shielded cables with the shield grounded at both ends. In general, keep cable lengths to a minimum.

3. Switch On

3.1 New Indicator

If the indicator is new and has not previously been configured, or following a 'Cold Start' (section 5.5), it will start up showing the 'Quick Configuration' codes. This is a built in tool which enables you to configure the input type and range, the output functions, and the display format.

⚠ Incorrect configuration can result in damage to the process and/or personal injury and must be carried out by a competent person authorized to do so. It is the responsibility of the person commissioning the instrument to ensure the configuration is correct.

The quick code consists of two 'SETS' of five characters.



The upper section of the display shows the set selected. The lower section shows the five digits which make up the set. Adjust these as follows:

1. Press any button. The first character will change to a flashing '-'.
2. Press or to change the flashing character to the required code shown in the quick code tables –see next page. Note: An X indicates that the option is not fitted.
3. Press to scroll to the next character.
- You cannot scroll to the next character until the current character is configured.
- To return to the first character press .
4. When all five characters have been configured the display will change to rng.hi followed by rng.lo which allows range high and low limits to be set.
5. The next press of will select Set 2. Adjust each character as described for Set 1.
6. When the last character has been entered press again; the display will show . Continue to press if you wish to repeat the above quick codes or press or to if you are satisfied with the quick codes. The indicator will then automatically go to the operator level

SET 1

K C H C O

Input Type	
Thermocouple	
B	Type B
J	Type J
K	Type K
L	Type L
N	Type N
R	Type R
S	Type S
T	Type T
C	Custom C
RTD	
P	Pt100
Linear (all units)	
M	0-80mV
2	0-20mA
4	4-20mA

Display units	Decimal point
Temperature	0 nnnnn ⁽¹⁾
X None	1 nnnn.n ⁽¹⁾
C °C	2 nnn.nn ⁽¹⁾
F °F	3 nn.nnn ⁽¹⁾
K K	4 n.nnnn ⁽¹⁾
P %	

Not Applicable
X Not applicable

Home display	
N	PV only
A	First Alarm SP only
1	PV + Alarm SP
2	PV + Alarm SP (Read only)

Set 1 is followed with R N G . H I Then R N G . L o	Set this for the maximum display range required Set this for the minimum display range required
---	--

Set 2 follows these parameters	See next page
--------------------------------	---------------

(1) Up to 2 decimal places on Series 3L

SET 2 – Series 3L

H X H X X

OP1	
X	Unconfigured
Relay	
Alarm 1	
H	High alarm
L	Low alarm
R	Rate-of change - Rising
N	New alarm flag
O	Sensor break
P	Power fail
With sensor Break	
7	High alarm
8	Low alarm
9	Rate-of change
With power Fail	
A	High alarm
B	Low alarm
C	Rate-of change
With sensor Break and power fail	
E	High alarm
F	Low alarm
G	Rate-of change

OP3	
X	Unconfigured
Relay	
Alarm 2	
H	High alarm
L	Low alarm
R	Rate-of change - Rising
N	New alarm flag
O	Sensor break
P	Power fail
With sensor Break	
7	High alarm
8	Low alarm
9	Rate-of change
With power Fail	
A	High alarm
B	Low alarm
C	Rate-of change
With sensor Break and power fail	
E	High alarm
F	Low alarm
G	Rate-of change

OP4 (AA Relay)	
X	Unconfigured
Relay	
Alarm 4	
H	High alarm
L	Low alarm
R	Rate-of change - Rising
N	New alarm flag
O	Sensor break
P	Power fail
With sensor Break	
7	High alarm
8	Low alarm
9	Rate-of change
With power fail	
A	High alarm
B	Low alarm
C	Rate-of change
With sensor Break and power fail	
E	High alarm
F	Low alarm
G	Rate-of change

Digital input A and B	
X	Unconfigured
W	Alarm acknowledge
K	Keylock
U	Remote up button
D	Remote down button
J	Alarm Inhibit
M	Peak Reset
Y	Freeze PV
V	Recipe 2/1 select
T ⁽¹⁾	Tare correction

Note:-
Alarm outputs are set to inverted when exiting from Quick Codes

3.1.1 To Re-Enter Quick Code Mode

If you need to re-enter the 'Quick Configuration' mode this can always be done as follows:

1. Power down the indicator.
2. Hold  button down and power up the indicator again. Keep the button pressed until you are requested to enter a passcode.
3. Enter a passcode using the  or  buttons. In a new indicator the passcode defaults to 4. If an incorrect passcode is entered, you must repeat the whole procedure.

 Parameters may also be configured using a deeper level of access as described in subsequent chapters of this manual. If this has been done and the Quick Code Mode is re-entered as described above, then the quick codes are shown with full stops (e.g. G.S.2.G.A.) to indicate that the configuration has been changed.

3.2 Pre-Configured Indicator or Subsequent Starts


A brief start up sequence consists of a self test in which all elements of the display are illuminated and the software version number is shown.

The indicator will briefly display the quick codes during start up and then proceed to **Operator Level 1**.

You will see the display shown below. It is called the HOME display.

 If the Quick Codes do not appear during start up, this means that the indicator has been configured in a deeper level of access, as stated opposite. The quick codes may then not be valid and are therefore not shown.

3.3 Front panel layout

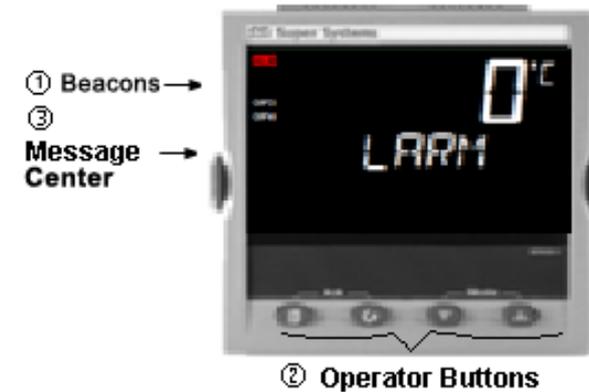

① Beacons

ALM	Alarm active (Red)
OP1	Lit when output 1 is ON
OP3	Lit when output 3 is ON
OP4	Lit when output 4 (AA relay) is ON
REM	Communications active

② Operator Buttons:

 From any display - press to return to the HOME display.

 Press to select a new parameter. Hold down to continuously scroll through parameters.

 Press to change or decrease a value.

 Press to change or increase a value.

③ Message Center

A scrolling message may appear in this section. For example, if a high alarm is configured to operate output 1, and a low alarm is configured to operate output 4, the scrolling messages 'ALARM 1 HIGH' and 'ALARM 4 LOW' are shown together with the beacons 'ALM', 'OP1' and 'OP4'. 'ALM' flashes if the alarm has not been acknowledged.

If the input sensor is broken '5br' appears in the top display and the scrolling message 'INPUT SENSOR BROKEN' appears in the message center.

3.3.1 Alarm Indication

Up to three alarms can be configured. If any alarm occurs, the red ALM beacon will flash. A scrolling text message will describe the source of the alarm (for example, **ALARM 1 HIGH**). Any output attached to the alarm will operate.

Press  and  (Ack) together to acknowledge the alarm

If the alarm is still present, the ALM beacon will light continuously.

By default alarms are configured as non-latching, de-energized in alarm. If you require latched alarms, please refer to the engineering handbook.

3.3.2 Out of Range Indication

If the input is too high, HHHHH will be displayed.

If the input is too low, LLLLL will be displayed.

3.3.3 Sensor Break Indication

An alarm condition (*Sbr*) is indicated if the sensor or the wiring between sensor and indicator becomes open circuit.

For a PRT input, sensor break is indicated if any one of the three wires is broken.

For mA input, sensor break will not be detected due to the load resistor connected across the input terminals.

For Volts input, sensor break may not be detected due to the potential divider network connected across the input terminals.

3.4 Operator Parameters in Level 1

Operator level 1 is designed for day to day operation of the indicator, and access to these parameters is not protected by a pass code.

Press  to step through the list of parameters. The mnemonic of the parameter is shown in the lower display. After five seconds, a scrolling text description of the parameter appears.

The value of the parameter is shown in the upper display. In level 1 the value is read only.

The parameters that appear depend upon the functions configured. They are:

Parameter Mnemonic	Scrolling text and Description	Availability
HIGH	PEAK HIGH	This is the highest reading that the indicator has recorded since switch on or since it was reset
LOW	PEAK LOW	This is the lowest reading that the indicator has recorded since switch on or since it was reset
A1 (----)	ALARM 1 SETPOINT	(----) shows the type of alarm configured. For example: HI, LO, ROC. This parameter sets the alarm thresholds.
A2 (----)	ALARM 2 SETPOINT	
A3 (----)	ALARM 3 SETPOINT	
A4 (----)	ALARM 4 SETPOINT	

4. Operator Level 2

Level 2 provides access to additional parameters. It is protected by a security code.

4.1 To Enter Level 2

1. From any display press and hold .
2. After a few seconds the display will show:- 
3. Release .
(If no button is pressed for 45 seconds the display returns to the HOME display)
4. Press  or  to choose **LEU 2** (Level 2) 
5. After 2 seconds the display will show:- 
6. Press  or  to enter the pass code. Default = '2' 
7. If an incorrect code is entered the indicator reverts to Level 1.

4.1.1 To Return to Level 1

1. Press and hold .
2. Press  to select **LEU 1**

The indicator will return to the level 1 HOME display.
Note: A pass code is not required when going from a higher level to a lower level.

4.2 Level 2 Parameters

As in Level 1, press  to step through the list of parameters. The mnemonic of the parameter is shown in the message center. After five seconds, a scrolling text description of the parameter appears.

The value of the parameter is shown in the upper display. Press  or  to adjust this value.

If no key is pressed for 30 seconds, the indicator returns to the HOME display.

Backscroll is achieved when you are in this list by pressing  while holding down .

To return to the HOME display at any time, press .

The following table shows a list of parameters available in Level 2.

Mnemonic	Scrolling Display and description	Range
PRST	PEAK RESET Select On to reset the HIGH and LOW peak values. The display automatically returns to OFF	OFF ON
HIGH	PEAK HIGH This is the highest reading that the indicator has recorded since switch on or since it was reset	Read only
LOW	PEAK LOW This is the lowest reading that the indicator has recorded since switch on or since it was reset	Read only
A1 (----)	ALARM 1 SETPOINT	(----) shows the type of alarm configured. For example HIGH, LOW,
A2 (----)	ALARM 2 SETPOINT	
A3 (----)	ALARM 3 SETPOINT	
A4 (----)	ALARM 4 SETPOINT	
ADDR	ADDRESS Digital communications address for the instrument (if digital communications fitted)	1 to 254
HOME	HOME DISPLAY This configures the parameter which will be displayed in the HOME display in normal operation	<i>PV</i> Process variable <i>ALm</i> Alarm setpoint <i>PuAL</i> PV + Alarm SP <i>PALrO</i> PV + Alarm SP read only
ID	CUSTOMER ID Customized instrument identification number	0 to 9999
UNITS	DISPLAY UNITS The display units are shown in the top right hand corner of the display in normal operation. Units available are:-	
	<i>°C</i> °C <i>°F</i> °F <i>K</i> Kelvin	
	<i>nonE</i> No units displayed <i>PERC</i> Percentage	

☺ Press  at any time to return immediately to the HOME screen at the top of the list.

☺ Hold  down to continuously scroll through the above list

4.3 FM and Alarm Units

Series 3L indicators supplied to Function code FM are FM approved.

Series 3L indicators supplied to Function code DN are approved to EN14597.

The instrument label is marked accordingly.

In these instruments, the alarm operating the AA relay output is set to inverted and latching. This function cannot be altered.

When the instrument is configured using the Quick Start codes (section 3.1), Alarm 1 is used to operate both Outputs 1 and 4 (AA relay). The Quick Start configuration for the AA relay will enable and configure Alarm 4 but Alarm 4 will not be used to operate Output 4.



If Quick Start is used to configure Alarm 1 as a high alarm and Alarm 4 as a low alarm, then the resulting configuration will be that the high alarm 1 is used to drive both outputs 1 and 4. The low alarm 4 will not be connected to any output.

Further details on latching and blocking alarms can be found in section 9.1.

4.4 Recipes

Not Applicable to this Instrument

5. Access to Further Parameters

Parameters are available under different levels of security and are defined as Level 1 (Lev1), Level 2 (Lev2), Level 3 (Lev 3) and Configuration (Conf). Level 1 has no pass code since it contains a minimal set of parameters generally sufficient to run the process on a daily basis. Level 2 allows access to parameters which may be used in commissioning an indicator or settings between different products or batches. This has been described in the previous section.

Level 3 and Configuration level parameters are also available as follows:

5.1 Level 3

Level 3 makes all operating parameters available and alterable (if not read only). It is typically used when commissioning an indicator.

Examples are:

Range limits, setting alarm levels, communications address.

5.2 Configuration Level

This level makes available all parameters including the operation parameters so that there is no need to switch between configuration and operation levels during commissioning. It is designed for those who may wish to change the fundamental characteristics of the instrument to match the process.

Examples are:

Input (thermocouple type); Alarm type; Communications type.





WARNING

Configuration level gives access to a wide range of parameters which match the indicator to the process. Incorrect configuration could result in damage to the process and/or personal injury. It is the responsibility of the person commissioning the process to ensure that the configuration is correct. In configuration level, the indicator is not providing alarm indication.

Do not select configuration level on a live process.

Operating Level	Home List	Full Operator	Configuration	Alarms
Level 1	✓			Yes RW
Level 2	✓			Yes RO
Level 3	✓	✓		Yes
Conf	✓	✓	✓	No

5.2.1 To Select Access Level 3 or Configuration Level

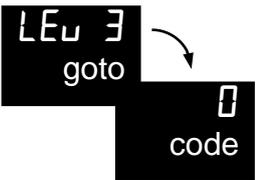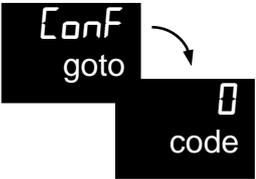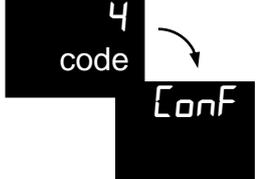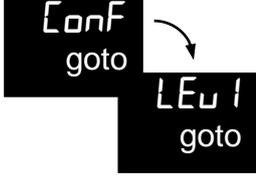Do This	The Display You Should See	Additional Notes
<p>1. From any display press and hold  for more than 5 seconds</p>	<p style="text-align: center;">To Select Level 3</p> 	<p>The display will pass from the current operating level, for example, LEU 1 to LEU 3 as the button is held down.</p> <p>(If no button is then pressed for about 50 seconds the display returns to the HOME display)</p>
<p>2. Press  or  to enter the passcode for Level 3</p>		<p>The default code is 3: If an incorrect code is entered the display reverts to 'got o' . If a correct code is entered the indicator is now in the level 3 will then revert to the HOME display</p>
<p>3. When the LEU 3 GOTO view is shown, as in paragraph 1 above, press  to select 'CONF'</p>	<p style="text-align: center;">To Select Configuration level</p> 	<p>Note:  must be pressed quickly before the indicator requests the code for level 3</p>
<p>4. Press  or  to enter the passcode for Configuration level</p>		<p>The default code is 4: If an incorrect code is entered the display reverts to 'g o t o' . If a correct code is entered the indicator is now in Configuration level will now show CONF</p>
<p>5. Press and hold  for more than 3 seconds</p> <p>6. Press  to select the required level—for example, LEV 1</p>	<p style="text-align: center;">To Return to a Lower Level</p> 	<p>The choices are: LEU 1 Level 1 LEU 2 Level 2 LEU 3 Level 3 CONF Configuration</p> <p>It is not necessary to enter a code when going from a higher level to a lower level.</p> <p>Alternatively, press  and scroll to the ACCESS list header, then press  to select the required level. The display will then flash 'CONF' for a few seconds and the indicator will then go through its start up sequence, starting in the level selected.</p> <p>Do not power down while CONF is flashing. If a power down does occur an error message will appear – see section 9.4 'Diagnostic Alarms'</p>

☺ A special case exists if a security code has been configured as '0' If this has been done it is not necessary to enter a code and the indicator will enter the chosen level immediately.

☺ When the indicator is in configuration level the ACCESS list header can be selected from any view by holding down the  button for more than 3 seconds. Then press  again to select 'ACCES'

5.3 Parameter lists


Parameters are organized in lists. The top of the list shows the list header only. The name of the list header describes the generic function of the parameters within the list. For example, the list header 'ALARM' contains parameters which enable you to set up alarm conditions.

5.3.1 To Choose Parameter List Headers

Press . Each list header is selected in turn every time this key is pressed.

The name of the list header appears in the lower display, followed, after a few seconds, by a scrolling longer description of the name.

The following example shows how to select the first two list headers.

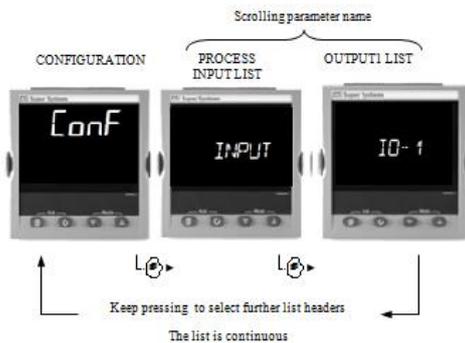


5.3.2 To Locate a Parameter

Choose the appropriate list, then press . Each parameter in the list is selected in turn each time this button is pressed. The following example shows how to select the first two parameters in the ALARM List. All parameters in all lists follow the same procedure.



 Press  to jump back to the list header.

5.3.3 How Parameters are Displayed

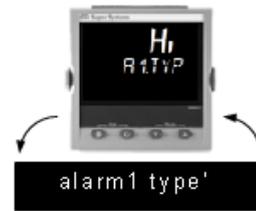

As shown above. Whenever a parameter is selected it is displayed as a mnemonic, of four or five characters, for example 'A1.TYP'.

After a few seconds this display is replaced by a scrolling banner which gives a more detailed description of the parameter. In this example 'A1.TYP' = 'alarm 1 type'. The scrolling banner is only shown once after the parameter is first accessed.

The name of the list header is also displayed in this way.

The upper part of the display shows the value of the parameter.

The lower part shows its mnemonic followed by the scrolling name of the parameter

5.3.4 To Change a Parameter Value

With the parameter selected, press  to increase the value, press  to decrease the value. If either key is held down the analogue value changes at an increasing rate.

The new value is entered after the key is released and is indicated by the display blinking. The exception to this is output 'Power' when in manual. In this case the value is entered continuously.

The upper display shows the parameter value the lower display shows the parameter name.

5.3.5 To Return to the HOME Display

Press  + .

On release of the keys the display returns to the HOME list. The current operating level remains unchanged.

5.3.6 Time Out


A time out applies to the 'Go To' and 'Control Mode' parameters. If no key presses are detected within a period of 5 seconds the display will revert back to the HOME list.

 Press and hold  to scroll parameters forward through the list. With  depressed, press  to scroll parameters backward.

5.4 Navigation Diagram

The diagram below shows the all list headings available in configuration level for Series 3L indicator.

The parameters in a list are shown in tables in the following sections of this manual together with explanations of their meanings and possible use.

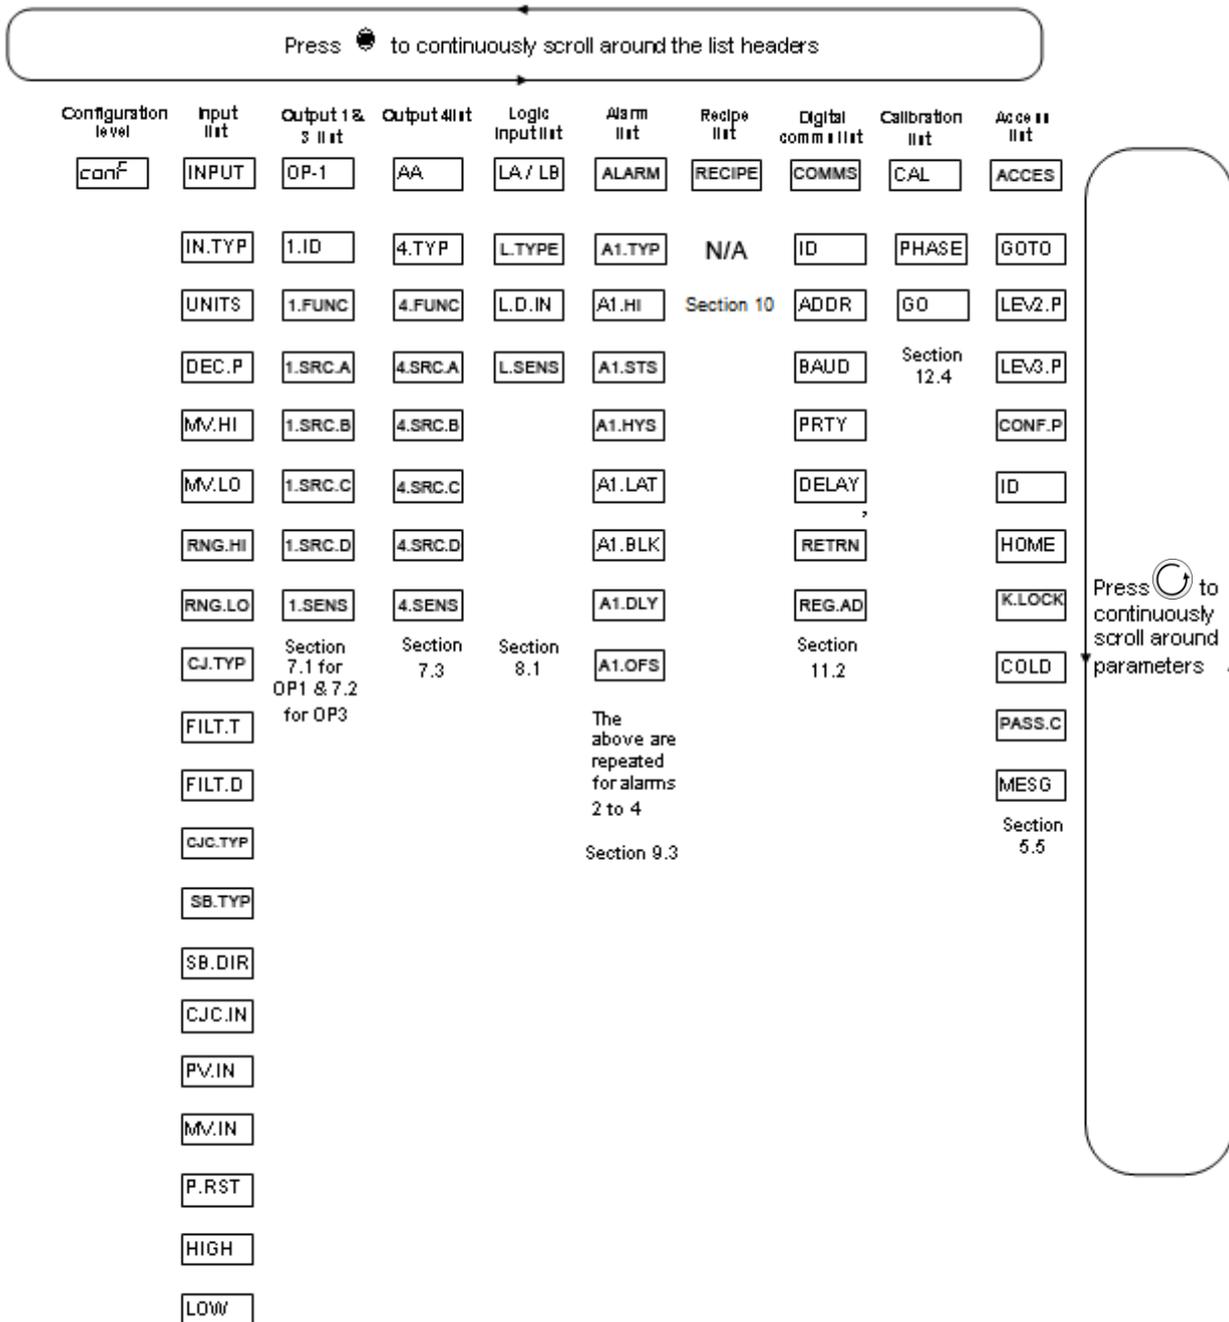

☺ Lists may vary depending on the type of input and options configured. For example CJC.TYP and CJC.IN only appear if the Input Type is a thermocouple.

5.5 Access Parameters

The following table summarizes the parameters available under the ACCESS list header

 The Access List can be selected at any time when in configuration level by holding  key down for 3 seconds, then press  or  with  still held down. Use the  button to scroll through the menu options.

ACCESS LIST		'ACCS'				
Name	Scrolling Display	Parameter Description	Values Allowed		Default	Access Level
GOTO	GOTO	Allows you to change the access level of the indicator. Passwords prevent unauthorized change	LEu.1	Operator level 1	LE 4	Conf
			LEu.2	Operator level 2		
			LEu.3	Operator level 3		
			CONF	Configuration level		
LEV2.P	LEVEL 2 PASSCODE	The Level 2 passcode	0-9999 0 = no passcode will be requested		2	Conf
LEV3.P	LEVEL 3 PASSCODE	The Level 3 passcode			3	Conf
CONF.P	CONFIG PASSCODE	To set a Configuration level passcode			4	Conf
ID	CUSTOMER ID	To set the identification of the indicator	0-9999			Conf
HOME	HOME DISPLAY See Note 1	To configure the parameters to be displayed in the HOME display	PU	Process Value – top display Blank lower display	SE d	Conf
			ALm	First configured alarm – top Blank lower display		
			PVAL	PV - top display First configured alarm in lower section		
			PARo	PV - top display First configured alarm read only in lower section		
K.LOCK	KEYBOARD LOCK	To limit operation of the front panel buttons when in operator levels. ☺ If ALL has been selected, then to restore access to the keyboard, cycle power to High Limit with the  button held down and enter the configuration level passcode as described in section 3.1.1. This will take you to the Quick Code mode. Press  to scroll to the EXIT option and select YES. The front panel buttons can then be operated as normal.	nonE	Unlocked	nonE	Conf
			ALL	All buttons locked		
			Edi t	Edit keys locked		
COLD	COLD START ENABLE/ DISABLE	Use this parameter with care. When set to yes the indicator will return to factory settings on the next power up	no	Disable		Conf
			YES	Enable		
PASS.C	FEATURE PASSCODE	To enable chargeable options				Conf
MSG	STATIC HOME MESSAGE	Up to 15 messages can be configured. This parameter calls up messages 1 to 15.	OFF	The HOME display is configured according to the parameter HOME above	OFF	Conf
			1 to	Message 1		
			15	Message 15		

The following sections in this handbook describe the parameters associated with each subject. The general format of these sections is a description of the subject, followed by the table of all parameters to be found in the list, followed by an example of how to configure or set up parameters.

6. Process Input

Parameters in the input list configure the input to match your sensor. These parameters provide the following features:-

Input Type and linearization	Thermocouple (TC) and 3-wire resistance thermometer (RTD) temperature detectors Linear input (-10 to +80mV) through external shunt or voltage divider, mA assumes a 2.49Ω external shunt. See the table in section 6.1.1. for the list of input types available
Display units and resolution	The change of display units and resolution will all the parameters related to the process variable
Input filter	First order filter to provide damping of the input signal. This may be necessary to prevent the effects of excessive process noise on the PV input from causing poor control and indication. More typically used with linear process inputs.
Fault detection	Sensor break is indicated by an alarm message 'Sbr'. For thermocouple it detects when the impedance is greater than pre-defined levels; for RTD when the resistance is less than 12Ω.
User calibration	Either by simple offset or by slope and gain. See section 12.2. for further details.
Over/Under range	When the input signal exceeds the input span by more than 5% the PV will flash indicating under or over range. If the value is too high to fit the number of characters on the display 'HHHH' or 'LLLL' will flash. The same indications apply when the display is not able to show the PV, for example, when the input is greater than 999.9°C with one decimal point.

6.1 Process Input Parameters

INPUT LIST		I NPUT				
Name	Scrolling Display	Parameter Description	Value		Default	Access Level
IN.TYP	INPUT TYPE	Selects input linearization and range	See section 6.1.1. for input types available			Conf L3 R/O
UNITS	DISPLAY UNITS	Display units shown on the instrument	none	No units - only for custom linearisation	°C	L3
			For a full list of units see section 6.1.2.			
DEC.P	DISPLAY POINTS	Decimal point position	nnnnn - No decimal point to n.nnnn - four decimal points		nnnnn	Conf L3 R/O
INP.HI	LINEAR INPUT HIGH	High limit for mV (mA) inputs ⁽¹⁾	-10.00 to +80.00mV		8000	Conf
INP.LO	LINEAR INPUT LOW	Low limit for mV (mA) inputs ⁽¹⁾	-10.00 to +80.00mV		- 1000	Conf
RNG.HI	RANGE HIGH LIMIT	Range high limit for thermocouple RTD and mV inputs ⁽¹⁾	From the high limit of the selected input type to the 'Low Range Limit' parameter minus one display unit.			Conf L3 R/O
RNG.LO	RANGE LOW LIMIT	Range low limit for thermocouple RTD and mV inputs ⁽¹⁾	From the low limit of the selected input type to the 'High Range Limit' parameter minus one display unit.			Conf L3 R/O
(1) See section 6.1.3 for an example of how to adjust the above four parameters.						
PV.OFS	PV OFFSET	A simple offset applied to all input values. See section 6.1.3.	Generally one decimal point more than PV			L3
FILT.T	FILTER TIME	Input filter time constant (first order digital filter)	OFF to 100.0 seconds		16	L3
FILT.D	DISPLAY FILTER	Provides a filter for the displayed value	OFF	No display filter	OFF	L3
			1	Zero the least significant digit		
			2	Zero the two least significant digits		
CJ.TYP	CJC TYPE	Configuration of the CJC type (only shown for thermocouple inputs)	Auto	Automatic	Auto	Conf and if T/C L3 R/O
			0°C	Fixed at 0°C		
			50°C	Fixed at 50°C		
SB.TYP	SENSOR BREAK TYPE	Defines the action which is applied to the output if the sensor breaks (open circuit)	OFF	No sensor break will be detected	on	Conf L3 R/O
			on	Open circuit sensor will be detected		
			Latch	Latching		
SB.DIR		Defines the direction in which the PV will range.	UP	Up scale. Output goes to maximum	UP	Conf

	SENSOR BREAK DIRECTION		down	Down scale. Output goes to minimum		
CJC.IN	CJC TEMPERATURE	Temperature measured at the rear terminal block. Used in the CJC calculation (only shown for thermocouple inputs)	Read only			Conf L3 R/O and if T/C
PV.IN	PV INPUT VALUE	Current measured temperature	Minimum display to maximum display range			Conf L3 R/O
MV.IN	MILLIVOLT INPUT VALUE	Millivolts measured at the rear PV Input terminals	xx.xx mV - read only			
P.RST	PEAK RESET	Select ON to reset the HIGH and LOW peak values. The display automatically returns to OFF	OFF		peak Values reset	OFF
			On			
LOW	PEAK LOW	This is the lowest reading that the indicator has recorded since switch on or since it was reset	Read only			L1
HIGH	PEAK HIGH	This is the highest reading that the indicator has recorded since switch on or since it was reset	Read only			L1

6.1.1 Input Types and Ranges

Input Type		Min Range	Max Range	Units	Min Range	Max Range	Units
Jtc	Thermocouple type J	-210	1200	°C	-238	2192	°F
Ktc	Thermocouple type K	-200	1372	°C	-238	2498	°F
Ltc	Thermocouple type L	-200	900	°C	-238	1652	°F
Rtc	Thermocouple type R	-50	1700	°C	-58	3124	°F
Btc	Thermocouple type B	0	1820	°C	-32	3308	°F
Ntc	Thermocouple type N	-200	1300	°C	-238	2372	°F
Ttc	Thermocouple type T	-200	400	°C	-238	752	°F
S _{tc}	Thermocouple type S	-50	1768	°C	-58	3214	°F
Rtd	Pt100 resistance thermometer	-200	850	°C	-238	1562	°F
mv	mV or mA linear input	-10.00	80.00				
ms	Value received over digital communications (modbus address 203). This value must be updated every 5 seconds or the indicator will show sensor break						


6.1.2 Units

°C	°C	°F	°F	K	Kelvin
none	No units displayed	PERC	Percentage		

6.1.3 PV Offset

All ranges of the indicator have been calibrated against traceable reference standards. This means that if the input type is changed it is not necessary to calibrate the indicator. There may be occasions, however, when you wish to apply an offset to the standard calibration to take account of known errors within the process, for example, a known sensor error or a known error due to the positioning of the sensor. In these instances it is not advisable to change the reference (factory) calibration, but to apply a user defined offset.

PV Offset applies a single offset to the temperature or process value over the full display range of the indicator and can be adjusted in Level 3. It has the effect of moving the curve up a down about a central point as shown in the example below:-

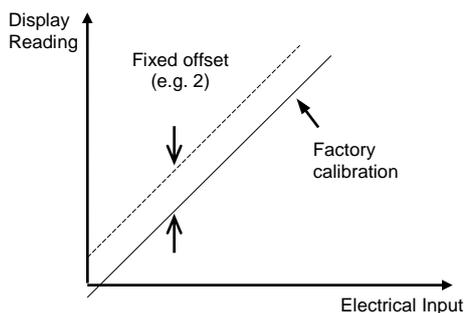

6.1.3.1 Example: To Apply an Offset:-

Connect the input of the indicator to the source device which you wish to calibrate to

Set the source to the desired calibration value

The indicator will display the current measurement of the value

If the display is correct, the indicator is correctly calibrated and no further action is necessary. If you wish to offset the reading:-

Do This	Display	Additional Notes
1. Select Level 3 or Conf as described in Chapter 2. Then press to select 'INPUT'		Scrolling display 'process input list'
2. Press to scroll to 'PV/OFS'		Scrolling display 'pv offset'
3. Press or to adjust the offset to the reading you require		In this case an offset of 2.0 units is applied


It is also possible to apply a five point offset which adjusts both low and high points. This is done in Level 3 using the CAL List, and the procedure is described in the Calibration section 1212.2.1.

6.1.4 PV Input Scaling

Input scaling applies to the linear mV and volts input ranges only. This is set by configuring the INPUT TYPE parameter to μV or $UoLt$, μV has an input range of -10 to 80mV. Using an external burden resistor of 2.49 Ω , the indicator can be made to accept 4-20mA from a current source. Scaling of the input will match the displayed reading to the electrical input levels from the transducer. PV input scaling can only be adjusted in Configuration level and is not provided for direct thermocouple or RTD inputs.

The graph below shows an example of input scaling, where it is required to display 2.0 when the input is 4mV and 500.0 when the input is 20mV .

If the input exceeds $\pm 5\%$ of the inp.Lo or inp.Hi settings, sensor break will be displayed.

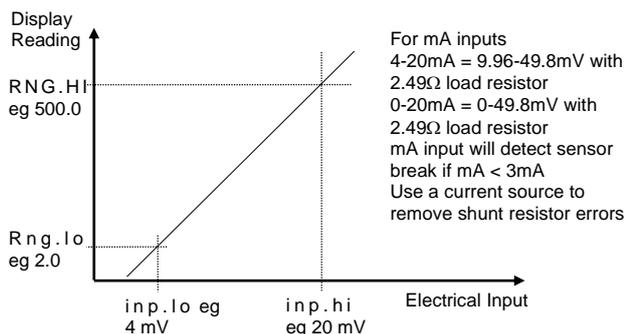

6.1.4.1 Example: To Scale a Linear Input

Select Configuration level as described in Chapter 2. Then:-

Do This	Display	Additional Notes
1. Then press to select 'input'		Scrolling display 'process input list'
2. Press to scroll to 'in.typ'		Scrolling display 'input type'
3. Press or to 'mV' or 'UoLt'		Scrolling display 'linear input high'
4. Press to scroll to 'inp.hi'		Scrolling display 'linear input low'
5. Press or to '2000'		Scrolling display 'linear input low'
6. Press to scroll to 'inp.lo'		Scrolling display 'linear input low'
7. Press or to '400'		In operator level the indicator will read 500.0 for a mV input of 20.00
8. Press to scroll to 'rng.hi'		In operator level the indicator will read 2.0 for a mV input of 4.00
9. Press or to '500.0'		In operator level the indicator will read 2.0 for a mV input of 4.00
10. Press to scroll to 'rng.lo'		In operator level the indicator will read 2.0 for a mV input of 4.00
11. Press or to '2.0'		In operator level the indicator will read 2.0 for a mV input of 4.00

7. Input/Output Channels

Indicators are ordered with two form A relays and one form C relay. These form A relays can be configured for a variety of process applications and the form C relay is typically an FM approved high limit alarm output.

7.1 Output Channel 1 (OP-1) – Series 3L Indicators

Output 1 is always a form A relay in the indicator and is connected to terminals 1A and 1B. It is typically used to provide external indication of alarms. OP1 beacon is operated from this output.

Output 1 is configured using the parameters in the following table:-


OUTPUT LIST 1 'o p -1'						
Name	Scrolling Display	Parameter Description	Value		Default	Access Level
1.I D	I/O 1 TYPE	Displays the type of output	<i>REL</i>	Relay output	<i>REL</i>	Read only
1.FUNC	I/O 1 FUNCTION	The function may be turned off, otherwise set to <i>digit</i>	<i>non</i>	Disabled. If disabled no further parameters are shown	<i>non</i>	Conf
			<i>digit</i>	Digital output		
1.SRC.A	I/O 1 SOURCE A	Selects the source of an event which will operate the output relay	<i>non</i>	No event connected to the output	<i>non</i>	Conf
1.SRC.B	I/O 1 SOURCE B		<i>1---</i>	Alarm 1		
1.SRC.C	I/O 1 SOURCE C	The output status is the result of an OR of Src A, Src B, Src C, and Src D	<i>2---</i>	Alarm 2	The --- indicates the alarm type. If the alarm is not configured <i>AL</i> (Alarm no) is shown	
			<i>3---</i>	Alarm 3		
1.SRC.D	I/O 1 SOURCE D	Up to four events can, therefore, operate the output See section 7.1.2.	<i>4---</i>	Alarm 4		
<i>ALL</i>	All alarms. Logical AND of alarms 1 to 4.					
<i>newAL</i>	Any new alarm					
<i>PowerF</i>	Power fail. See also section 7.1.3.					
1.SENS	I/O 1 SENSE	To configure the sense of the output channel. See also section 7.1.1	<i>OR</i>	Normal	<i>OR</i>	Conf
			<i>Inv</i>	Inverted		

7.1.1 Sense

For an alarm output set this parameter to 'Inu' so that it de-energizes to the alarm state.

7.1.2 Source

The four parameters SOURCE A, SOURCE B, SOURCE C, and SOURCE D appear when the output is configured as a digital output i.e. '-.FUNC' = 'dOut' and provide the facility to connect up to four alarms to operate a single relay output. If any one of the events becomes true then the output relay will operate.

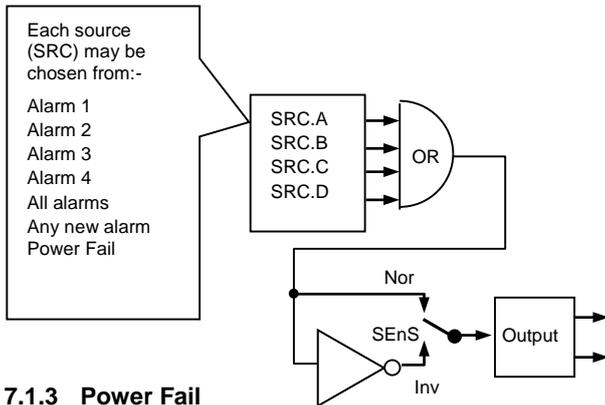

7.1.3 Power Fail

An output, configured as a digital output, can be made to operate following a power fail. It can be acknowledged in the same manner as an alarm but no alarm message is given.

7.1.4 Example: To Configure OP-1 Relay to Operate on Alarms 1 and 2:-

Do This	Display	Additional Notes
1. From any display, press as many times as necessary to select 'Op -1'		Scrolling display 'o P -1 list'
2. Press to scroll to '1.i d'		This is the identification of the hardware fitted and cannot be adjusted.
3. Press to scroll to '1. F U N C'		The output is configured as a digital output function.
4. Press or to select 'dout'		Scrolling display 'o p 1 function'
5. Press to scroll to '1.SRC.A'		The output will activate if either alarm 1 is triggered.
6. Press or to select the event which you want to operate the output		Note:- 1, indicates the alarm number, H, indicates the alarm type. Scrolling display 'output 1 source a'
7. If a second event is required to operate the same output, press to select '1.SRC.B'		Scrolling display 'output 1 source b' Note:- 2, indicates the alarm number, AL is displayed if the alarm type is not configured.
8. Press or to select the second event which you want to operate the output, eg 'AL 2'		Continue to select up to four events if required using 1.SRC.C and 1.SRC.D
9. Press to scroll to '1.sens'		'Inverted' means a relay output is energized for 0% PID demand
10. Press or to select 'Inu'		'Normal' means a relay output is energized for 100% PID demand Scrolling display 'io 1 sense'

7.2 Output Channel 3 (OP-3) – Series 3L Indicators

Output 3 is always a form A relay in the indicator and is connected to terminals 3A and 3B. It is typically used to provide external indication of alarms.

Output 3 is configured using the parameters in the following table:-


OUTPUT LIST 3 'o p -3'						
Name	Scrolling Display	Parameter Description	Value		Default	Access Level
3.I D	I/O 3 TYPE	Displays the type of output	<i>FELY</i>	Relay output	<i>FELY</i>	Read only
3.FUNC	I/O 3 FUNCTION	The function may be turned off, otherwise set to <i>dout</i>	<i>nonE</i>	Disabled. If disabled no further parameters are shown	<i>nonE</i>	Conf
			<i>dout</i>	Digital output		
3.SRC.A	I/O 3 SOURCE A	Selects the source of an event which will operate the output relay	<i>nonE</i>	No event connected to the output	<i>nonE</i>	Conf
3.SRC.B	I/O 3 SOURCE B		<i>1.---</i>	Alarm 1		
3.SRC.C	I/O 3 SOURCE C	The output status is the result of an OR of Src A, Src B, Src C, and Src D	<i>2.---</i>	Alarm 2	The --- indicates the alarm type. If the alarm is not configured <i>AL</i> (Alarm no) is shown	
			<i>3.---</i>	Alarm 3		
3.SRC.D	I/O 3 SOURCE D	Up to four events can, therefore, operate the output See section 7.2.2.	<i>4.---</i>	Alarm 4		
			<i>ALLA</i>	All alarms. Logical AND of alarms 1 to 4.		
			<i>nwAL</i>	Any new alarm		
			<i>PwrF</i>	Power fail.		
			<i>OrnG</i>	Output relay operates if the indicator input is over range		
			<i>Sbr</i>	Sensor break alarm		
3.SENS	I/O 3 SENSE	To configure the sense of the output channel. See also section 7.2.1	<i>nor</i> <i>inu</i>	Normal Inverted	<i>nor</i>	Conf

7.2.1 Sense

For an alarm output set this parameter to 'Inu' so that it de-energizes to the alarm state.

7.2.2 Source

The four parameters SOURCE A, SOURCE B, SOURCE C, and SOURCE D appear when the output is configured as a digital output i.e. '-.FUNC' = 'dOut' and provide the facility to connect up to four alarms to operate a single relay output. If any one of the events becomes true then the output relay will operate.

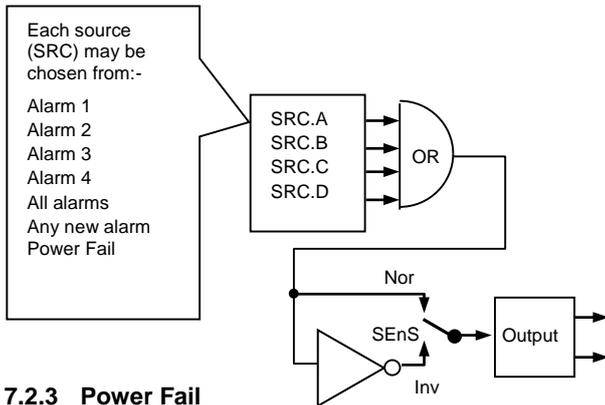

7.2.3 Power Fail

An output, configured as a digital output, can be made to operate following a power fail. It can be acknowledged in the same manner as an alarm but no alarm message is given.

7.2.4 Example: To Configure OP-3 Relay to Operate on Alarms 1 and 2:-

Do This	Display	Additional Notes
11. From any display, press as many times as necessary to select 'Op -3'		Scrolling display 'o P -3 list'
12. Press to scroll to '3.i d'		This is the identification of the hardware fitted and cannot be adjusted.
13. Press to scroll to '3.FUNC'		The output is configured as a digital output function.
14. Press or to select 'dOut'		Scrolling display 'o p 3 function'
15. Press to scroll to '3.SRC.A'		The output will activate if either alarm 1 is triggered.
16. Press or to select the event which you want to operate the output		Note:- indicates the alarm number, indicates the alarm type. Scrolling display 'output 3 source a'
17. If a second event is required to operate the same output, press to select '3.SRC.B'		Scrolling display 'output 3 source b'
18. Press or to select the second event which you want to operate the output, eg 'AL 2'		Note:- indicates the alarm number, is displayed if the alarm type is not configured. Continue to select up to four events if required using 3.SRC.C and 3.SRC.D
19. Press to scroll to '3.sens'		'Inverted' means a relay output is energized for 0% PID demand
20. Press or to select 'Inu'		'Normal' means a relay output is energized for 100% PID demand Scrolling display 'op3 sense'

7.3 AA Relay Channel (AA) (Output 4 FM Relay)

This is a changeover relay. Connections are made to terminals AA, AB, and AC. OP4 beacon is operated from the AA relay output channel. Output AA (4) has the same functionality as OP-1 and OP-3 – the parameters are repeated here for clarity.

FM Relay

OUTPUT AA LIST 'a a'						
Name	Scrolling Display	Parameter Description	Value		Default	Access Level
4.TYPE	OUTPUT 4 TYPE	Displays the type of output	<i>rELY</i>	Relay output	<i>rELY</i>	Read only
4.FUNC	OUTPUT 4 FUNCTION	The function may be turned off, otherwise set to <i>dout</i>	<i>nonE</i>	Disabled. If disabled no further parameters are shown		Conf
			<i>dout</i>	Digital output		
4.SRC.A	OUTPUT 4 SOURCE A	Selects the source of an event which will operate the output relay	<i>nonE</i>	No event connected to the output	<i>nonE</i>	Conf
4.SRC.B	OUTPUT 4 SOURCE B		<i>1---</i>	Alarm 1		
4.SRC.C	OUTPUT 4 SOURCE C	The output status is the result of an OR of Src A, Src B, Src C, and Src D	<i>2---</i>	Alarm 2		
			<i>3---</i>	Alarm 3		
			<i>4---</i>	Alarm4		
4.SRC.D	OUTPUT 4 SOURCE D	Up to four events can, therefore, operate the output See section 7.1.2.	<i>ALLA</i>	All alarms		
			<i>nwAL</i>	Any new alarm		
			<i>Sbr</i>	Sensor break alarm		
			<i>PwrF</i>	Power fail		
			<i>ORNG</i>	Output relay operates if the indicator input is over range		
4.SENS	OUTPUT 4 SENSE	To configure the sense of the output channel. See also section 7.2.1	<i>nor</i>	Normal	<i>nor</i>	Conf
			<i>inu</i>	Inverted		

8. Digital Inputs

The Series 3L comes with two digital inputs, LA and LB.

8.1 Digital Input Parameters

The input is typically from a voltage free contact, which can be configured to operate a number of functions as determined by parameters in the LA and LB Lists:-

LOGIC INPUT LIST 'LA' / 'LB'						
Name	Scrolling Display	Parameter Description	Value		Default	Access Level
L.TYPE	LOGIC INPUT TYPE	Input channel type	<i>L I P</i>	Logic input	As order code	Conf Read only
L.D.IN	LOGIC INPUT FUNCTION	To configure the function of the digital input	<i>n o n E</i>	Input not used	<i>A c A L</i>	Conf
			<i>A c A L</i>	Alarm acknowledge		
			<i>A L I n</i>	Alarm inhibit. See note 1		
			<i>P r S E t</i>	Peak value reset		
			<i>F r E E</i>	Freezes the current displayed value		
			<i>L o c k</i>	Keylock		
			<i>r E c</i>	Recipe select		
			<i>U P</i>	Remote key 'Up'		
L.SENS	LOGIC INPUT SENSE	To configure the polarity of the input channel	<i>n o r</i>	Normal	<i>n o r</i>	Conf
			<i>i n v</i>	Inverted		

Note 1:

This input may be used, for example, in part of an automated process where it is required to prevent alarms from being displayed during a particular part of the process. It should be used with care – blocking alarms or delayed alarms may be an alternative.

9. Alarms

Alarms are used to alert an operator when a pre-set level has been exceeded. They are indicated by a scrolling message on the display and the red ALM beacon. They may also switch an output – usually a relay (see section 7) to allow external devices to be operated when an alarm occurs.

9.1 Types of Alarm

Up to six different alarms are available:-

1. Alarm 1	Configurable as any of:- Full scale High H_i – the alarm is triggered if the PV exceeds a maximum value Full scale Low L_o – the alarm is triggered if the PV exceeds a minimum value Rising Rate of Change r_{ROC} - the alarm is triggered if the rate of increase in PV exceeds the set level Falling Rate of Change F_{ROC} . - the alarm is triggered if the rate of decrease in PV exceeds the set level
2. Alarm 2	
3. Alarm 3	
4. Alarm 4	
5. Sensor Fault Alarm	The alarm is triggered if the sensor is open circuit
6. Power Fail	An alarm is indicated after a power cycle. It is acknowledged and cancelled using 'Ack' buttons. This may be useful to indicate that a power failure has occurred and the peak values will only apply since return of the power.

Hysteresis is the difference between the point at which the alarm switches 'ON' and the point at which it switches 'OFF'. It is used to provide a definite indication of the alarm condition and to prevent alarm relay chatter.

Latching Alarm is used to hold the alarm condition once an alarm has been detected. It may be configured as:-

$nonE$	Non latching	A non-latching alarm will reset itself when the alarm condition is removed
$Auto$	Automatic	An auto latching alarm requires acknowledgement before it is reset. The acknowledgement can occur BEFORE the condition causing the alarm is removed.
mAn	Manual	The alarm continues to be active until both the alarm condition is removed AND the alarm is acknowledged. The acknowledgement can only occur AFTER the condition causing the alarm is removed.
Evt	Event	ALM beacon does not light but an output associated with this parameter will activate. An 'Event' is not acknowledged.

IMPORTANT: Due to safety regulations, any FM-approved output latching configuration cannot be modified.


Blocking Alarms The alarm may be masked during start up of a process. Blocking prevents the alarm from being activated until the process has first achieved a safe state. It is used to ignore start up conditions which are not representative of running conditions.

A blocking alarm is re-initiated after a setpoint change.

See section 9.12 for an explanation of the behaviour of blocking alarms under different conditions.

Rising rate of change (units/minute)	An alarm will be detected if the rate of change in a positive direction exceeds the alarm threshold
--------------------------------------	---

Falling rate of change (units/minute)	An alarm will be detected if the rate of change in a negative direction exceeds the alarm threshold
---------------------------------------	---

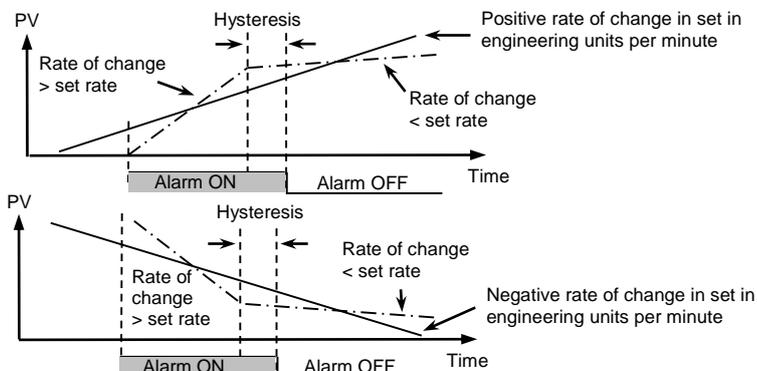

9.1.1 Alarm Relay Output

Alarms can operate relay outputs 1, 3 or 4. Any individual alarm can operate an individual output or any combination of alarms, up to four, can operate an individual output. They are either supplied pre-configured in accordance with the ordering code or set up in the Quick Codes or in configuration level.

Section 7.1 describes how to configure the alarm outputs using the 'SOURCE' parameters.

9.1.2 Alarm Indication

- ALM beacon flashing red = a new alarm (unacknowledged)
- This is accompanied by a scrolling alarm message. A typical default message will show the source of the alarm followed by the type of alarm. For example, 'ALARM 1 HIGH'
- If more than one alarm is present further messages are flashed in turn in the main display. The alarm indication will continue while the alarm condition is present and is not acknowledged.
- ALM beacon on continuously = alarm has been acknowledged.

9.1.3 To Acknowledge An Alarm

Press  and  'Ack' together.

The action, which now takes place, will depend on the type of latching, which has been configured

Non-Latched Alarms

Alarm condition present when the alarm is acknowledged.

- ALM beacon on continuously.
- The alarm message(s) will continue to scroll

This state will continue for as long as the alarm condition remains. When the alarm condition disappears all indication also disappears.

If a relay has been attached to the alarm output, it will de-energize when the alarm condition occurs and remain in this condition until acknowledged or the alarm is no longer present.

If the alarm condition disappears before it is acknowledged the alarm resets immediately.

Latched Alarms

See description in section 9.1.

Power Fail Alarm

Alarm condition is indicated when the indicator is switched on.

It is reset using 'Ack' buttons.

9.2 Behavior of Alarms After a Power Cycle

The response of an alarm after a power cycle depends upon the latching type, whether it has been configured to be a blocking alarm, its state and the acknowledge status of the alarm.

The response of active alarms after a power cycle is as follows:

For a non-latching alarm or an event alarm blocking will be re-instated, if configured. If blocking is not configured the active alarm will remain active. If the alarm condition has gone safe during the down time the alarm will return inactive.


For an auto-latching alarm blocking will be re-instated, if configured, only if the alarm had been acknowledged prior to the power cycle. If blocking is not configured or the alarm had not been acknowledged the active alarm will remain active. If the alarm condition has gone safe during the downtime the alarm will return inactive if it had been acknowledged prior to the power cycle else it will return safe but not acknowledged. If the alarm was safe but not acknowledged prior to the power cycle the alarm will return safe but not acknowledged.

For a manual-latching alarm blocking will not be re-instated and the active alarm will remain active. If the alarm condition has gone safe during the downtime the alarm will return safe but not acknowledged. If the alarm was safe but not acknowledged prior to the power cycle the alarm will return safe but not acknowledged.

The following examples show graphically the behaviour under different conditions:-


9.2.1 Example 1

Alarm configured as Absolute Low; Blocking: No Latching

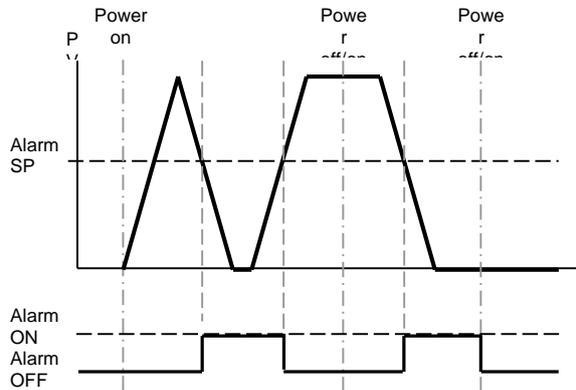

9.2.2 Example 2


Alarm configured as Absolute Low; Blocking: Manual Latching

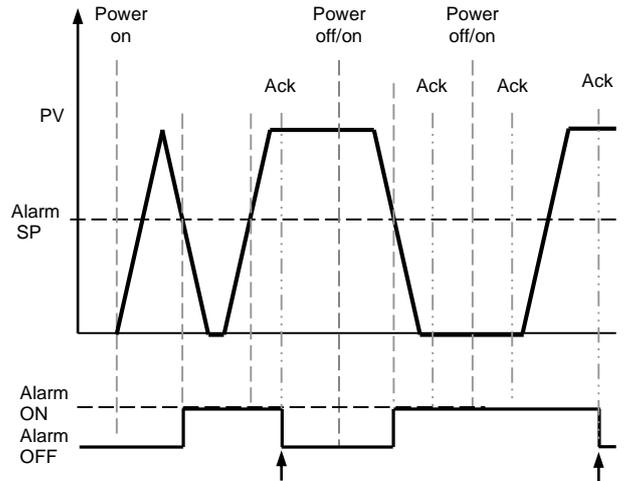

Note: The alarm will only cancel when the alarm condition is no longer current AND then it is acknowledged

9.2.3 Example 3

Alarm configured as Absolute Low; Blocking: Auto Latching

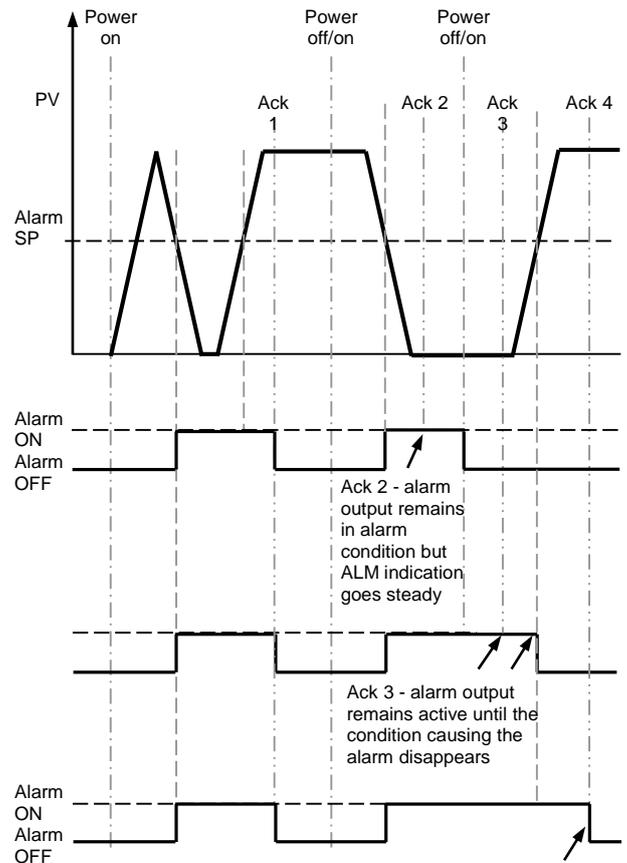

Ack 2 - alarm output remains in alarm condition but ALM indication goes steady

Ack 3 - alarm output remains active until the condition disappears

Ack 4 - alarm output remains active until acknowledged


9.3 Alarm Parameters

Four alarms are available. Parameters do not appear if the Alarm Type = None. The following table shows the parameters to set up and configure alarms.

ALARM LIST		'ALARM'					
Name	Scrolling Display	Parameter Description	Value		Default	Access Level	
A1.TYP	ALARM 1 TYPE	Selects the type of alarm	<i>nonE</i>	Alarm not configured	As order code	Conf	
			<i>Hi</i>	Full Scale High			
			<i>Lo</i>	Full Scale Low			
			<i>rroc</i>	Rising rate of change			
			<i>Froc</i>	Falling rate of change			
A1.---	ALARM 1 SETPOINT	Alarm 1 threshold value. The last three characters show the type of alarm configured from the above list	Instrument range		0	L3	
A1.STS	ALARM 1 OUTPUT	Indicates the status of the alarm	<i>OFF</i>	Alarm off		Read only	
			<i>On</i>	Alarm on			
A1.HYS	ALARM 1 HYSTERESIS	See description at the beginning of this section	0 to 9999			Conf	
A1.LAT	ALARM 1 LATCHING TYPE	See description at the beginning of this section	<i>nonE</i>	Non-latching	As order code	Conf	
			<i>Auto</i>	Latching with automatic resetting			
			<i>mAn</i>	Latching with manual resetting			
			<i>Evt</i>	Event (no alarm flashing beacon but messages can be displayed)			
A1.BLK	ALARM 1 BLOCKING	See description at the beginning of this section	<i>No</i>	No blocking	<i>No</i>	Conf	
			<i>YES</i>	Blocking			
A1.DLY	DELAY TIME	The alarm will not be indicated until the set time has elapsed	0:00 to 99:59 mm:ss 0:59 = 59 seconds 99:59 = 99 minutes 59 seconds		0:00		
A1.OFS	ALARM SETPOINT OFFSET	Applies a fixed offset to a full scale high or full scale low alarm setpoint. This may be useful when used in conjunction with digital communications, where a variable value may be downloaded during different parts of a process.	Instrument range		0	L3	
The above parameters are repeated for Alarm 2, A2; Alarm 3, A3; Alarm 4, A4							

9.3.1 Example: To Configure Alarm 1

Enter configuration level as described. Then:-

Do This	The Display You Should See	Additional Notes
1. Press  as many times as necessary to select 'ALARM'		
2. Press  to select 'A1.TYP'		Alarm Type choices are:- nonE Alarm not configured Hi Full Scale High Lo Full Scale Low rroc Rate of change rising Froc Rate of change falling
3. Press  or  to select the required alarm type		
4. Press  to select 'A1. - - -'		This is the alarm threshold setting for Alarm 1. Characters (- - -) shown after the alarm number indicate the type of alarm configured from the above list. The alarm threshold is shown in the upper display. In this example the high alarm will be detected when the measured value exceeds 215
5. Press  or  to set the alarm trip level		
6. Press  to select 'A1 STS'		This is a read only parameter which shows the status of the alarm output
7. Press  to select 'A1 HYS'		In this example the alarm will cancel when the measured value decreases 2 units below the trip level (e.g. at 213 units in this example)
8. Press  or  to set the hysteresis		
9. Press  to select 'A1 LAT'		Latching Type choices are:- nonE No latching Auto Automatic mAn Manual Evt Event See section 9.1 for an explanation of latching alarms
10. Press  or  to select the latching type		
11. Press  to select 'A1 BLK'		
12. Press  or  to 'YES' or 'no'		
13. Repeat the above to configure alarms 2, 3 and 4 if required		
14. Continue to press  to set up a delay before the alarm is indicated		

9.4 Diagnostic Alarms

Diagnostic alarms indicate a possible fault within the indicator or connected devices.

Display shows	What it means	What to do about it
<i>E[OnF</i>	A change made to a parameter takes a finite time to be entered. If the power to the indicator is turned off before the change has been entered then this alarm will occur. Do not turn the power off to the indicator while <i>[OnF</i> is flashing	Enter configuration mode then return to the required operating mode. It may be necessary to re-enter the parameter change since it will not have been entered in the previous configuration.
<i>E[AL</i>	Calibration error	Re-instate Factory calibration
<i>E[Er</i>	EEPROM error	Return to factory for repair
<i>EEEr</i>	Non-vol memory error	Note the error and contact your supplier
<i>E.L. n</i>	Invalid input type. This refers to custom linearisation which may not have been applied correctly or may have been corrupted.	Go to the INPUT list in configuration level and set a valid thermocouple or input type

10. Recipe

Not Applicable

11. Digital Communications

Digital Communications (or 'comms' for short) allows the indicator to communicate with a PC or a networked computer system.

This product conforms to MODBUS RTU ® protocol a full description of which can be found on www.modbus.org.

Two ports are available both using MODBUS RTU communication facilities:

1. a configuration port - intended to communicate with a system to download the instrument parameters and to perform manufacturing tests and calibration
2. an optional EIA 485 port on terminals HD, HE and HF - intended for field communications using, for example, a PC running a SCADA package.

The two interfaces cannot operate at the same time.

Each parameter has its own unique ModBus address. A list of these is given at the end of this section.

11.1 Digital Communications Wiring

11.1.1 EIA 485

To use EIA 485, buffer the EIA 232 port of the PC with a suitable EIA 232/RS485 converter. The use of an EIA 485 board built into the computer is not recommended since this board may not be isolated, which may cause noise problems, and the RX terminals may not be biased correctly for this application.

To construct a cable for EIA 485 operation use a screened cable with one (EIA 485) twisted pair plus a separate core for common. Although common or screen connections are not necessary, their use will significantly improve noise immunity.

The terminals used for EIA 485 digital communications are listed in the table below.

Standard Cable Colour	PC Function *	Instrument Terminal	Instrument Function
White	Receive, RX+	HF (B) or (B+)	Transmit, TX
Red	Transmit, TX+	HE (A) or (A+)	Receive, RX
Green	Common	HD	Common
Screen	Ground		

- These are the functions normally assigned to socket pins. Please check your PC manual to confirm.

See section 1.11 for wiring diagrams.

11.2 Digital Communications Parameters

The following table shows the parameters available.

DIGITAL COMMUNICATIONS LIST 'comms'						
Name	Scrolling Display	Parameter Description	Value		Default	Access Level
I D	MODULE IDENTITY	Comms identity	nonE	No module fitted	As order code	Conf L3 R/O
			r232	EIA 232 Modbus interface		
			r485	EIA 485 Modbus interface		
ADDR	ADDRESS	Communications address of the instrument	1 to 254		1	L3
BAUD	BAUD RATE	Communications baud rate	1200	1200	9600	Conf L3 R/O
			2400	2400		
			4800	4800		
			9600	9600		
			1920	19,200		
PRTY	PARITY	Communications parity	nonE	No parity	nonE	Conf L3 R/O
			EuEn	Even parity		
			Odd	Odd parity		
DELAY	RX/TX DELAY TIME	To insert a delay between Rx and Tx to ensure that drivers have sufficient time to switch over.	0FF	No delay		Conf L3 R/O
			0n	Fixed delay applied		
RETRN	TRANSMITTED PARAMETER	Master communications broadcast parameter. See section 11.2.1.	nonE	None	nonE	
			PU	Process Variable		
REG.AD	DESTINATION ADDRESS	Parameter added in the Slave address to which the master communications value will be written See section 11.5.	0 to 9999		0	

11.2.1 Broadcast Communications

Broadcast master communications, as a simple master, allows the Series 3L indicator to send a single value to any number of slave instruments. Modbus broadcast using function code 6 (Write single value) must be used. This allows the Series 3L to link with other products, without the need for a supervisory PC, to create a small system solution. The facility provides a simple and precise alternative to analogue retransmission.

The retransmitted parameter is Process Variable. The indicator will cease broadcast when it receives a valid request from a Modbus master.



Warning

When using broadcast master communications, bear in mind that updated values are sent many times a second. Before using this facility, check that the instrument to which you wish to send values can accept continuous writes. **Note that the SSI Series 3L does not accept continuous writes to the temperature setpoint. Damage to the internal non-volatile memory could result from the use of this function. If in any doubt, contact the manufacturer of the device in question for advice.**

When using the 3L series indicator fitted with software version 1.10 and greater, use the Remote Setpoint variable at Modbus address 26 if you need to write to a temperature setpoint. This has no write restrictions and may also have a local trim value applied.


11.2.2 Broadcast Master Communications

The Series 3L broadcast master can be connected to up to 31 slaves if no segment repeaters are used. If repeaters are used to provide additional segments, 32 slaves are permitted in each new segment. The master is configured by setting the 'RETRAN' parameter to *PU*.

Once the function has been enabled, the instrument will send this value out over the communications link every control cycle (250ms).

Notes:-

1. The parameter being broadcast must be set to the same decimal point resolution in both master and slave instruments.
2. If any Modbus master, is connected to the port on which the broadcast master is enabled, then the broadcast is temporarily inhibited. It will restart approximately 30 seconds after the master is removed.

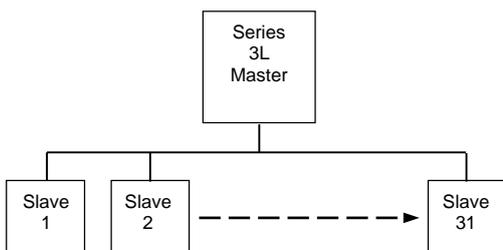

11.2.3 Wiring Connections


The Digital Communications module for use as a master or slave uses terminals HD to HF.

EIA485 2-wire Connections

Connect A in the master to A of the slave

Connect B in the master to B of the slave

This is shown diagrammatically below

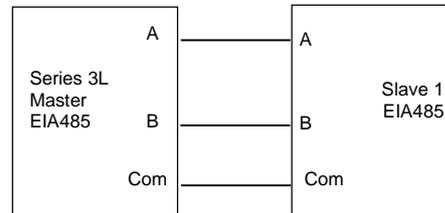

11.3 Example: To Set Up Instrument Address

This can be done in operator level 3:-

Do This	Display View	Additional Notes
1. Press  as many times as necessary to select 'COMMS LIST'		Scrolling display 'comms list'
2. Press  to scroll to 'ID'		Scrolling display 'id'
3. Press  or  to select EIA485 comms		
4. Press  to scroll to 'ADDR'		Up to 254 can be chosen but note that no more than 33 instruments should be connected to a single EIA485 link. Scrolling display 'address'
5. Press  or  to select the address for the particular indicator		

11.4 DATA ENCODING

Modbus data is normally encoded into a 16 bit signed integer representation.

Integer format data, including any value without a decimal point or represented by a textual value (for example 'off', or 'on'), is sent as a simple integer value.

For floating point data, the value is represented as a 'scaled integer', in which the value is sent as an integer which gives the result of the value multiplied by 10 to the power of the decimal resolution for that value. This is easiest to understand by reference to examples:

FP Value	Integer Representation
FP Value	Integer Representation
9.	9
-1.0	10
123.5	1235
9.99	999

It may be necessary for the Modbus master to insert or remove a decimal point when using these values.

11.5 Parameter Modbus Addresses

Parameter Mnemonic	Parameter Name	Modbus Address (Decimal)
PV.IN	PV (Temperature) Input Value (see also Modbus address 203 which allows writes over Modbus to this variable).	1
RNG.LO	Input Range Low Limit	11
RNG.HI	Input Range High Limit	12
A1.---	Alarm 1 Threshold	13
A2.---	Alarm 2 Threshold	14
	Cal offset 4	26
LOC.t	Local Trim – added to the remote setpoint to compensate for local temperature variations in a control zone.	27
A1.HYS	Alarm 1 Hysteresis	47
	Cal point 4	66
	Cal point 3	67
A2.HYS	Alarm 2 Hysteresis	68
A3.HYS	Alarm 3 Hysteresis	69
A4.HYS	Alarm 4 Hysteresis	71
StAt	Instrument Status. This is a bitmap: B0 – Alarm 1 Status B1 – Alarm 2 Status B2 – Alarm 3 Status B3 – Alarm 4 Status B5 – Sensor Break Status B10 – PV Overrange (by > 5% of span) B12 – New Alarm Status In each case, a setting of 1 signifies 'Active', 0 signifies 'Inactive'.	75
A3.---	Alarm 3 Threshold	81
A4.---	Alarm 4 Threshold	82
Di.IP	Digital Inputs Status. This is a bitmap: B0 – Logic input 1A B1 – Logic input LA B2 – Logic input LB B7 – Power has failed since last alarm acknowledge A value of 1 signifies the input is closed, otherwise it is zero. Values are undefined if options are not fitted or not configured as inputs.	87
FILT.T	Input Filter Time	101
Home	Home Display. 0 – Standard PV display 4 – PV and Alarm 1 setpoint 6 – PV only 7 – PV and Alarm 1 setpoint read only	106
-	Instrument version number. Should be read as a hexadecimal number, for example a value of 0111 hex is instrument V1.11	107
-	Static message	108
-	Instrument type code.	122
HIGH	Peak high	126
LOW	Peak low	127
ADDR	Instrument Comms Address	131
PV.OFS	PV Offset	141

C.Adj	Calibration Adjust	146
IM	Instrument mode 0 – Operating mode - all algorithms and I/O are active 1 – Standby - control outputs are off 2 – Config Mode - all outputs are inactive	199
COLOR	Colour change Green – Red – Green normal/Red on alarm –	200
MV.IN	Input value in millivolts	202
PV.CM	Comms PV Value. This may be used to write to the Process Variable (temperature) parameter over Modbus when a linearisation type of 'Comms' is selected, allowing the instrument to control to externally derived values. If sensor break is turned on, it is necessary to write to this variable once every 5 seconds. Otherwise a sensor break alarm will be triggered as a failsafe. If this is not required, turn sensor break off.	203
		204
CJC.IN	CJC Temperature	215
TARE	Tare enable Off – On – Fail -	223
SBR	Sensor Break Status (0 = Off, 1 = Active)	258
NEW.AL	New Alarm Status (0 = Off, 1 = Active)	260
	Alarm latch status	261
Ac.All	Acknowledge all alarms (1 = Acknowledge)	274
A1.STS	Alarm 1 Status (0 = Off, 1 = Active)	294
A2.STS	Alarm 2 Status (0 = Off, 1 = Active)	295
A3.STS	Alarm 3 Status (0 = Off, 1 = Active)	296
A4.STS	Alarm 4 Status (0 = Off, 1 = Active)	297
	Alarm 1 inhibit	298
	Alarm 2 inhibit	299
	Alarm 3 inhibit	300
	Alarm 4 inhibit	301
REC.NO	Recipe to Recall	313
STORE	Recipe to Save	314
Lev2.P	Level 2 Code	515
UNITS	Display Units 0 – Degrees C 1 – Degrees F 2 – Kelvin 3 – None 4 – Percent	516
Lev3.P	Level 3 Code	517
Conf.P	Config Code	518
Cold	If set to 1 instrument will reset to factory defaults on next reset or power cycle.	519
DEC.P	Decimal Point Position 0 – XXXX. 1 – XXX.X 2 – XX.XX	525
STBY.T	Standby Type	530

	0 – Absolute Alarm Outputs Active – others off 1 – All outputs inactive	
uCAL	User Calibration Enable	533
A1.TYP	Alarm 1 Type 0 – Off 1 – Absolute High 2 – Absolute Low 3 – Deviation High 4 – Deviation Low 5 – Deviation Band	536
A2.TYP	Alarm 2 Type (as Alarm 1 Type)	537
A3.TYP	Alarm 3 Type (as Alarm 1 Type)	538
A4.TYP	Alarm 4 Type (as Alarm 1 Type)	539
A1.LAT	Alarm 1 Latching Mode 0 – No latching 1 – Latch - Automatic Reset 2 – Latch – Manual Reset	540
A2.LAT	Alarm 2 Latching Mode (as Alarm 1 Latching Mode)	541
A3.LAT	Alarm 3 Latching Mode (as Alarm 1 Latching Mode)	542
A4.LAT	Alarm 4 Latching Mode (as Alarm 1 Latching Mode)	543
A1.BLK	Alarm Blocking Mode Enable (0 = OFF, 1 = BLOCK)	544
A2.BLK	Alarm Blocking Mode Enable (0 = OFF, 1 = BLOCK)	545
A3.BLK	Alarm Blocking Mode Enable (0 = OFF, 1 = BLOCK)	546
A4.BLK	Alarm Blocking Mode Enable (0 = OFF, 1 = BLOCK)	547
Di.OP	Digital Outputs Status. This is a bitmap: B0 – Output 1A B1 – (not used) B2 – Output 3A B3 – Output 4/AA It is possible to write to this status word to use the digital outputs in a telemetry output mode. Only outputs whose function is set to 'none' are affected, and the setting of any bits in the Digital Output Status word will not affect outputs used for heat (for example) or other functions. Thus it is not necessary to mask in the settings of these bits when writing to this variable.	551
	Alarm 1 delay	552
	Alarm 2 delay	553
	Alarm 3 delay	554
	Alarm 4 delay	555
	Alarm 1 offset	556
	Alarm 2 offset	557
	Alarm 3 offset	558
	Alarm 4 offset	559
OFS.HI	Adjust High Offset	560
OFS.LO	Adjust Low Offset	561
PNT.HI	Adjust High Point	562
PNT.LO	Adjust Low Point	563
SB.TYP	Sensor Break Type 0 – No Sensor Break	578

	1 – Non-Latching Sensor Break 2 – Latching Sensor Break	
SB.DIR	Sensor break direction Up – Down –	579
Id	Customer ID – May be set to any value between 0-9999 for identification of instruments in applications. Not used by the instrument itself.	629
PHASE	Calibration Phase 0 – None 1 – 0 mv 2 – 50 mv 3 – 150 Ohm 4 – 400 Ohm 5 – CJC 6 – CT 0 mA 7 – CT 70 mA 8 – Factory Defaults	768
GO	Calibration Start 0 – No 1 – Yes (start cal) 2 – Cal Busy 3 – Cal Pass 4 – Cal Fail Note values 2-4 cannot be written but are status returns only	769
K.LOC	Allows instrument to be locked via a key/digital input 0 - unlocked, 1 – all keys locked 2 – Edit keys (raise and lower) disabled 3 – Mode key disabled 4 – Manual mode disabled 5 – Enter standby mode when Mode combination pressed 6 – Timer keys disabled	1104
IN.TYP	Input Sensor Type 0 – J Type Thermocouple 1 – K Type Thermocouple 2 – L Type Thermocouple 3 – R Type Thermocouple 4 – B Type Thermocouple 5 – N Type Thermocouple 6 – T Type Thermocouple 7 – S Type Thermocouple 8 – RTD 9 – millivolt 10 – Comms Input (see Modbus address 203) 11 – Custom Input (Downloadable)	12290
CJ.TYP	CJC Type 0 – Auto 1 – 0 Degrees C 2- 50 Degrees C	12291
mV.HI	Linear Input High	12306
mV.LO	Linear Input Low	12307
L.TYPE	Logic Input A channel hardware type 0 – None 1 – Logic Inputs	12352
L.D.IN	Logic input A function 40 – None 41 – Acknowledge all alarms 42 – Select SP1/2 43 – Lock All Keys 44 – Timer Reset	12353

	45 – Timer Run 46 – Timer Run/Reset 47 – Timer Hold 48 – Auto/Manual Select 49 – Standby Select	
L.SENS	Configures the polarity of the logic input channel A (0 = Normal, 1 = Inverted)	12361
L.TYPE (LB)	Logic Input B channel hardware type 0 – None 1 – Logic Inputs	12362
L.D.IN (LB)	Logic input B function) 40 – None 41 – Acknowledge all alarms 42 – Select SP1/2 43 – Lock All Keys 44 – Timer Reset 45 – Timer Run 46 – Timer Run/Reset 47 – Timer Hold 48 – Auto/Manual Select 49 – Standby Select	12363
L.SENS (LB)	Configures the polarity of the logic input channel B (0 = Normal, 1 = Inverted)	12377
ID	Comms Module Type 0 – None 1 – RS485 2 – RS232	12544
BAUD	Baud Rate 0 – 9600 1 – 19200 2 – 4800 3 – 2400 4 – 1200	12548
PRTY	Parity setting 0 – None 1 – Even 2 – Odd	12549
DELAY	RX/TX Delay – (0 = no delay, 1 = delay) Select if a delay is required between received and transmitted comms messages. Sometimes required when intelligent RS485 adaptors are used.	12550
RETRN	Comms Retransmission Variable selection: 0 – Off 1 – Working Setpoint 2 – PV 3 – Output Power 4 – Error	12551
REG.AD	Modbus register address to broadcast retransmission to. For example if you wish to retransmit the working setpoint from one Series 3L to a group of slaves, and receive the master working setpoint into the slaves' remote setpoint, set this variable to 26 (the address of the remote setpoint in the slave units).	12552
	Cal 3 offset	12558
	Cal 4 offset	12559
1.ID	IO channel 1 hardware type 0 – None 1 – Relay	12672

1.FUNC	I/O Channel Function 0 – None (or Telemetry Output) 1 – Digital Output	12674
1.SRC.A	IO Channel 1 Source A 0 – None 1 – Alarm 1 2 – Alarm 2 3 – Alarm 3 4 – Alarm 4 5 – All Alarms (1-4) 6 – New Alarm 9 – Sensor Break Alarm	12677
1.SRC.B	IO Channel 1 Source B As IO Channel 1 Source A (Modbus address 12678)	12678
1.SRC.C	IO Channel 1 Source C As IO Channel 1 Source A (Modbus address 12678)	12679
1.SRC.D	IO Channel 1 Source D As IO Channel 1 Source A (Modbus address 12678)	12680
1.SENS	Configures the polarity of the input or output channel (0 = Normal, 1 = Inverted)	12681
	IO1 high	12682
	IO1 telemetry	12683
3.ID	Output 3 Type 0 – None 1 – Relay	12800
3.FUNC	Output 3 Channel function 0 – None (or Telemetry Output) 1 – Digital Output	12803
3.SRC.A	Output 3 source A As IO Channel 1 Source A (Modbus address 12678)	12806
3.SRC.B	Output 3 source B As IO Channel 1 Source A (Modbus address 12678)	12807
3.SRC.C	Output 3 source C As IO Channel 1 Source A (Modbus address 12678)	12808
3.SRC.D	Output 3 source D As IO Channel 1 Source A (Modbus address 12678)	12809
3.SENS	Output 3 Polarity (0 = Normal, 1 = Inverted)	12810
	Output 3 telemetry	12812
4.TYPE	Output AA Type 0 – None 1 – Relay	13056
4.FUNC	Output 4 Channel function 0 – None (or Telemetry Output) 1 – Digital Output	13059
4.SRC.A	Output AA source A As IO Channel 1 Source A (Modbus address 12678)	13062
4.SRC.B	Output AA source B As IO Channel 1 Source A (Modbus address 12678)	13063
4.SRC.C	Output AA source C As IO Channel 1 Source A (Modbus address 12678)	13064
4.SRC.D	Output AA source D As IO Channel 1 Source A (Modbus address 12678)	13065

4.SENS	Output AA sense (0 = Normal, 1 = Inverted)	13066
--------	--	-------

12. Calibration

All ranges are calibrated during manufacture to traceable standards for every input type. When changing ranges it is not necessary to calibrate the indicator. Furthermore, the use of a continuous automatic zero correction of the input ensures that the calibration of the instrument is optimized during normal operation.

To comply with statutory procedures such as the Heat Treatment Specification AMS2750, the calibration of the instrument can be verified and recalibrated if considered necessary in accordance with the instructions given in this chapter.

For example AMS2750 states:-

"Instructions for calibration and recalibration of 'field test instrumentation' and 'control monitoring and recording instrumentation' as defined by the NADCAP Aerospace Material Specification for pyrometry AMS2750D clause 3.2.5 (3.2.5.3 and sub clauses) including Instruction for the application and removal of offsets defined in clause 3.2.4"

12.1 To Check Input Calibration

The PV Input may be configured as mV, mA, thermocouple or platinum resistance thermometer.

12.1.1 Precautions


Before checking or starting any calibration procedure the following precautions should be taken:-

1. When calibrating mV inputs make sure that the calibrating source output is set to less than 250mV before connecting it to the mV terminals. If accidentally a large potential is applied (even for less than 1 second), then at least one hour should elapse before commencing the calibration.
2. RTD and CJC calibration must not be carried out without prior mV calibration.
3. A pre-wired jig built using a spare instrument sleeve may help to speed up the calibration procedure especially if a number of instruments are to be calibrated.
4. Power should be turned on only after the instrument has been inserted in the sleeve of the pre-wired circuit. Power should also be turned off before removing the instrument from its sleeve.
5. Allow at least 10 minutes for the instrument to warm up after switch on.

12.1.2 To Check mV Input Calibration

The input may have been configured for a process input of mV, Volts or mA and scaled in Level 3 as described in section 5. The example described in section 6.1.4 assumes that the display is set up to read 2.0 for an input of 4.000mV and 500.0 for an input of 20.000mV.

To check this scaling, connect a milli-volt source, traceable to national standards, to terminals V+ and V- using copper cable as shown in the diagram below.

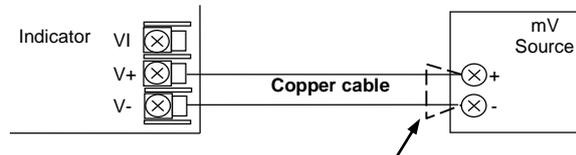


Ensure that no offsets (see sections 6.1.3 and 12.2) have been set in the indicator.

Set the mV source to 4.000mV. Check the display reads $2.0 \pm 0.25\% \pm 1\text{LSD}$ (least significant digit).

Set the mV source to 20.000mV. Check the display reads $500.0 \pm 0.25\% \pm 1\text{LSD}$.

12.1.3 To Check Thermocouple Input Calibration

Connect a milli-volt source, traceable to national standards, to terminals V+ and V- as shown in the diagram below. The mV source must be capable of simulating the thermocouple cold junction temperature. It must be connected to the instrument using the correct type of thermocouple compensating cable for the thermocouple in use.

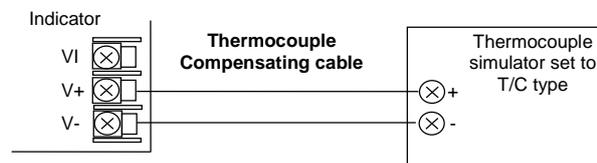

Set the mV source to the same thermocouple type as that configured in the indicator.


Adjust the mV source to the minimum range. For a type J thermocouple, for example, the minimum range is -210°C . However, if it has been restricted using the Range Low parameter then set the mV source to this limit. Check that the reading on the display is within $\pm 0.25\%$ of minimum range $\pm 1\text{LSD}$.

Adjust the mV source for to the maximum range. For a type J thermocouple, for example, the maximum range is 1200°C . However, if it has been restricted using the Range High parameter then set the mV source to this limit. Check that the reading on the display is within $\pm 0.25\%$ of maximum range $\pm 1\text{LSD}$.

Intermediate points may be similarly checked if required.

12.1.4 To Check RTD Input Calibration

Connect a decade box with total resistance lower than 1K and resolution to two decimal places in place of the RTD as indicated on the connection diagram below **before the instrument is powered up**. If at any instant the instrument was powered up without this connection then at least 10 minutes must elapse from the time of restoring this connection before RTD calibration check can take place.

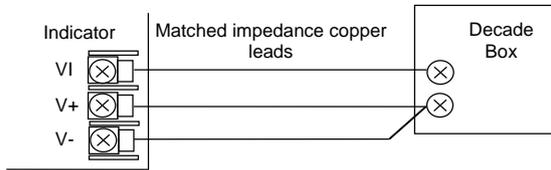

The RTD range of the instrument is -200 to 850°C. It is, however, unlikely that it will be necessary to check the instrument over this full range.

Set the resistance of the decade box to the minimum range. For example 0°C = 100.00Ω. Check the calibration is within ±0.25% of 0° ± 1LSD.

Set the resistance of the decade box to the maximum range. For example 200°C = 175.86Ω. Check the calibration is within ±0.25% of 200° ± 1LSD.

12.2 Offsets


The process value can be offset to take into account known errors within the process. The offset can be applied to any Input Type (mV, V, mA, thermocouple or RTD).

A single offset can be applied - the procedure is carried out in the **INPUT** list and has been described in section 6.1.3.

It is also possible to adjust the low and high points as a five point offset. This can only be done in **Level 3** in the 'Cal' list and is described below.

12.2.1 Five Point Offset



A five point offset may be used to compensate for transducer or measurement non-linearities. The diagram shows an example of the type of discontinuity which might occur in a system.

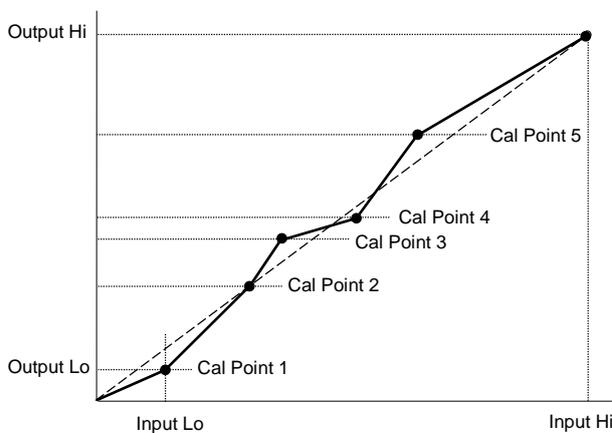

In this case adjust each point in turn for the VALUE WHICH THE INDICATOR SHOULD READ. For example if the value at point 1 should be 1.2345 then set *Pnt. 1* to this value. The following example shows how to do this.

Do This	Display View	Notes
1. Select Level 3 as described in Chapter 2. Then press to select 'CAL'		Scrolling message calibration list
2. Press to scroll to 'u.cal'		Scrolling message user calibration
3. Press or to 'Pnt. 1'		To revert to the original values, select r5Et
4. Press to scroll to 'C.Adj'		Note:- this is not an offset value
5. Press or to the correct value		
6. Repeat the above for points 1 to 5		

In some cases it will not be necessary to adjust all 5 points. For example, a low and high adjustment may be all that is necessary as shown in the following diagrams.

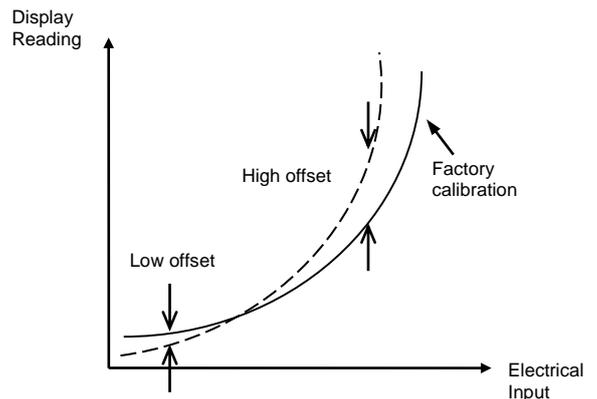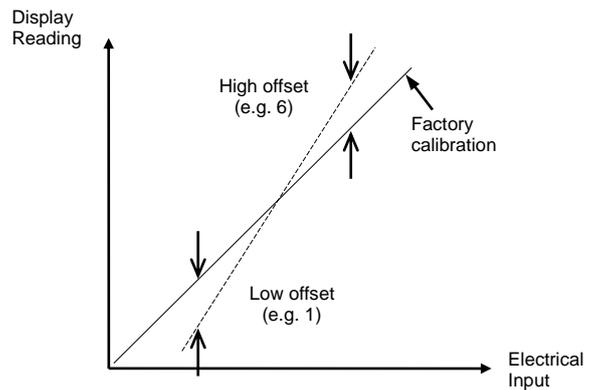

In this case set *Pnt. 1* to the required low point value. For the high point value you may select any point *Pnt. 2* to *Pnt. 5*. The instrument applies a straight line between the two points.

Note:-

The calibration points must be chosen consecutively – the five point calibration will not work if a higher point is inserted between other points.

12.3 Input Calibration


If the calibration is not within the specified accuracy follow the procedures in this section:

In Series 3L series instruments, inputs which can be calibrated are:

- mV Input.** This is a linear 80mV range calibrated at two fixed points. This should always be done before calibrating either thermocouple or resistance thermometer inputs. mA range calibration is included in the mV range.
- Thermocouple** calibration involves calibrating the temperature offset of the CJC sensor only. Other aspects of thermocouple calibration are also included in mV calibration.
- Resistance Thermometer.** This is also carried out at two fixed points - 150Ω and 400Ω.

12.3.1 To Calibrate mV Range

Calibration of the mV range is carried out using a 50 milli-volt source, connected as shown in the diagram below. mA calibration is included in this procedure.

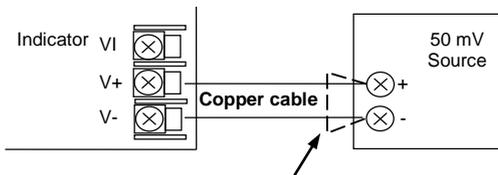

For best results 0mV should be calibrated by disconnecting the copper wires from the mV source and short circuiting the input to the indicator

Select **Conf Level** as described in Chapter 2, set the indicator input to mV range, then:-

Do This	Display View	Additional Notes
1. From any display press as many times as necessary until the 'CAL' page header is displayed.		Scrolling display 'CALIBRATION LIST'
2. Press to select 'PHASE'		Scrolling display 'CALIBRATION phase'
3. Set mV source for 0mV		
4. Press or to choose '0'		
5. Press to select 'GO'		Scrolling display 'CALIBRATION start'
6. Press or to choose 'YES'	 	The indicator automatically calibrates to the injected input mV.

As it calibrates the display will show *busy* then *PASS*, assuming a successful calibration.

If it is not successful then 'FAIL' will be displayed. This may be due to incorrect input mV

7. Set mV source for 50mV

8. Press to select 'PHASE'



The indicator calibrates to the high point in the same way as the low point above


9. Press or to choose '50'

10. Repeat 5 & 6 above

12.3.2 To Calibrate Thermocouple Ranges

Thermocouples are calibrated, firstly, by following the previous procedure for the mV ranges, then calibrating the CJC.

This can be carried out using an external CJC reference source such as an ice bath or using a thermocouple mV source. Replace the copper cable shown in the diagram below with the appropriate compensating cable for the thermocouple in use.

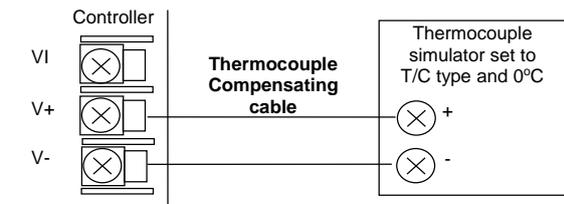

Set the mV source to **internal compensation** for the thermocouple in use and set the output for **0mV**. Then:-

Do This	Display View	Additional Notes
1. From the mV calibration, press or to select 'CJC'		
2. Press to select 'GO'		The indicator automatically calibrates to the CJC input at 0mV.
3. Press or to choose 'YES'	 	As it does this the display will show <i>busy</i> then <i>PASS</i> , assuming a successful calibration. If it is not successful then 'FAIL' will be displayed. This may be due to an incorrect input mV

12.3.3 To Calibrate RTD Ranges


The two points at which the RTD range is calibrated are 150.00Ω and 400.00Ω.

Before starting RTD calibration:

- A decade box with total resistance lower than 1K must be connected in place of the RTD as indicated on the connection diagram below **before the instrument is powered up**. If at any instant the instrument was powered up without this connection then at least 10 minutes must elapse from the time of restoring this connection before RTD calibration can take place.
- The instrument should be powered up for at least 10 minutes.

Before using or verifying RTD calibration:

- The mV range must be calibrated first.

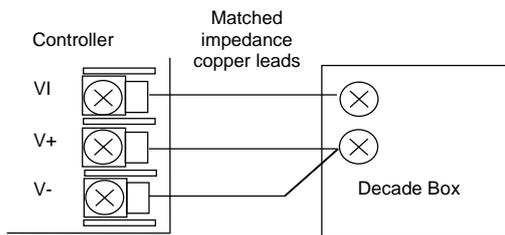

Do This	Display View	Notes
1. From any display press as many times as necessary until the 'CAL' page header is displayed.		Scrolling display 'CALIBRATION LIST'
2. Press to select 'PHASE'		Scrolling display 'CALIBRATION phase'
3. Set the decade box for 150.00Ω		
4. Press or to choose '150r'		
5. Press to select 'GO'		Scrolling display 'CALIBRATION start'
6. Press or to choose 'YES'		
The indicator automatically calibrates to the injected 150.00Ω input. As it does this the display will show <i>busy</i> then <i>PASS</i> , assuming a successful calibration. If it is not successful then 'FAIL' will be displayed. This may be due to an incorrect input resistance		
7. Set the decade box for 400.00Ω		
8. Press or to choose '400r'		
9. Repeat 5 and 6 above to calibrate the high point		
The indicator will again automatically calibrate to the injected 400.00Ω input. If it is not successful then 'FAIL' will be displayed		

12.4 Calibration Parameters

The following table lists the parameters available in the Calibration List.

CALIBRATION PARAMETER LIST			'cAL'		Default	Access Level
Name	Scrolling Display	Parameter Description	Value			
UCAL	USER CALIBRATION	To calibrate the 5 point linerization table.	<i>Idle</i>			L3 only
			<i>Pnt.1</i>			
			<i>Pnt.2</i>			
			<i>Pnt.3</i>			
			<i>Pnt.4</i>			
			<i>Pnt.5</i>			
PHASE	CALIBRATION PHASE	To calibrate low and high offset	<i>FRct</i>	Return to factory settings	<i>FRct</i>	Factory
			<i>nonE</i>	Not selected	<i>nonE</i>	Conf only
			<i>0</i>	Select mV i/p low calibration point		
			<i>50</i>	Select mV i/p high calibration point		
			<i>00</i>	Select V i/p low calibration point		
			<i>150r</i>	Select PRT i/p low cal point		
			<i>400r</i>	Select PRT i/p high cal point		
			<i>CJC</i>	Select CJC calibration		
GO	CALIBRATION START	To start the calibration sequence	<i>n0</i>	Initial state	<i>n0</i>	Conf
			<i>YES</i>	Start		
			<i>bUSY</i>	Calibrating		
			<i>PASS</i>	Calibration successful		
			<i>FR, L</i>	Calibration unsuccessful		
			<i>YES</i>	Start auto calibration		
			<i>Lo</i>	These parameters automatically appear as the calibration takes place.		
			<i>Hi</i>			
<i>PASS</i>						
			<i>FR, L</i>			

13. TECHNICAL SPECIFICATION

General

Temperature limits	Operation: 0 to 55°C (32 to 131°F), Storage: -10 to 70°C (14 to 158°F)
Humidity limits	Operation: RH: 5 to 90% non-condensing Storage: RH: 5 to 90% non-condensing
Panel sealing	IP 65, Nema 4X
Shock	BS EN61010
Vibration	2g peak, 10 to 150Hz
Altitude	<2000 metres
Atmospheres	Not suitable for use above 2000m or in explosive or corrosive atmospheres.
Electromagnetic compatibility (EMC)	BS EN61326
Electrical safety	BS EN61010 Installation cat. II; Pollution degree 2
Installation category II	The rated impulse voltage for equipment on nominal 230V supply is 2500V
Pollution degree 2	Normally only non conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation shall be expected.

Physical	Series 3L
Panel mounting	1/4 DIN
Weight grams	420
Dimensions mm	96W x 96H x 90D
Panel cut-out dimensions mm	92W x 92H

Operator interface

Type	LCD TN with backlight
Main PV display	Series 3L 4 digits green
Lower display	5 character starburst, green
Status beacon	Units, outputs, alarms, active setpoint

Power requirements

Series 3L	100 to 240Vac, -15%, +10% 48 to 62Hz, max 8W 24Vac, -15%, +10% 24Vdc, -15%, +20%, $\pm 5\%$ ripple voltage, max 8W
-----------	--

Approvals

CE, cUL listed (file ES7766), Gost, FM, EN14597TW approval number TW1222.

Transmitter PSU

Isolation	264Vac double insulated
Output Voltage	24Vdc, 20mA

Communications: serial communications option

Protocol	Modbus RTU slave Modbus RTU Master broadcast (1 parameter)
Isolation	264Vac double insulated

Transmission standard	EIA485 2-wire
Transmission standard	EIA485 2-wire

Process Variable Input

Calibration accuracy	<±0.25% of reading ±1LSD ⁽¹⁾
Sample rate	9Hz (110mS)
Isolation	264Vac double insulated from the PSU and communications
Resolution (µV)	< 0.5µV with 1.6s filter (mV range) < 0.25µV with 1.6s filter (Volts range)
Resolution (effective bits)	>17 bits
Linearisation accuracy	<0.1% of reading
Drift with temperature	<50ppm (typical) <100ppm (worst case)
Common mode rejection	48 - 62 Hz, >-120db
Series mode rejection	48 - 62 Hz, >-93db
Input impedance	100MΩ (200KΩ on volts range C)
Cold junction compensation	>30 to 1 rejection of ambient temperature
External cold junction	Reference of 0°C
Cold junction accuracy	<±1°C at 25°C ambient
Linear (process) input range	-10 to 80mV, 0 to 10V with external potential divider module 100KΩ/806Ω
Thermocouple Types	K, J, N, R, S, B, L, T, C, custom download ⁽²⁾
RTD Type	3-wire, Pt100 DIN43760
Bulb current	0.2mA
Lead compensation	No error for 22 ohms in all 3 leads
Input filter	Off to 100 seconds
Zero offset	User adjustable over the full display range
User calibration	2-point gain & offset

Notes

(1) Calibration accuracy quoted over full ambient operating range and for all input linearisation types.

(2) Contact SSI for details of availability of custom downloads for alternative sensors.

Sample time:	9hz (110ms)
Isolation:	264Vac double isolation from the PSU and communications
Excitation:	10Vdc +7%
Sensitivity:	1.4 to 4mV/V
Input span:	-27% to +127% of full scale (approx. – 10mV to +5mV):
Zero balance:	+ 25% of full scale
Tare:	+ 25% of full scale
Resolution (mV):	0.3mV/V(typical) with 1.6s filter
Resolution (effective bits):	14.3 bits

Drift with temperature:	<100ppm/°C of full scale
Common mode rejection:	48-62Hz, >-120db
Series rejection:	48-62Hz, >-60db
Input filter:	Off to 100s

AA relay

Type	Form C changeover
Rating	Min: 100mA @ 12Vdc, Max: 2A @ 264Vac resistive
Functions	Alarms or events

Digital input A/B

Contact closure	Open >600Ω Closed <300Ω
Input current	<13mA
Isolation	None from PV or system 264Vac double insulated from PSU and communications
Functions	Includes alarm acknowledge, keylock, alarm inhibit, freeze display, tare, auto zero, peak reset

Relay output channels

Type	OP1, OP3 Form A (normally open) AA Form C changeover
Rating	Min: 100mA @ 12Vdc, Max: 2A @ 264Vac resistive
Functions	Alarms or events

Software features**Alarms**

Number	4
Type	Absolute high and low, rate of change (rising or falling)
Latching	Auto or manual latching, non-latching, event only
Output assignment	Up to four conditions can be assigned to one output

Custom messages

Number	15 scrolling text messages
Number of characters	127 characters per message max
Languages	English, German, French, Spanish, Italian
Selection	Active on any parameter status using conditional command

Recipes

Number	5 with 19 parameters
Selection	HMI interface, communications or dig. IO

Other features

Scrolling text	Parameter help, custom messages
Display filter	Off to zero last 2 digits
Peak monitor	Stores high and low values

FM

Alarm 1 configuration:	Absolute hi or lo, de-energized in alarm Latching output on Form C (AA) Relay All alarms active on sensor break and power fail
Alarm setpoint:	Adjustment protection via password

Configuration security FM option prevents reconfiguration of alarm config

14. Parameter Index

This is a list of parameters in alpha/numeric order to help locate the section in which they are applicable.

Parameter	Parameter Name	Parameter list & Section
1.FUNC	I/O 1 FUNCTION	Output 1 List section 7.1
1.ID	I/O 1 TYPE	Output 1 List section 7.1
1.SENS	I/O 1 SENSE	Output 1 List section 7.1
1.SRC.A	I/O 1 SOURCE A	Output 1 List section 7.1
1.SRC.B	I/O 1 SOURCE B	Output 1 List section 7.1
1.SRC.C	I/O 1 SOURCE C	Output 1 List section 7.1
1.SRC.D	I/O 1 SOURCE D	Output 1 List section 7.1
3.FUNC	I/O 3 FUNCTION	Output 3 List section 7.2
3.ID	I/O 3 TYPE	Output 3 List section 7.2
3.SENS	I/O 3 SENSE	Output 1 List section 7.2
3.SRC.A	I/O 3 SOURCE A	Output 1 List section 7.2
3.SRC.B	I/O 3 SOURCE B	Output 1 List section 7.2
3.SRC.C	I/O 3 SOURCE C	Output 1 List section 7.2
3.SRC.D	I/O 3 SOURCE D	Output 1 List section 7.2
4.FUNC	I/O 4 FUNCTION	Output 4 List (AA Relay) section 7.3
4.SENS	I/O 4 SENSE	Output 4 List (AA Relay) section 7.3
4.SRC.A	I/O 4 SOURCE A	Output 4 List (AA Relay) section 7.3
4.SRC.B	I/O 4 SOURCE B	Output 4 List (AA Relay) section 7.3
4.SRC.C	I/O 4 SOURCE C	Output 4 List (AA Relay) section 7.3
4.SRC.D	I/O 4 SOURCE D	Output 4 List (AA Relay) section 7.3
4.TYPE	OUTPUT 4 TYPE	Output 4 List (AA Relay) section 7.3
A1.---	ALARM 1 SETPOINT	Alarm List section 9.3
A1.BLK	ALARM 1 BLOCKING	Alarm List section 9.3
A1.DLY	DELAY TIME	Alarm List section 9.3
A1.HYS	ALARM 1 HYSTERESIS	Alarm List section 9.3
A1.LAT	ALARM 1 LATCHING TYPE	Alarm List section 9.3
A1.OFS	ALARM SETPOINT OFFSET	Alarm List section 9.3
A1.STS	ALARM 1 OUTPUT	Alarm List section 9.3
A1.TYP	ALARM 1 TYPE	Alarm List section 9.3
ADDR	ADDRESS	Digital Communications List section 11.2
BAUD	BAUD RATE	Digital Communications List section 11.2
CJ.TYP	CJC TYPE	Input List section 6.1
CJ.IN	CJC TEMPERATURE	Input List section 6.1
COLD	COLD START ENABLE/DISABLE	Access List section 5.5
CONF.P	CONFIG PASSCODE	Access List section 5.5
DEC.P	DISPLAY POINTS	Input List section 6.1
DELAY	RX/TX DELAY TIME	Digital Communications List section 11.2
E.CaL		Diagnostic Alarm List section 9.4
E.Conf		Diagnostic Alarm List section 9.4

Parameter	Parameter Name	Parameter list & Section
E.Lin		Diagnostic Alarm List section 9.4
E2.Er		Diagnostic Alarm List section 9.4
EE.Er		Diagnostic Alarm List section 9.4
FILT.D	DISPLAY FILTER	Input List section 6.1
FILT.T	FILTER TIME	Input List section 6.1
GO	CALIBRATION START	Calibration List section 12.4
GOTO	GOTO	Access List section 5.5
HOME	HOME DISPLAY See Note 1	Access List section 6.5
ID	CUSTOMER ID	Access List section 5.5
ID	MODULE IDENTITY	Digital Communications List section 11.4
IN.TYP	INPUT TYPE	Input List section 6.1
INP.HI	LINEAR INPUT HIGH	Input List section 6.1
INP.LO	LINEAR INPUT LOW	Input List section 6.1
K.LOCK	KEYBOARD LOCK	Access List section 5.5
L.D.IN	LOGIC INPUT FUNCTION	Digital Input List section 8.1
L.SENS	LOGIC INPUT SENSE	Digital Input List section 8.1
L.TYPE	LOGIC INPUT TYPE	Digital Input List section 8.1
LEV2.P	LEVEL 2 PASSCODE	Access List section 5.5
LEV3.P	LEVEL 3 PASSCODE	Access List section 5.5
MESG	STATIC HOME MESSAGE	Access List section 5.5
MV.IN	MILLIVOLT INPUT VALUE	Input List section 6.1
PASS.C	FEATURE PASSCODE	Access List section 5.5
PHASE	CALIBRATION PHASE	Calibration List section 12.4
PRTY	PARITY	Digital Communications List section 11.4
PV.IN	PV INPUT VALUE	Input List section 6.1
PV.OFS	PV OFFSET	Input List section 6.1
REG.AD	DESTINATION ADDRESS	Digital Communications List section 11.2
RETRN	TRANSMITTED PARAMETER	Digital Communications List section 11.2
RNG.HI	RANGE HIGH LIMIT	Input List section 6.1
RNG.LO	RANGE LOW LIMIT	Input List section 6.1
SB.DIR	SENSOR BREAK DIRECTION	Input List section 6.1
SB.TYP	SENSOR BREAK TYPE	Input List section 6.1
UCAL	USER CALIBRATION	Calibration List section 12.4
UNITS	DISPLAY UNITS	Input List section 6.1

No index entries found.

15. Revision History

Rev.	Description	Date	MCO #
New	First release		
A	Second release		
B	Terminals 2A and 2B deleted and 1A and 1B moved where 2A and 2B previously were. The previous 1A and 1B locations are now left blank. References to 2A and 2B removed.	6/2/2014	2133
C	Changes to terminals HE and HF on terminal layout	9/3/2015	2165
D	Update to state the FM relay outputs latching configuration cannot be modified	12/28/2015	2174