



SuperSystems

incorporated



Single Gas Analyzer for H₂

OPERATIONS MANUAL

Super Systems Inc.
7205 Edington Drive
Cincinnati, OH 45249
513-772-0060
Fax: 513-772-9466
www.supersystems.com

Super Systems Inc.

USA Office

Corporate Headquarters:

7205 Edington Drive

Shipping Address:

7245 Edington Drive

Cincinnati, OH 45249

Phone: (513) 772-0060

<http://www.supersystems.com>

Super Systems Europe

Unit E, Tyburn Trading Estate,
Ashold Farm Road, Birmingham

B24 9QG

UNITED KINGDOM

Phone: +44 (0) 121 306 5180

<http://www.supersystemseurope.com>

Super Systems México

Sistemas Superiores Integrales S de RL de CV

Acceso IV No. 31 Int. H Parque Industrial

Benito Juárez

C.P. 76120 Queretaro, Qro.

Phone: +52 442 210 2459

<http://www.supersystems.com.mx>

Super Systems China

No. 369 XianXia Road

Room 703

Shanghai, CHINA

200336

Phone: +86 21 5206 5701/2

<http://www.supersystems.cn>

Super Systems India Pvt. Ltd.

A-26 Mezzanine Floor, FIEE Complex,

Okhla Indl. Area, Phase – 2

New Delhi, India 110 020

Phone: +91 11 41050097

<http://www.supersystemsindia.com>

Single Gas Analyzer (SGA)
Operations Manual

Table of Contents

Introduction.....	5
Oxygen Measurement Option (with Additional Sensor)	5
Specifications.....	5
Single Gas Analyzer (SGA).....	5
Mechanical Diagrams	6
Initial Network Configuration	7
nLocateIP Method	7
Touch Screen Interface.....	8
Main Screen.....	8
Menu Screen	8
Trend Chart	9
Chart Sub Menu.....	11
Instrument Information (Menu Option)	11
Pump Control (Menu Option).....	12
Instrument Configuration (Menu Option)	12
Output Configuration.....	13
Communications (Menu Option).....	14
Alarms Setup.....	15
Output Calibration (Menu Option).....	16
Overview.....	16
Zero Calibration	16
Span Calibration	17
Sensor Calibration (Menu Option)	17
Zero Calibration Procedure	18
Span Calibration Procedure	18
Digital IO Card (Menu Option).....	19
Oxygen Units (Menu Option)	19
Passcodes (Menu Option).....	19
H2 Gas Display Settings	20
Exit Program (Menu Option).....	20
Control Interface via a Web Browser	21
Main	21
Instrument Information.....	22
Sensor Information	23

Single Gas Analyzer (SGA)
Operations Manual

Instrument Configuration.....	24
Output Configuration	25
Output Calibration	26
Sensor Calibration.....	27
Alarms	28
SSI Configuration	29
Read/Write Registers	30
Network Configuration	31
Modbus Registers	32
Replacement Parts	39
Warranty.....	40
Revision History	41
Appendix A – Electrical Diagrams	42

Single Gas Analyzer (SGA) Operations Manual

Introduction

SSI provides single gas analysis technology for use in heat treating and other production environments. This manual covers the following product line used for the analysis of single gas composition:

- Single Gas Analyzer (SGA). The SGA includes a color touch screen and detection cell with intelligent electronics contained in a metal enclosure designed for rugged industrial environments. The SGA is preconfigured for detection of H₂, CO, CO₂, or CH₄, depending on customer needs. Trend charting is available via the touch screen. Control and monitoring are possible with the touch screen interface and Ethernet-based web interface. The SGA also includes onboard datalogging and communications via serial connection, USB, or Ethernet.

Oxygen Measurement Option (with Additional Sensor)

The SGA provides the option of O₂ detection and monitoring with the addition of an external O₂ sensor wired into the unit.

Specifications

Gas Measurement Specifications


H₂ Sensor	
Range	0 – 100%
Accuracy	±0.1%
Resolution	±0.1%
Measurement Method	Thermal Conductivity
O₂ Sensor (Add-On Sensor, Mounted Externally)	
Range	0 - 21%
Accuracy	±0.1%
Measurement Method	Lambda Zirconia

Single Gas Analyzer (SGA)

Response Time	0 – 6 seconds
Power Supply Input Voltage	110VAC or 230VAC
Maximum Operating Temperature	122 °F (50 °C)
Analog Outputs	2 (4-20mA or 0-5 V)
Serial Communications	2 RS485 ports using Modbus RTU, configurable baud rate
Ethernet	1 port
USB	1 Type A port, 1 Type B port

Single Gas Analyzer (SGA) Operations Manual

Mechanical Diagrams

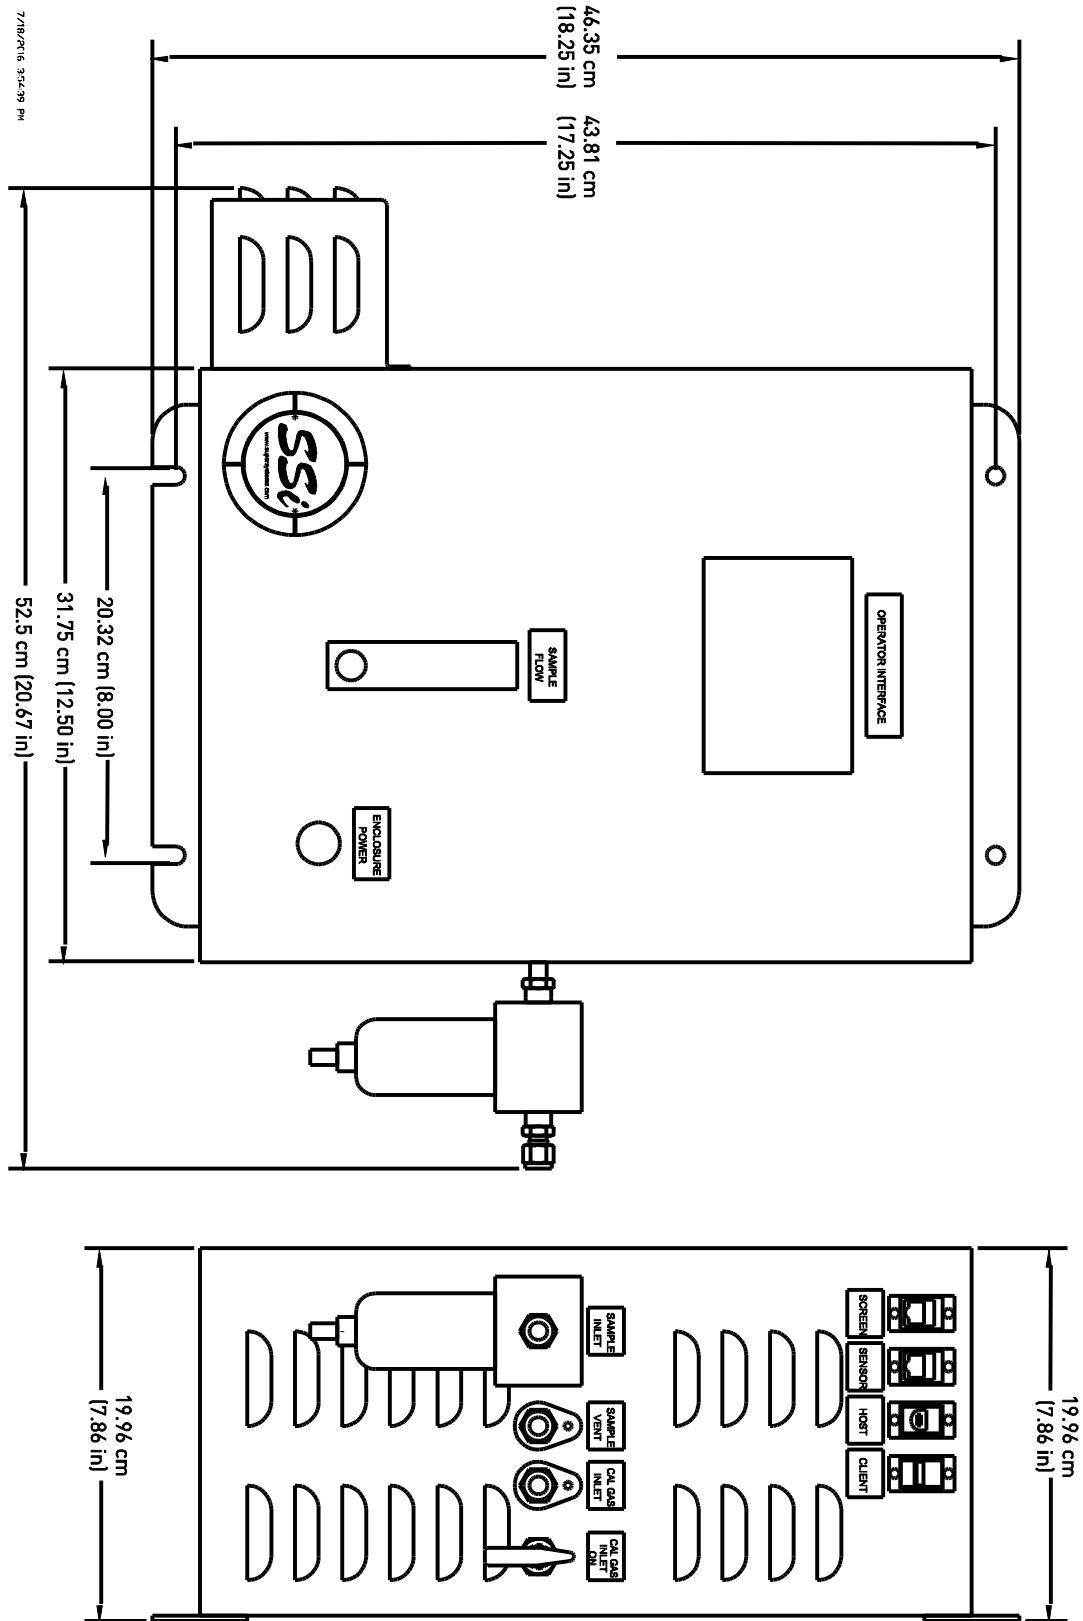

Single Gas Analyzer (SGA) Operations Manual

Initial Network Configuration

This section is intended for use by persons familiar with Ethernet network setup.

In order to work correctly, the unit must be properly configured for the network to which it is connected. To locate the unit's IP address, first connect the unit to an Ethernet network using the appropriate cable.

If you already know the IP address of the web interface, skip to the

The Read/Write Registers page gives access to the underlying Modbus registers of the SGA. This page is primarily intended for testing and troubleshooting purposes.

Please contact SSI before attempting to make any changes to the settings on this page.

Network Configuration section on page 30. The network configuration is described in this section.

The IP address of the unit can be found by using SSI's *nLocateIP* software. This method is described in the following subsection.

nLocateIP Method

Once the unit is connected to the network, you should be able to locate it on the network using SSI's *nLocateIP* software. This program is available from SSI. To use it in locating the unit on the network, follow these steps on a Windows-based PC:

1. Ensure that the unit is connected to the network.

Single Gas Analyzer (SGA) Operations Manual

2. Open the *nLocateIP* program.



Figure 1 - Opening nLocateIP program

3. Once the program opens, click the **Search** button. The program will begin searching for SSi devices connected to the network.

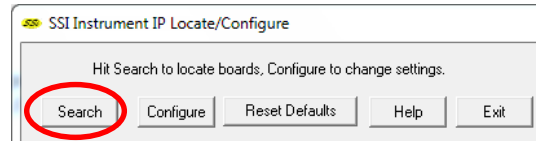


Figure 2 - Search button in nLocateIP

4. Look for identifying text in the list of instruments. The corresponding IP address is the IP address that you will want to use.

Once you have found the IP address, you should be able to complete any additional network configuration using the web interface. See the

The Read/Write Registers page gives access to the underlying Modbus registers of the SGA. This page is primarily intended for testing and troubleshooting purposes.

Please contact SSi before attempting to make any changes to the settings on this page.


Network Configuration section on page 30.

Single Gas Analyzer (SGA) Operations Manual

If you are unable to find the unit in the list of devices, it is possible that a network setting (such as subnet mask) may be different, the unit may be connected to a different network, or the unit may not be powered on. SSi recommends consulting an IT engineer or network administrator. If needed, call SSi at (513) 772-0060.

Touch Screen Interface

Main Screen

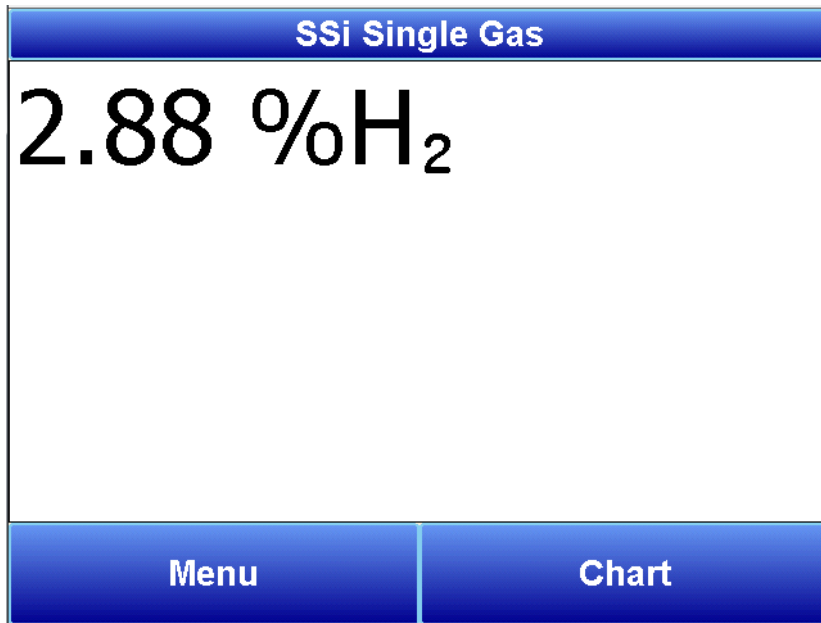

The Main screen shows the current percentage of H₂. From here the user can enter the **Menu** screen or the **Chart** screen.

Menu Screen


Single Gas Analyzer (SGA) Operations Manual



The Menu screen also allows the user to log in to gain access to additional functions. Pressing the **Login** key at the bottom of the screen will allow the user to enter a login user and password. User names and passwords are case sensitive. There are three levels of security for the menu system: **Operator**, **Supervisor**, and **Administrator**. Pressing the **Login** button will allow the user to enter a user name and numeric password to log in. When the menu screen is first displayed, the operator-level menu options are visible. The supervisor menu options will be displayed with the login number 1. The Administrator menu options will be displayed with the login number 2.

The Menu options are described beginning on p.11.

Trend Chart

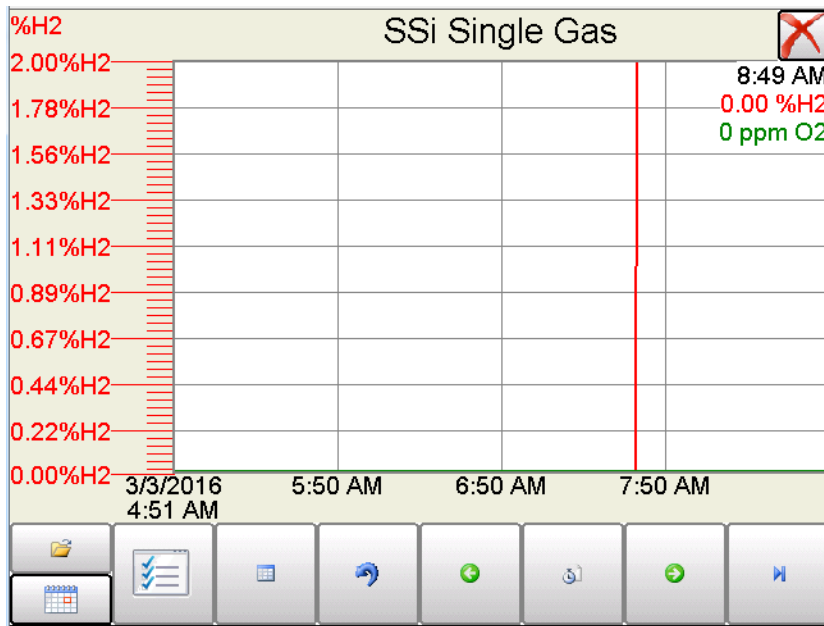

The Trend Chart Display shows between 1 hour and 24 hours of process variable data on the screen and can be scrolled back to view all of the data stored on the hard drive. The vertical timelines change as the time changes on the screen.

Single Gas Analyzer (SGA) Operations Manual


The function buttons run along the bottom of the screen.



The folder button - stores saved templates. A different chart template can be selected here.



The Trend Lines button - will allow the user to select or de-select the trend lines on the trend chart to display. If the checkbox next to each trend line is checked, then that trend line will be displayed.

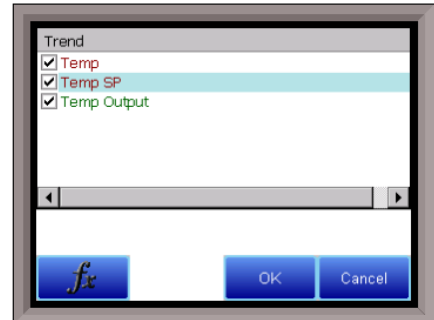

The Datagrid View button - will display a screen with the trend data in a grid format instead of with trend lines. The trend data is shown in 1-minute intervals. Clicking on the **OK** button on this screen will close the screen down and return to the Chart Display screen.



The Refresh button - will refresh the screen's trend data if the screen is not in real-time mode.



The left-pointing green arrow button - will move the chart's view backward in time by the specified chart interval.



The chart interval button - will determine the number of hours displayed on the trend chart. The options are: **1 Hour, 2 Hours, 4 Hours, 8 Hours, 12 Hours, or 24 Hours.**



The right-pointing green arrow button - will move the chart's view forward in time by the specified chart interval.




The Play/Pause button - will put the chart into real-time mode if it is not in real-time mode, or take the chart out of real-time mode if it is. When in real-time mode, the chart will automatically be updated once a minute.

Single Gas Analyzer (SGA) Operations Manual

Chart Sub Menu

There is a sub-menu available by putting a finger or a stylus anywhere on the chart and holding it there for two seconds.

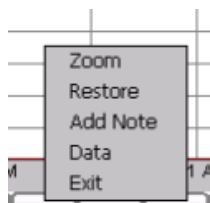

The sub-menu will have the following options available: **Zoom**, **Restore**, **Add Note**, **Data**, and **Exit**.

The **Zoom** option will allow the user to zoom in on a particular part of the screen. Once this has been selected, the user can take a stylus or a finger and create a box around the desired data. Once the user releases the stylus or finger, a zoom is no longer possible, and the user will need to re-select the option from the sub-menu to zoom in again.

The **Restore** option will back out of any zoom options that have been performed and display the chart screen as it initially was.

The **Add Note** option allows the operator to enter a note on the chart, similar to writing on a paper chart. The note shows up when the chart is printed out using the utility software included with the SGA instrumentation. Pressing the **Add Note** option displays a screen where the operator can enter the operator ID or initials and a note. The user has the option to enter a note using the operator interface keyboard, where he or she will be able to type in the note; or the user can use the Signature mode, which will allow them to write a note using a stylus.

The **Data** option will show the trend data as a data grid instead of the trend lines on a chart. This



functionality is exactly the same as if the user pressed the Datagrid View button - from the chart screen.

Exit will close out the sub-menu without selecting an item.

Pressing the red 'X' in the top right-hand corner of the screen will take the user back to the status screen.


Instrument Information (Menu Option)

Instrument Information	
Description:	Single Gas OEM Sens...
Part #	A20831 - CO ₂
Serial #	Main Board xxxxxxxx
Sub Serial #	sub thing1
Main Version #	1.04
Sensor Version #	1.01
Back	

The Instrument Information screen provides basic information about the unit, including **Description**, **Part #**, **Serial #**, **Sub Serial #**, **Main Version #**, and **Sensor Version #**. This information can be useful for troubleshooting purposes.

Single Gas Analyzer (SGA) Operations Manual


Pump Control (Menu Option)

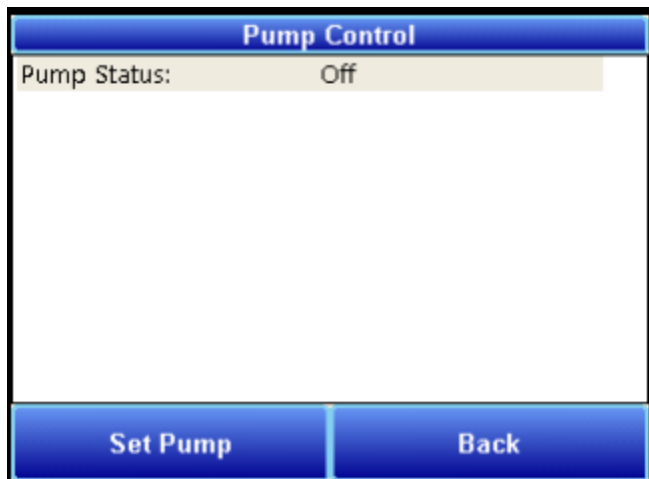

Pump Control	
Pump Status:	Off
Set Pump	Back

The Pump Control screen allows the user to turn the pump on or off. The current pump status will be displayed on the screen. To change the status, tap the **"Set Pump"** button, select **"On"** or **"Off,"** and tap **"Select."** To exit the screen without changing the pump status, tap **"Cancel."**

Instrument Configuration (Menu Option)

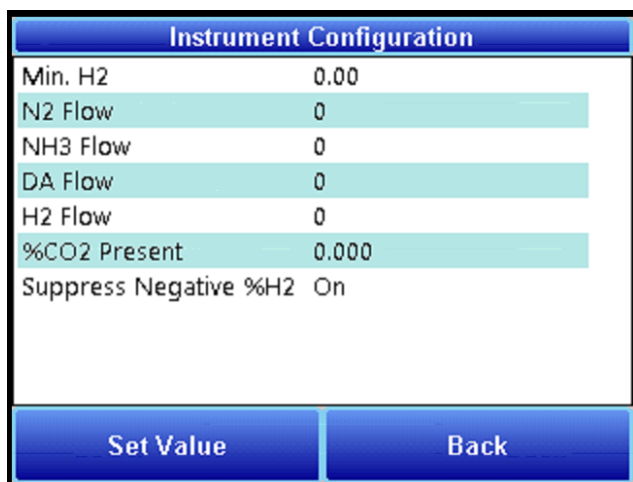

Instrument Configuration	
Min. H2	0.00
N2 Flow	0
NH3 Flow	0
DA Flow	0
H2 Flow	0
%CO2 Present	0.000
Suppress Negative %H2	On
Set Value	Back

The **Instrument Configuration** menu allows the user to set values for various SGA parameters.

- **Min. H2** This reading indicates the point at which anything below will be read as zero for internal calculations.
- **N2 Flow:** The value entered here will be used in nitriding calculations. Enter the applicable N2 flow in your system.
- **NH3 Flow:** The value entered here will be used in nitriding calculations. Enter the applicable NH3 flow in your system.
- **DA Flow:** The value entered here will be used in nitriding calculations. Enter the applicable DA flow in your system.

Single Gas Analyzer (SGA) Operations Manual

- H2 Flow: The value entered here will be used in nitriding calculations. Enter the applicable H2 flow in your system.
- CO2 Pres: [0-10] – Any value entered here will be used in place of the actual CO2 reading for internal calculations. (Zero is the default setting)
- Suppress Negative – When activated, any negative readings will be treated as zero.

To change an item, tap the desired row, then tap “Set Value.” Enter the desired value in the “Input” box and click the “Set Val” button. Your new value will be displayed in the “Current” column.

Output Configuration

Output Configuration: Loop 1	
Source	H2
Zero (%)	0.00
Span (%)	100.00
Range	4-20 mA
Manual (%)	0.00

Edit Loop 1 Loop 2 Back

The SGA has two outputs. These can be configured for **Source**, **Zero Value**, **Span Value**, **Range**, and **Manual**.

The **Source** is the gas that applies to that output.

The **Zero Value** is the value that corresponds to 4mA on a 4-20mA scale. (4-20mA is the default **Range** setting. If **Range** is set to 0-20mA, then the **Zero Value** refers to 0mA.)

The **Span Value** is the value that corresponds to 20mA on a 4-20mA scale. (4-20mA is the default **Range** setting. If **Range** is set to 0-20mA, then the **Span Value** still refers to 20mA.)

Range allows the user to choose between an output signal of 4-20mA (default) and 0-20mA.

Manual allows the user to enter an output value to test the analog output. In order for this option to function, **Source** must be set to **External**.

To change an item, tap the desired row, then tap “Edit.” Enter the desired value in the “Input” box (or make a selection from the dropdown menu) and click the corresponding button. Your new value will be displayed in the “Current” column.

Single Gas Analyzer (SGA)
Operations Manual

Communications (Menu Option)

Communications	
IP Address	192.168.1.210
Mask	255.255.255.0
Gateway	192.168.1.1

Edit

Back

The Communications option allows you to view and change the current IP Address, Mask, and Gateway for the SGA. To change this information, tap to highlight an item, then tap "Edit" and use the keyboard screen to enter desired information.

Do not change these values without consulting your IT professional. Doing so could cause IP conflicts and other network issues.

Single Gas Analyzer (SGA)
Operations Manual

Alarms Setup

Alarms Setup			
Alarm Ty...	Lower Li...	Upper Li...	Action
CO	0	0	None
CO2	0	0	None
CH4	0	0	None
H2	0	0	None
O2	0	0	None
CO2 (high)	0	0	None
IR %C	0	0	None
CO/CO2	0	0	None
CO2/CO2	0	0	None

Set Lower Set Upper Set Action Back

The Alarms option allows you to set lower and upper limits and assign actions to readings for the SGA.

Tap to highlight the desired gas type. Then tap the appropriate buttons to enter a Lower Limit and an Upper Limit. To select an Action, tap "Set Action" to cycle through the available options.

There are four possible actions for the alarms:

- "None" will not energize any relays.
- "AL1" will energize Relay 3;
- "AL2" will energize Relay 4;
- "Both" will energize Relays 3 and 4.

Output Calibration	
Zero/Span:	Zero
Output #	Output1
Measured value (mA)	4.000
Prep for Cal	
<div> <div>Edit</div> <div>Back</div> </div>	

Overview

The Output Calibration screen allows the user to perform a zero/span calibration. The SGA is equipped with two analog outputs. These outputs require calibration to ensure that the mA signal corresponds to a given output value (zero value for the lowest value and span value for the highest value). SSi recommends output calibration be performed on each output at least once per year, or as needed.

To calibrate each output, first make sure that you have a multimeter (or other appropriate testing instrument) available. Then follow these steps.

Zero Calibration

To calibrate the zero/span range for an output:

1. Attach a measuring device to the selected output.
2. Connect the gas to the “Cal Gas Inlet” on the side of the SGA enclosure. It is recommended to let everything (gas and SGA) sit for approximately thirty minutes to allow the temperature to achieve equilibrium.
3. Select “Output Calibration” form the Main Menu.
4. Once this is done, tap to highlight “Zero/Span,” then tap the “Toggle Zero/Span” button to select “Zero.” “Zero” will now be displayed in the Zero/Span row.
5. To select the desired output, tap to highlight “Output#,” then tap the “Toggle Output Number” button to select the appropriate setting. The current value will be displayed in the “Output#” row.
6. Tap to highlight “Prep for Cal” and tap the “Prep for Cal” button.

Single Gas Analyzer (SGA) Operations Manual

7. Let the unit output what it has set for the zero measurement, and note the reading on your attached measuring device.
8. Tap **"Measured value (mA)"** and tap the **"Edit mA"** button.
9. Enter the measured value and tap **"OK."**
10. Then, tap **"Run Cal"** and tap the **"Run Cal"** button.

Span Calibration

To calibrate the span:

1. Use the **"Toggle Zero/Span"** button to select **"Span."**
2. Tap to highlight **"Prep for Cal"** and tap the **"Prep for Cal"** button.
3. Let the unit output what it has set for the span measurement, and note the reading on your attached measuring device.
4. Tap **"Measured value (mA)"** and tap the **"Edit mA"** button.
5. Enter the measured value and tap **"OK."**
6. Then, tap **"Run Cal"** and tap the **"Run Cal"** button.

Sensor Calibration (Menu Option)

BEFORE YOU BEGIN:

Never perform a span calibration without first performing a zero calibration.

The Zero calibration should be performed with a gas that is not measured by the SGA. Ideally this would be pure Nitrogen or Argon.

The concentration of the Span calibration gas should closely resemble the gas that is being measured.

NOTE: Since the accuracy of the calibration gas directly influences the resulting accuracy of the instrument, the highest possible accuracy grade should be obtained. Some gas suppliers refer to this as a "Certified Primary Standard". The high degree of accuracy is not required to obtain nominal values that exactly match the values shown above. The accuracy is required to know the exact composition of the gas in the cylinder. The actual composition will be shown on the bottle when it is delivered.

When flowing calibration gas into the analyzer, turn the pump off. The amount of flow from the gas cylinder should be approximately 1.5 SCFH at no pressure. The gas cylinders will be under high pressure, so it is recommended that a two stage regulator with a low pressure secondary stage be used. It is good practice to begin the flow of gas before attaching the calibration gas to the instrument. This will prevent any high pressure bursts from entering the instrument.

Calibration gases can be obtained from Super Systems, however they can also be obtained from any supplier of custom gases.

Single Gas Analyzer (SGA)
Operations Manual

Zero Calibration Procedure

1. Connect the gas to the “Cal Gas Inlet” on the side of the SGA enclosure. It is recommended to let everything (gas and SGA) sit for approximately thirty minutes to allow the temperature to achieve equilibrium.
2. Select “Sensor Calibration” from the Main Menu.
3. Tap “**Zero/Span**” and use the “**Toggle Zero/Span**” button to select **Zero**.
4. Tap to highlight “**Enter Gas Concentration**” and tap the “**Enter Gas %**” button.
5. Enter the appropriate concentration of the calibration gas (in this case 0% since it is a zero calibration).
6. Begin the flow of gas and allow the readings to come to equilibrium. This occurs when the actual values are not moving in a specific direction, and they display only slight movements up and down. This should take approximately 45 seconds.
7. At this point, tap to highlight “**Run Calibration**” and tap the “**Run Calibration**” button.
8. The Calibration Timer on the screen will count down, and when it reaches zero the Current gas value will adjust to match the Gas concentration.

Span Calibration Procedure

1. First tap “**Zero/Span**” and use the “**Toggle Zero/Span**” button to select **Span**.
2. Tap to highlight “**Enter Gas Concentration**” and tap the “**Enter Gas %**” button.
3. Enter the appropriate concentration of the calibration gas (see note on p.15).
4. Begin the flow of gas and allow the readings to come to equilibrium. This occurs when the actual values are not moving in a specific direction, and they display only slight movements up and down. This should take approximately 45 seconds.
5. At this point, tap to highlight “**Run Calibration**” and tap the “**Run Calibration**” button.
6. The Calibration Timer on the screen will count down, and when it reaches zero the Current gas value will adjust to match the Gas concentration.

Single Gas Analyzer (SGA)
Operations Manual

Digital IO Card (Menu Option)

The screenshot shows a menu titled "Digital IO Card" in a blue header bar. Below the header, the text "Comms Status: 16 responses" is displayed. Underneath, there are two sections: "Outputs:" and "Event Inputs:", each followed by a light blue rectangular area for data entry. At the bottom of the screen, there are three blue buttons labeled "Add Output", "Remove Output", and "Back".

The Digital IO Card menu displays **Communication Status**, **Outputs**, and **Event Inputs**. It also allows the user to set and reset outputs. Tap the **Set Output** button to turn on an output, or tap the **Reset Output** button to turn off an output. Then enter the desired information on the ensuing screen.

Oxygen Units (Menu Option)

Allows the user to choose the display units for O₂. (This is only available on H₂O₂ models.)

Passcodes (Menu Option)

The screenshot shows a menu titled "Passcodes" in a blue header bar. Below the header, there are two entries: "Supervisor Passcode: 1" and "Administrator Passcode: 2". The "Administrator Passcode: 2" entry is highlighted with a light blue background. At the bottom of the screen, there are two blue buttons labeled "Set Passcode" and "Back".

The Passcodes menu allows the user to set Supervisor and Administrator Passcodes. To change the passcodes, tap to highlight the desired access level, then tap "**Set Passcode.**" Enter the new passcode on the ensuing screen and tap "**OK.**"

Single Gas Analyzer (SGA)
Operations Manual

H2 Gas Display Settings

H2 Gas Display Settings	
Show Oxygen:	False
Units:	Percent
Show %DA:	False
Show %NH3:	False
Show Super KN:	False
Show Std. KN:	False

Change

Back

This menu option allows you to adjust the SGA's display options for H2. Simply tap an option to highlight it, then tap "Change" to bring up the available options. Tap to select your desired option, and tap "Select" to save the change.

Exit Program (Menu Option)

This option allows the user to shut down the SGA interface.

Single Gas Analyzer (SGA) Operations Manual

Control Interface via a Web Browser

The SGA can be controlled using the touchscreen or a web browser on your computer. The web browser connects to the unit through an Ethernet connection. The computer you are using and the unit need to be on the same network with the same subnet mask. Contact your IT administrator if you have network setup questions.

Main




Copyright © 2015 Super Systems, Inc.

The Main display shows the current percentage of H₂.

Single Gas Analyzer (SGA) Operations Manual

Instrument Information

 SuperSystems

Oct 15 2019 11:16:41

Super Systems Web Interface


Main	Description:	SGA - H2
Instrument Information	Part #	A20830
Sensor Information	Serial #	OEM190085
Instrument Configuration	Sub Serial #	H2/O2
Output Configuration	Main Version #	1.15
Output Calibration	Sensor Version #	1.03
Sensor Calibration	Web Page Version #	1.09
Alarms		
SSI Configuration		
Read/Write Registers		
Network Configuration		

Copyright © 2015 Super Systems, Inc.

The Instrument Information screen provides basic information about the unit, including **Description**, **Part #**, **Serial #**, **Sub Serial #**, **Main Version #**, **Sensor Version #**, and **Web Page Version #**. This information can be useful for troubleshooting purposes.

Single Gas Analyzer (SGA) Operations Manual

Sensor Information

 SuperSystems		
May 28 2020 14:28:58		
Super Systems Web Interface		
Main	AVdd:	4.972
Instrument Information	Excitation Vdd:	0.901
Sensor Information	Pellistor Vdd:	0.439
Instrument Configuration	Gas Temperature:	86.40 °F
Output Configuration	Amb. Temperature:	88.13 °F
Output Calibration	Zero Vdc:	0.000
Sensor Calibration	Zero Gas Temperature:	0.00 °F
Alarms	Span Vdc:	0.000
SSI Configuration	Span Gas Temperature:	0.00 °F
Read/Write Registers	Span Target %:	0.00%
Network Configuration		

Copyright © 2015 Super Systems, Inc.


The **Sensor Information** page displays information on the following:

- AVdd: This value is the supply voltage for the analog to digital converter that measures the pellistor voltage. This value is typically about 5V.
- Excitation Vdd: This value is the voltage seen across the pellistor bridge. This value should be approximately 0.9V.
- Pellistor Vdd: This value is the voltage present across the sensing pellistor. This voltage, in air, should be approximately half the excitation voltage.
- Gas Temperature: The temperature of the measured gas
- Ambient Temperature: The ambient temperature where the sensor is located.
NOTE: The following options are intended primarily for SSI personnel to assist with troubleshooting procedures.
- Zero Vdc: (voltage direct current) A record of the zero vdc reading from the most recent calibration.
- Zero Gas Temperature: A record of the zero gas temperature reading from the most recent calibration.
- Span Vdc: (voltage direct current) A record of the span vdc reading from the most recent calibration.
- Span Gas Temperature: A record of the span gas temperature reading from the most recent calibration.
- Span Target %: A record of the span target % from the most recent calibration.

Note that each of these values is for diagnostic use only. Call SSI at (513) 772-0060 with questions.

Single Gas Analyzer (SGA) Operations Manual

Instrument Configuration

 SuperSystems

May 28 2020 14:27:40

Super Systems Web Interface

Main

Instrument Information

Sensor Information

Instrument Configuration

Output Configuration

Output Calibration

Sensor Calibration

Alarms

SSI Configuration

Read/Write Registers

Network Configuration

Field	Input	Submit	Current
Set Date/Time		Set Val	
Web Access Code	2	Set Code	2
Min. Gas%	0.00	Set Val	0
N2 Flow	0	Set Val	0
NH3 Flow	0	Set Val	0
DA Flow	0	Set Val	0
H2 Flow	0	Set Val	0
CO2 Pres.	0	Set Val	0
Sup Neg	0	Set Val	0

Copyright © 2015 Super Systems, Inc.

The **Instrument Configuration** page allows you to set values for the following information:

- Set Date/Time: This option, when pressed, will sync the current time of the main board to the computer on which the web interface is running.
- Web Access Code: This allows you to set the required passcode to access the web interface.
- Min. Gas %: This reading indicates the point at which anything below will be read as zero for internal calculations.
- N2 Flow: The value entered here will be used in nitriding calculations. Enter the applicable N2 flow in your system.
- NH3 Flow: The value entered here will be used in nitriding calculations. Enter the applicable NH3 flow in your system.
- DA Flow: The value entered here will be used in nitriding calculations. Enter the applicable DA flow in your system.
- H2 Flow: The value entered here will be used in nitriding calculations. Enter the applicable H2 flow in your system.
- CO2 Pres: (0-10) – Any value entered here will be used in place of the actual CO2 reading for internal calculations. (Zero is the default setting)
- Suppress Negative – When activated, any negative readings will be treated as zero.

Single Gas Analyzer (SGA) Operations Manual

Output Configuration

May 28 2020 15:14:12 Super Systems Web Interface

Field	Input	Submit	Current
Loop 1			
Source	H2	Set Source	H2
Zero (%)	0.00	Set Zero	0.00
Span (%)	100.00	Set Span	100.00
Range	4-20 mA	Set Mode	4-20 mA
Manual (%)	0.00	Set Manual	0.00
Loop 2			
Source	H2	Set Source	H2
Zero (%)	0.00	Set Zero	0.00
Span (%)	100.00	Set Span	100.00
Range	4-20 mA	Set Mode	4-20 mA
Manual (%)	0.00	Set Manual	0.00

Copyright © 2015 Super Systems, Inc.

The Output Configuration screen allows you to adjust output parameters for loops 1 and 2.

For each loop, the following parameters can be adjusted:

- Source: A selected source: External or NDIR Gas.
- Zero (%): The % output at the lowest end of the applicable range.
- Span (%): The % output at the highest end of the applicable range.
- Range: The output mode: 4-20 mA or 0-20 mA.
- Manual (%): A %Output entered manually.

Use the applicable “Set” button to set each parameter (for example, use “Set Source” to set the source).

Single Gas Analyzer (SGA) Operations Manual

Output Calibration

The Output Calibration screen allows the user to perform a zero/span calibration. The SGA is equipped with two analog outputs. These outputs require calibration to ensure that the mA signal corresponds to a given output value (zero value for the lowest value and span value for the highest value). SSI recommends output calibration be performed on each output at least once per year, or as needed.

To calibrate each output, first make sure that you have a multimeter (or other appropriate testing instrument) available. Connect the gas to the “Cal Gas Inlet” on the side of the SGA enclosure and open the valve. It is recommended to let everything (gas and SGA) sit for approximately thirty minutes to allow the temperature to achieve equilibrium.

(Never perform a span calibration without first performing a zero calibration.)

1. Select the output value that you wish to calibrate (Zero Output 1 or Zero Output 2).
2. Press “Prep for Cal” to enter calibration mode.
3. Ensure that the output signal is being sent for the span or zero value (whichever you are calibrating for).
4. With a multimeter, measure the mA value at the output. Enter that value in the “Entered Measured value” field and press “Calibrate”.
5. Repeat the process above for the appropriate Span Output.

SuperSystems

May 28 2020 15:14:31

Super Systems Web Interface

Main

Instrument Information

Sensor Information

Instrument Configuration

Output Configuration

Output Calibration

Sensor Calibration

Alarms

SSI Configuration

Read/Write Registers

Network Configuration

Zero Output 1 ☒

Span Output 1 ☐

Zero Output 2 ☐

Span Output 2 ☐

Enter Measured value (in mA): 4.000

Prep for Cal

Copyright © 2015 Super Systems, Inc.

Figure 3 - Output Calibration Page

Single Gas Analyzer (SGA) Operations Manual

Sensor Calibration

To ensure accurate readings, the gas sensor must be calibrated at the low end and high end of the measured gas composition range. SSI recommends calibration be performed at least once per year, or as needed.

Connect the gas to the “Cal Gas Inlet” on the side of the SGA enclosure and open the valve. It is recommended to let everything (gas and SGA) sit for approximately thirty minutes to allow the temperature to achieve equilibrium.

To perform a sensor calibration, make sure that the system is set up to flow both zero gas (with 0% of the gas the sensor is designed to detect) and span gas when needed. The gases should be “Certified Primary Standards” or equivalent accuracy. Then follow these steps.

1. Note the percentages of the sensor gas in each gas source (zero and span).
2. Ensure that the system is purged of any latent gas.
3. Flow the zero gas. Wait two minutes, and then enter the target gas concentration in the “Enter gas concentration” field.
4. Press “Calibrate”. A Calibration Timer will count down.
5. Once the Calibration Timer has counted down, the zero value will be calibrated.

NOTE: The remaining steps for the span gas will be very similar to the steps performed for the zero gas calibration.

6. Ensure that the system is purged of any latent gas.
7. Flow the span gas. Wait two minutes, and then enter the target gas concentration in the “Enter gas concentration” field.
8. Press “Calibrate”. A Calibration Timer will count down.
9. Once the Calibration Timer has counted down, the span value will be calibrated.

SuperSystems

May 28 2020 14:26:49

Super Systems Web Interface

Main

Instrument Information

Sensor Information

Instrument Configuration

Output Configuration

Output Calibration

Sensor Calibration

Alarms

SSI Configuration

Read/Write Registers

Network Configuration

Zero ☒

Span ☐

Enter gas concentration (%):

Calibrate

Gas Value: 16.14 %H2


Calibration Timer: 0

Copyright © 2015 Super Systems, Inc.

Figure 4 - Sensor Calibration Page

Single Gas Analyzer (SGA) Operations Manual

Alarms

 SuperSystems

May 28 2020 15:23:45

Super Systems Web Interface

Main

Instrument Information

Sensor Information

Instrument Configuration

Output Configuration

Output Calibration

Sensor Calibration

Alarms

SSI Configuration

Read/Write Registers

Network Configuration

Type	Lower Limit	Upper Limit	Action	Submit
H2	0.00%	0.00%	None	
	<input type="text" value="0.00"/>	<input type="text" value="0.00"/>	None ▾	<input type="button" value="Submit"/>
DA	0%	0%	None	
	<input type="text" value="0"/>	<input type="text" value="0"/>	None ▾	<input type="button" value="Submit"/>
NH3	0.00%	0.00%	None	
	<input type="text" value="0.00"/>	<input type="text" value="0.00"/>	None ▾	<input type="button" value="Submit"/>
Kn	0.00	0.00	None	
	<input type="text" value="0.00"/>	<input type="text" value="0.00"/>	None ▾	<input type="button" value="Submit"/>

Copyright © 2015 Super Systems, Inc.

The Alarms page allows you to set lower and upper limits and assign actions to readings for the sensor.

For the desired gas type, enter a Lower Limit, an Upper Limit, select an Action from the dropdown menu, and click "Submit" to save that information.

When connected to a digital card, if desired, one of the two relays (or both simultaneously) can be energized. There are four possible actions for the alarms:

- "None" will not energize any relays.
- "AL1" will energize Relay 3;
- "AL2" will energize Relay 4;
- "Both" will energize Relays 3 and 4.

Single Gas Analyzer (SGA) Operations Manual


SSI Configuration

IMPORTANT!

It is highly recommended that changes on this page be made only in consultation with SSI technical personnel. Call (513) 772-0060 for more information.

The SSI Configuration page contains fields that can be adjusted to change various strings contained in memory and also change certain functions.

- Main Serial: The serial number of the main board.
- Sub Serial: The serial number of the sensor board.
- En. Card: Enable Card. This option allows a digital I/O card to be added.
- Relay Input: This option allows a value to be written to enable relays. Possible values are 0 to 255, and they are binary values corresponding to one of the eight relays.
- Set FD: This option resets the sensor board to factory defaults.
- Set Reg: This option allows a value to be written to the main board. The first value is the register location that will be written to; the second value is the value that will be written to the specified register location. The "Set Val" button, when pressed, will commit the entered value to the specified register location.

 SuperSystems

May 28 2020 14:25:58Super Systems Web Interface

Main

Instrument Information

Sensor Information

Instrument Configuration

Output Configuration

Output Calibration

Sensor Calibration

Alarms

SSI Configuration

Read/Write Registers

Network Configuration


Field	Input	Submit	Current
Main Serial	<input type="text" value="OEM1901"/>	<input type="button" value="Set Val"/>	OEM190117
Sub Serial	<input type="text" value="H2/O2"/>	<input type="button" value="Set Val"/>	H2/O2
En. Card		<input type="button" value="Set Val"/>	On
Relay Input	<input type="text" value="0"/>	<input type="button" value="Set Val"/>	0
Set FD		<input type="button" value="Submit"/>	0
Set Reg	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="button" value="Set Val"/>
H2 Sel.		<input type="button" value="Set Val"/>	OEM
<div><input checked="" type="checkbox"/> H2 <input type="checkbox"/> DA <input type="checkbox"/> NH3 <input type="checkbox"/> Super Kn <input type="checkbox"/> O2</div> <div><input type="checkbox"/> Kn</div>			
<input type="button" value="Update Settings"/>			

Copyright © 2015 Super Systems, Inc.

Figure 5 - SSI Configuration Page

Single Gas Analyzer (SGA) Operations Manual

Read/Write Registers

 SuperSystems

May 28 2020 15:16:17

Super Systems Web Interface

Main

Instrument Information

Sensor Information

Instrument Configuration

Output Configuration

Output Calibration

Sensor Calibration

Alarms

SSI Configuration

Read/Write Registers

Network Configuration

0	1	2	3	4
117	1	11	0	5
5	6	7	8	9
1	5	0	5	0

Field	Input	Submit	Current
Read Offset	<input type="text" value="0"/>	<input type="button" value="Set Val"/>	0
Write Offset	<input type="text" value="0"/>	<input type="button" value="Set Val"/>	0
Write Number Regs	<input type="text" value="0"/>	<input type="button" value="Set Val"/>	0
Submit Write		<input type="button" value="Submit"/>	

<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>

Copyright © 2015 Super Systems, Inc.

The Read/Write Registers page gives access to the underlying Modbus registers of the SGA. This page is primarily intended for testing and troubleshooting purposes.

Please contact SSI before attempting to make any changes to the settings on this page.

Single Gas Analyzer (SGA) Operations Manual

Network Configuration

The Network Configuration page allows you to view network settings and change certain settings as well. SSi recommends consulting an IT engineer or network administrator before changing any of these settings.

The screenshot shows the 'Board Configuration' page of the Super Systems Web Interface. The page has a dark blue header with the date 'May 28 2020 15:15:44' and the title 'Super Systems Web Interface'. On the left is a vertical navigation menu with options: Main, Instrument Information, Sensor Information, Instrument Configuration, Output Configuration, Output Calibration, Sensor Calibration, Alarms, SSI Configuration, Read/Write Registers, and Network Configuration (which is highlighted). The main content area is titled 'Board Configuration' and includes a description: 'This page allows the configuration of the board's network settings.' Below this is a red warning box that says 'CAUTION: Incorrect settings may cause the board to lose network connectivity.' The configuration form contains the following fields: MAC Address (80:1F:12:AD:F7:7E), Host Name (MCHPBOARD), a checkbox for 'Enable DHCP' (unchecked), IP Address (192.168.1.210), Gateway (192.168.1.1), Subnet Mask (255.255.255.0), Primary DNS (192.168.1.1), and Secondary DNS (0.0.0.0). A 'Save Config' button is at the bottom of the form. The footer of the page reads 'Copyright © 2015 Super Systems, Inc.'

Figure 6 - Network/Board Configuration Page

The first two fields on the page show the MAC address and Host Name. The MAC address should not be changed. The Host Name can be changed as needed.

To enable dynamic assignment of IP addresses, click on the **Enable DHCP** checkbox. Dynamic assignment means that the unit's IP address on the network will be assigned automatically, preventing IP address conflicts. The network must support dynamic IP assignment in order for this to work.

If Enable DHCP is not checked, IP and other settings can be changed manually. These settings should be verified with your network administrator before being changed. Failure to do so could result in IP conflicts and other network issues.

Single Gas Analyzer (SGA)
Operations Manual

Modbus Registers

The following table shows the Modbus registers for the sensor module. The name of the register, address location, and description are provided.

Register Name	Register Location	Description
VERSION_NUMBER	0	current version number of the firmware
UART_1_MODE	1	0 = slave, 1 = Sensor Driver
UART_1_BAUD_RATE	2	Baud Rate: 0=1200,...,5=19200,...10=115200.
UART_2_MODE	3	0 = slave, 1 = Sensor Driver
UART_2_BAUD_RATE	4	Baud Rate: 0=1200,...,5=19200,...10=115200.
UART_3_MODE	5	0 = slave, 1 = Sensor Driver
UART_3_BAUD_RATE	6	Baud Rate: 0=1200,...,5=19200,...10=115200.
UART_4_MODE	7	0 = slave, 1 = Sensor Driver
UART_4_BAUD_RATE	8	Baud Rate: 0=1200,...,5=19200,...10=115200.
UART_5_MODE	9	0 = slave, 1 = Sensor Driver
UART_5_BAUD_RATE	10	Baud Rate: 0=1200,...,5=19200,...10=115200.
BOARD_ADDR	14	Board modbus address (important for slave only)
MODEL_NUM	15	MODEL number Map as reg 900
SET_FACT_DEF	16	23205 = Full Defaults, 23206 = H2 Defaults, 23207 = Loop 1 Defaults, 23208 = Loop 2 Defaults
DEGREE_REG	17	0 = °F, 1 = °C, 2 = °R, 3 = K
CUR_LOOP_CAL_REG	18	Calibration state. 0 = normal, 1 = prep zero, 2 = store zero, 3 = prep span, 4 = store span
CUR_LOOP_CAL_CHN	19	Calibration channel
CUR_LOOP_CAL_VAL	20	Cal value. 20.12 mA would be 20120

Single Gas Analyzer (SGA)
Operations Manual

Register Name	Register Location	Description
CUR_LOOP_TARGET_VALUE	22	Actual request value
CUR_LOOP_ZERO_TO_TWENTY	24	0-20 mA enable
CUR_LOOP_SOURCE	26	0 = H2, 1 = DA, 2 = NH3, 3 = KN, 4 = External, 5 = Standard Kn, 6 = NDIR gas
CUR_LOOP_ZERO	28	Zero value. This value equates to either 4 mA or 0 mA
CUR_LOOP_SPAN	30	Span value. This value equates to either 20 mA
CUR_LOOP_MANUAL	32	If manual mode is set, then this register controls (0-20000)
INST_PV_MODE	34	0 = H2, 1 = DA, 2 = NH3, 3 = KN, 4 = Standard Kn, 5 = NDIR single gas
PV_VARIABLE	35	Actual process variable.
H2_SELECTION	36	0 = Single gas OEM, 1 = In-Situ Sensor
DISP_OPT	37	Display option bitmap: bit 0 = H2, 1 = DA, 2 = NH3, 3 = Super KN, 4 = Standard KN
SER_NUM_REG	444	actual mapping from Advantech
MB_SET_TIME_WRITE	506	1 = SNTP server write, 2 = manual write
MB_SET_TM_YEAR	507	set year
MB_SET_TM_MON	508	set month
MB_SET_TM_MDAY	509	set day of month
MB_SET_TM_WDAY	510	set day of week, 0 = Sunday
MB_SET_TM_HOUR	511	set hour
MB_SET_TM_MIN	512	set minute
MB_SET_TM_SEC	513	set second
MB_TM_YEAR	514	year
MB_TM_MON	515	month
MB_TM_MDAY	516	day of month
MB_TM_WDAY	517	day of week, 0 = Sunday

Single Gas Analyzer (SGA)
Operations Manual

Register Name	Register Location	Description
MB_TM_HOUR	518	hour
MB_TM_MIN	519	minute
MB_TM_SEC	520	second
MB_COMP_TIME_YEAR	580	compile year
MB_COMP_TIME_MON	581	compile month
MB_COMP_TIME_MDAY	582	compile day of month
MB_COMP_TIME_WDAY	583	compile day of week, 0 = Sunday
MB_COMP_TIME_HOUR	584	compile hour
MB_COMP_TIME_MIN	585	compile minute
MB_COMP_TIME_SEC	586	compile second
MODEL_NUM_OLD	900	MODEL number
RESET_FACT_DEFAULTS	909	Resets everything to factory settings
MB_IP_ADDR	914	IP Address
MB_IP_MASK	918	Subnet Mask
MB_IP_GTWY	922	Gateway
SENSOR_COMM_STATUS_REG	1100	H2O2 comm status (0-16)
SENSOR_N2_FLOW	1101	N2 flow
SENSOR_NH3_FLOW	1102	NH3 flow
SENSOR_DA_FLOW	1103	DA flow
SENSOR_H2_FLOW	1104	H2 Flow
SENSOR_PV_MODE	1105	Process variable (0 = H2, 1 = DA, 2 = NH3, 3 = Kn, 4 = Standard Kn)
SENSOR_INPUT_TYPE_REG	1106	Input for voltage inputs
SENSOR_MIN_H2	1108	minimum H2 value
SENSOR_CO2_PRESENT	1109	concentration of CO2 present. Important for H2 measurement only
SENSOR_PV_REMOVE_NEGATIVE	1110	Makes any negative number zero
SENSOR_GEN_QUEUE_ENABLE	1150	Allows for a generic write

Single Gas Analyzer (SGA)
Operations Manual

Register Name	Register Location	Description
SENSOR_GEN_QUEUE_START	1151	Start of write. E.g., register 45.
SENSOR_GEN_QUEUE_ADDRESS	1152	Address of board to write to.
SENSOR_GEN_QUEUE_NUM_WORDS	1153	Number of words to write down up. Up to 30
SENSOR_GEN_QUEUE_BLOCK	1154	write up to 30 words
SENSOR_READ_REGISTERS	1200	just designates where to start writing
MB_READ_VERSION_NUMBER	1200	current version number of the firmware
MB_READ_PELLISTOR_AVDD	1201	A/D analog voltage supply
MB_READ_PELLISTOR_EXCV	1202	Pellistor bridge excitation voltage
MB_READ_PELLISTOR_VDC	1203	Pellistor voltage
MB_READ_PELLISTOR_NA	1204	Pellistor Normalized Absorbance
MB_READ_PERC_H2	1205	H2 x 10000
MB_READ_PER_H2_MANT	1206	H2 mantissa
MB_READ_PER_H2_EXP	1207	H2 exponent
MB_READ_PER_DA	1208	DA value
MB_READ_PER_NH3	1209	NH3 value
MB_READ_PER_SUPER_KN	1210	Super Kn
MB_READ_STANDARD_KN	1211	Standard Kn

MB_READ_PROC_VAR	1212	Process variable
MB_READ_GAS_TEMP	1213	Gas temperature
MB_READ_BOARD_ADDR	1214	Board modbus address (important for slave only)
MB_READ_MODEL_NUM	1215	MODEL number Map as reg 900
MB_READ_SET_FACT_DEF	1216	23205 = Full Defaults
MB_READ_DEGREE_REG	1217	Sets the unit used to display temperature.
MB_READ_N2_FLOW	1218	N2 flow
MB_READ_NH3_FLOW	1219	NH3 flow

Single Gas Analyzer (SGA)
Operations Manual

MB_READ_DA_FLOW	1220	DA flow
MB_READ_H2_FLOW	1221	H2 Flow
MB_READ_PV_MODE	1222	Process variable (0 = H2, 1 = DA, 2 = NH3, 3 = Kn, 4 = Standard Kn)
MB_READ_INPUT_TYPE_REG	1223	Input for voltage inputs
MB_READ_MIN_H2	1225	minimum H2 value
MB_READ_CO2_PRESENT	1226	Amount of CO2 present up to 10%.
MB_READ_PV_REMOVE_NEG	1227	Remove negative number
MB_READ_SET_TAPS_REG	1228	Sets the digital trim pot
MB_READ_UART_1_BAUD_RATE	1229	Baud Rate: 0=1200,...,5=19200,...10=115200.
MB_READ_UART_2_BAUD_RATE	1230	Baud Rate: 0=1200,...,5=19200,...10=115200.
MB_READ_PV_FP	1231	Process variable in floating point
MB_READ_PELLISTOR_DIAG	1233	Pellistor Diagnostics
MB_READ_AMBIENT_TEMP	1234	Ambient temperature
MB_READ_CJ_TEMP_REG	1235	Cold junction temperature
MB_READ_AD_RAW_VDC	1237	Raw VDC
MB_READ_GAIN_REG	1239	Gain
MB_READ_AD_SCALED_VDC	1241	Scaled VDC
MB_READ_TC_PROC_VAR	1243	TC process variable
MB_READ_PERC_O2	1245	Based on Nernst equation
MB_READ_PERC_O_DP	1246	decimal point for O2
MB_READ_PERC_O2_FP	1247	floating point value for O2 (w registers)
MB_READ_LAMBDA_TEMP	1249	Typically 800F
MB_READ_LAMBDA_CNV_MV_EN	1250	Convert mV to probe mV
MB_READ_AMB_PRESSURE_REG	1251	Ambient pressure (absolute)
MB_READ_GAS_PRESSURE_REG	1252	Gas pressure (absolute)
MB_READ_NDIR_GAS_SELECTION	1253	[0-7]. TBD
MB_READ_NDIR_GAS_VPP	1254	Peak-peak voltages

Single Gas Analyzer (SGA)
Operations Manual

MB_READ_NDIR_GAS_VPP_SF	1258	Peak-peak voltages. No high/low values
MB_READ_NDIR_GAS_VPP_FIR	1262	Peak-peak voltages FIR filtered
MB_READ_NDIR_GAS_NA	1266	Gas Normalized absorbance
MB_READ_NDIR_GAS_NA_TC	1269	Gas Normalized absorbance, temperature compensated
MB_READ_NDIR_GAS_CONC	1272	Gas concentration
MB_READ_NDIR_GAS_CONC_DP	1275	Gas concentration decimal point
MB_READ_NDIR_GAS_CONC_FP	1278	Gas concentration floating point
MB_READ_CAL_ENABLE_REG	1284	enables a calibration
MB_READ_CAL_REQUEST_REG	1285	CJ cal or zero/span voltage cal
MB_READ_CAL_RANGE_REG	1286	Calibration Range register. Sets the voltage gain for a calibration.
MB_READ_CAL_CHANNELS_REG	1287	bitmap of channels to be calibrated
MB_READ_CAL_VALUE_REG	1288	Calibration value
MB_READ_CAL_TIMER_REG	1293	First of 5 calibration timers
MB_READ_CAL_PROGRESS_REG	1294	0 = no calibration, 1 = calibration in progress
MB_READ_CAL_ERROR_REG	1295	First of 5 calibration error calculations
MB_DIGIO_OUTPUT_SET	1600	Bitmap that sets the output of a digital I/O card
MB_DIGIO_COMM_STATUS_REG	1601	Communication status for digital I/O card
MB_DIGIO_VERSION_NUMBER	1610	current version number of the firmware
MB_DIGIO_UART_1_MODE	1611	Determines mode: modbus slave = 0, modbus master = 1
MB_DIGIO_UART_1_BAUD_RATE	1612	Baud Rate.
MB_DIGIO_UART_2_MODE	1613	Determines mode: modbus slave = 0, modbus master = 1
MB_DIGIO_UART_2_BAUD_RATE	1614	Baud Rate.
MB_DIGIO_BOARD_ADDR	1615	Board modbus address (important for slave only)

Single Gas Analyzer (SGA)
Operations Manual

MB_DIGIO_MODEL_NUM	1616	MODEL number Map as reg 900
MB_DIGIO_RESET_FACT_DEFAULTS	1618	SFD 23205 sets factory defaults Map as reg 909
MB_DIGIO_UART_3_MODE	1619	Determines mode: modbus slave = 0, modbus master = 1
MB_DIGIO_UART_3_BAUD_RATE	1620	Baud Rate. 0=1200 ,..., 10=115200
MB_DIGIO_SER_NUM_0	1621	Start of Serial number
MB_DIGIO_SER_NUM_1	1622	serial number 1
MB_DIGIO_SER_NUM_2	1623	serial number 2
MB_DIGIO_SER_NUM_3	1624	serial number 3
MB_DIGIO_SER_NUM_4	1625	serial number 4
MB_DIGIO_SER_NUM_5	1626	serial number 5
MB_DIGIO_SER_NUM_6	1627	serial number 6
MB_DIGIO_SER_NUM_7	1628	serial number 7
MB_DIGIO_SER_NUM_8	1629	serial number 8
MB_DIGIO_SER_NUM_9	1630	serial number 9
MB_DIGIO_EVENT_IN_CP	1636	Copy of Event Input
MB_DIGIO_EVENT_OUT_ACT_CP	1637	Actual Output
MB_DIGIO_EVENT_OUT_SP_CP	1638	Copy of Output setpoint
SENSOR_SUB_SERIAL_NUM	1700	serial number of sensor board

Single Gas Analyzer (SGA)
Operations Manual

Replacement Parts

Part	Part Number
Fitting, KF-16 Adapter, 1/8 Female NPT	34699
Fitting, KF-16 Adapter, Clamp Assembly	34700
Terminal Block, Pluggable 2-Position, Plug	33312
Terminal Block, Pluggable 6-Position	33305
Terminal Block, Pluggable 4-Position, Vertical	33353
Terminal Block, Pluggable 3-Position	33310
Bowl Filter	37050
Filter	37051
Power Supply	31135
Flow Meter	36094
Touch Screen	31296
Circuit Board - Digital I/O	31628
Stylus	31295
Sensors	
Hydrogen Sensor, Flow-Through	A20830
Oxygen Sensor, 4-Wire Analog	31435

Warranty

Limited Warranty for Super Systems Products:

The Limited Warranty applies to new Super Systems Inc. (SSI) products purchased direct from SSI or from an authorized SSI dealer by the original purchaser for normal use. SSI warrants that a covered product is free from defects in materials and workmanship, with the exceptions stated below.

The limited warranty does not cover damage resulting from commercial use, misuse, accident, modification or alteration to hardware or software, tampering, unsuitable physical or operating environment beyond product specifications, improper maintenance, or failure caused by a product for which SSI is not responsible. There is no warranty of uninterrupted or error-free operation. There is no warranty for loss of data—you must regularly back up the data stored on your product to a separate storage product. There is no warranty for product with removed or altered identification labels. SSI DOES NOT PROVIDE ANY OTHER WARRANTIES OF ANY KIND, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF IMPLIED WARRANTIES, SO THIS LIMITATION MAY NOT APPLY TO YOU. SSI is not responsible for returning to you product which is not covered by this limited warranty.

If you are having trouble with a product, before seeking limited warranty service, first follow the troubleshooting procedures that SSI or your authorized SSI dealer provides.


SSI will replace the PRODUCT with a functionally equivalent replacement product, transportation prepaid after PRODUCT has been returned to SSI for testing and evaluation. SSI may replace your product with a product that was previously used, repaired and tested to meet SSI specifications. You receive title to the replaced product at delivery to carrier at SSI shipping point. You are responsible for importation of the replaced product, if applicable. SSI will not return the original product to you; therefore, you are responsible for moving data to another media before returning to SSI, if applicable. Data Recovery is not covered under this warranty and is not part of the warranty returns process. SSI warrants that the replaced products are covered for the remainder of the original product warranty or 90 days, whichever is greater.

Single Gas Analyzer (SGA)
Operations Manual

Revision History

Rev.	Description	Date	MCO #
New	Initial release	6/5/2020	2291

Appendix A – Electrical Diagrams

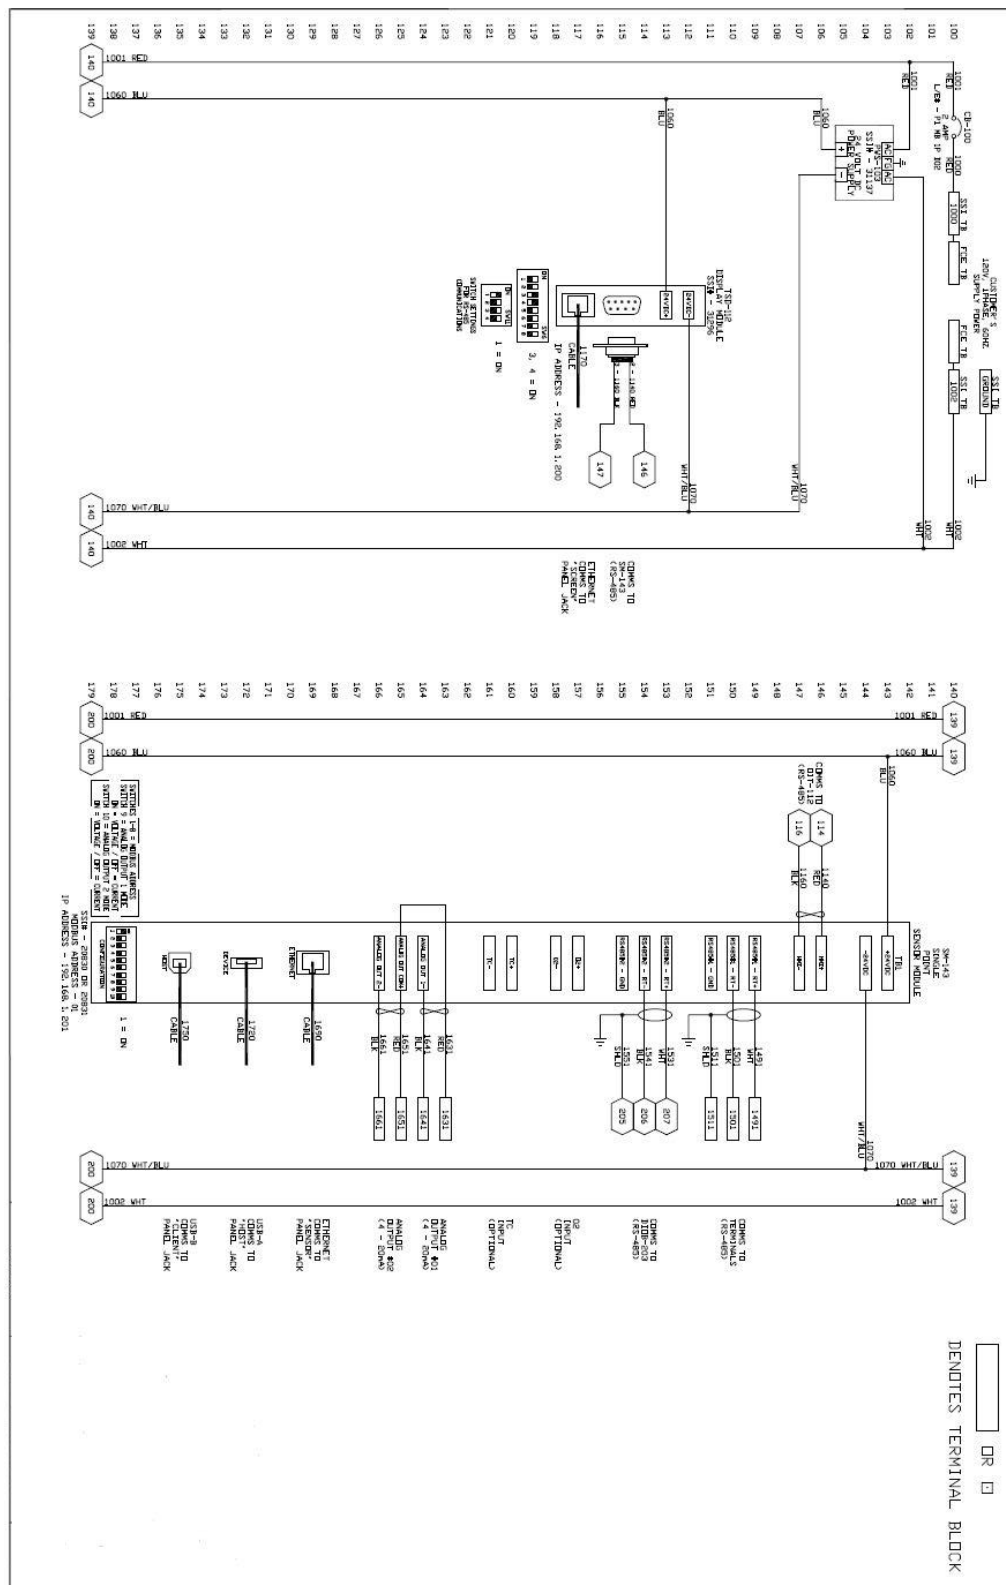

Super Systems Inc.

